



Central Electrical Box Position (In Cabin, Under Steering Wheel)

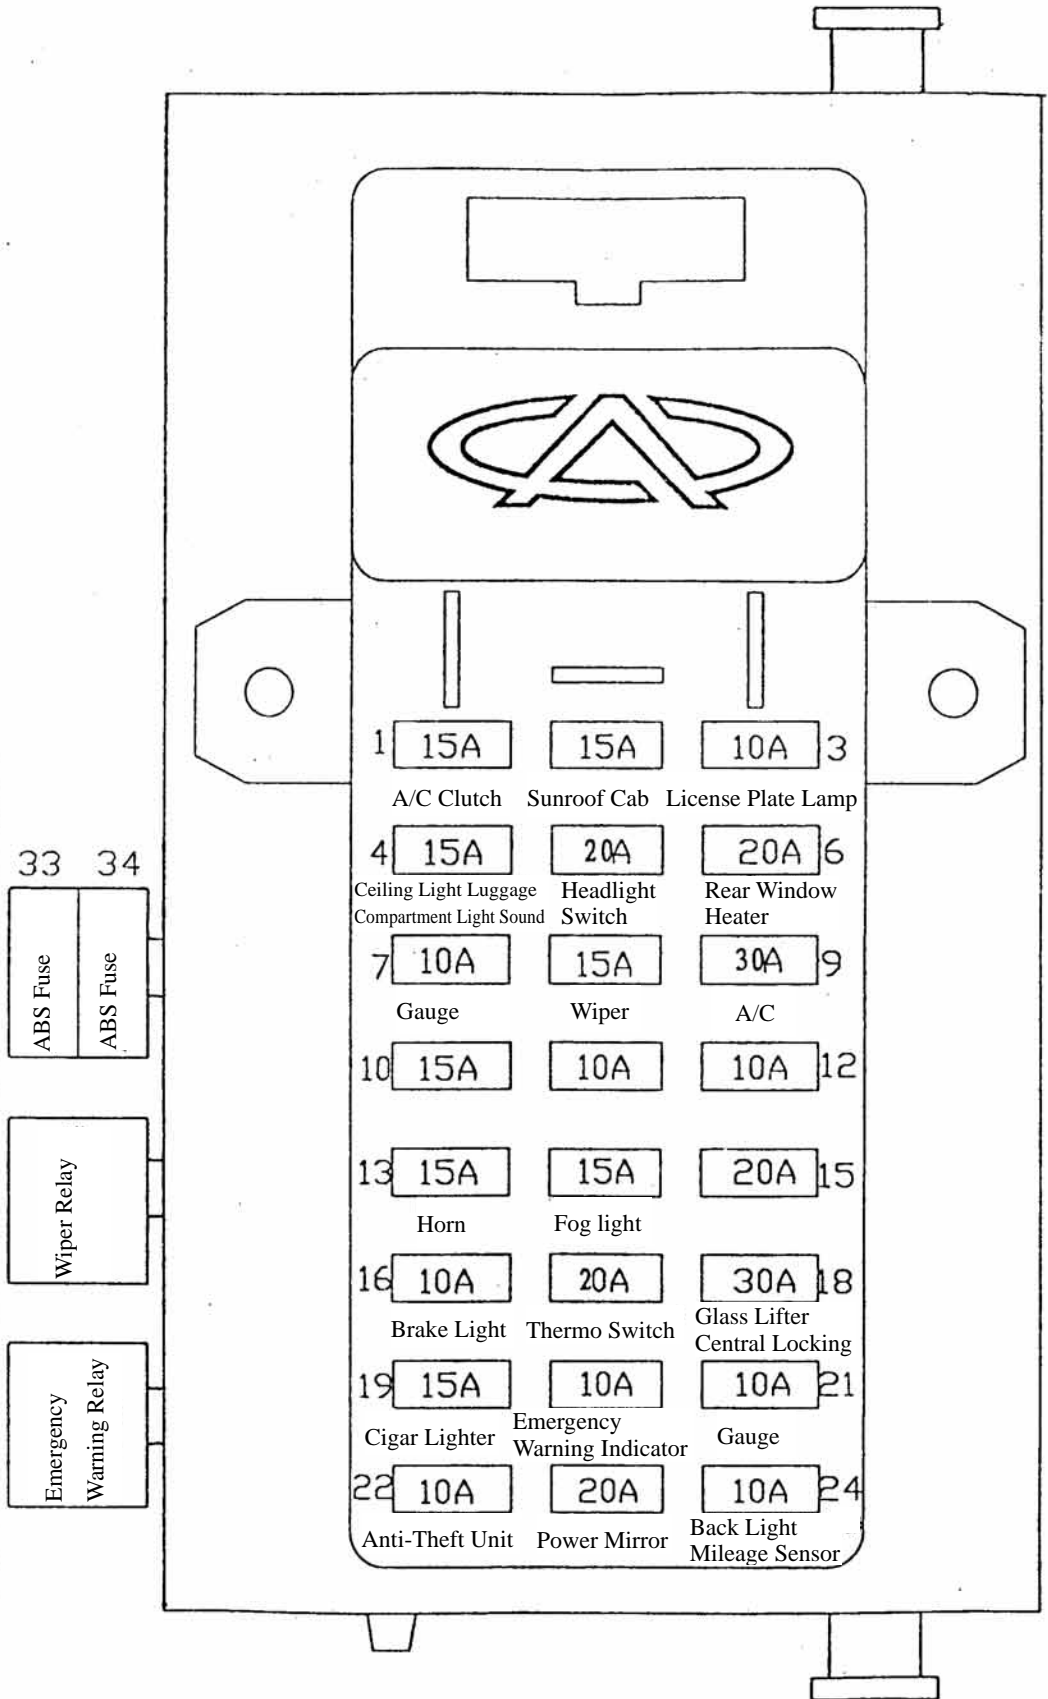


Central Electrical Box Fuse position (In Cabin, Under Steering Wheel)

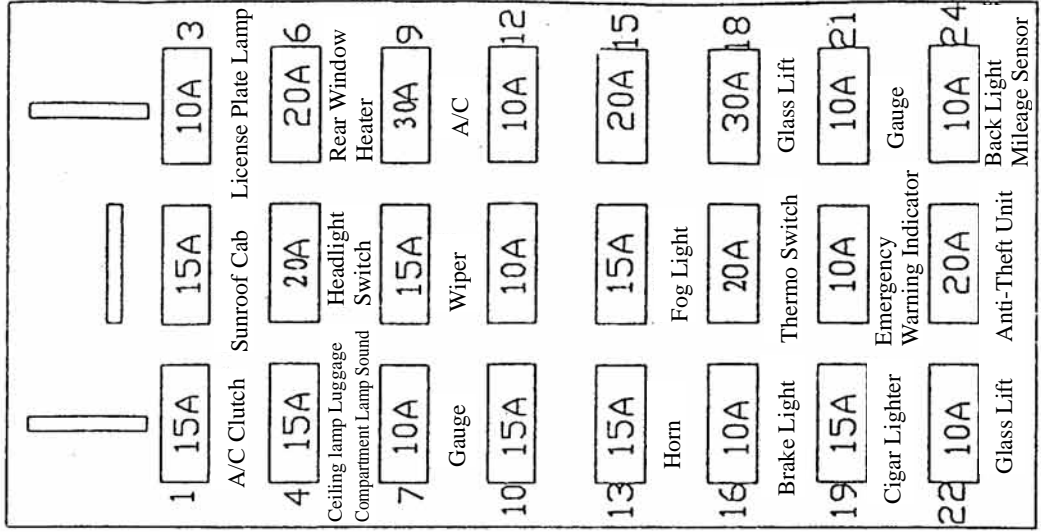

Radiator Fan Control

Relay, Fuse Position (I) Beside Washing Reservoir

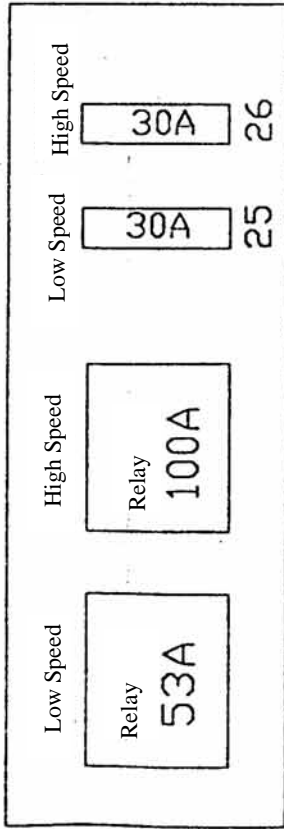

NOTE: 50A fuse is used when two fans works.

Relay Block Fuses Position (II) At Right side of Front Compartment

