TABLE OF CONTENTS

1	Before driving	Adjusting and operating features such as door locks, mirrors, and steering column.
2	When driving	Driving, stopping and safe-driving information.
3	Interior features	Air conditioning as well as other interior features for a comfortable driving experience.
4	Maintenance and care	Cleaning and protecting your vehicle, performing do-it-yourself maintenance, and maintenance information.
5	When trouble arises	What to do if the vehicle needs to be towed, gets a flat tire, or is involved in an accident.
6	Vehicle specifications	Detailed vehicle information.
7	For owners	Reporting safety defects for U.S. owners, and seat belt and SRS airbag instructions for Canadian owners.
	Index	Alphabetical listing of information contained in this manual.

TABLE OF CONTENTS Index

1 Before driving			Theft deterrent system Engine immobilizer		
			system		
1-1.	Key information Keys 24		Theft prevention labels (for U.S.A.) 71		
	Opening, closing and locking the doors Wireless remote control 26 Side doors		Safety information Correct driving posture		
	(seats, mirrors, steering wheel) Front seats	2 V	When driving		
1-4.	Rear seats		Driving procedures Driving the vehicle		
	Power windows 63				
1-5.	Refueling Opening the fuel tank cap				

TABLE OF CONTENTS

Index

2-2.	Instrument cluster				
	Gauges and meters 141	3	Interior features		
	Indicators and warning				
	lights 143	3-1.	Using the air conditioning		
	Multi-information display 146	•	system and defogger		1
			Air conditioning system	186	
2-3.	Operating the lights and		Rear window and		
	Windshield wipers		outside rear view mirror		
	Headlight switch 150		defoggers	193	2
	Windshield wipers and				
	washer 153	3-2.	Using the audio system		
	Rear window wiper and		Using the AUX port/USB		
	washer 156		port	194	
2.4	Llaing other driving avatoms		Using the steering wheel		3
Z-4 .	Using other driving systems		audio switches		
	Cruise control		Using the microphone	196	
	Driving assist systems 164				
2.5	Driving information	3-3.	Using the interior lights		4
2- 3.	Driving information		Interior lights list		
	Cargo and luggage 169		• Interior light		
	Vehicle load limits		Personal lights	198	
	Winter driving tips 175	2.4	Uning the storage feetures		5
	Trailer towing 180	3-4.	Using the storage features		
	Dinghy towing (automatic		List of storage features • Glove boxes		
	transmission)		Cup holders		
	Dinghy towing (manual transmission)		Auxiliary box		6
	102		Bottle holders		Ü
		3-5.	Other interior features		
			Sun visors	205	7
			Vanity mirrors	206	7
			Clock	207	
			Power outlet	208	
			Assist grips	209	
			Floor mat	210	
			Luggage compartment		
			features	212	
				2	

4 Maintenance and care


4-1. Maintenance and care Cleaning and protecting the vehicle exterior 216 Cleaning and protecting the vehicle interior 219 4-2. Maintenance Maintenance requirements 222 General maintenance...... 225 Emission inspection and maintenance (I/M) programs...... 229 4-3. Do-it-yourself maintenance Do-it-yourself service precautions 230 Hood...... 233 Positioning a floor jack 235 Engine compartment 237 Tires 252 Tire inflation pressure...... 261 Wheels 265 Air conditioning filter Wireless remote control battery 271 Checking and replacing fuses 273 Light bulbs...... 284


5 When trouble arises


5-1.	Essential information	
	Emergency flashers	294
	If your vehicle needs	
	to be towed	295
	If you think something is	
	wrong	302
	Fuel pump shut off	
	system	303
5-2.	Steps to take in an emerge	ency
	If a warning light turns	
	on or a warning buzzer	
	sounds	304
	If you have a flat tire	318
	If the engine will	
	not start	332
	If the shift lever cannot be	
	shifted from P (automatic	
	transmission)	
	If you lose your keys	334
	If you cannot operate	
	the back door opener	335
	If the vehicle battery is	220
	discharged	336
	If your vehicle overheats	2/1
	If the vehicle becomes	341
	stuck	3//
		J44
	If your vehicle has to be stopped in an	
	emergency	346


6 Vehicle specifications


6-1.	Specifications				
	Maintenance data				
	(fuel, oil level, etc.) 350				
	Fuel information 361				
	Tire information 365				
6-2.	Customization				
	Customizable features 378				
6-3.	Initialization				
	Items to initialize 380				
7	For owners				
	Reporting safety defects				
	for U.S. owners 382				
	Seat belt instructions				
	for Canadian owners				
	(in French)				
	SRS airbag instructions for Canadian owners				
	(in French) 386				
	ndex				
	Abbreviation list 396				
	Alphabetical index 397				
	What to do if 404				

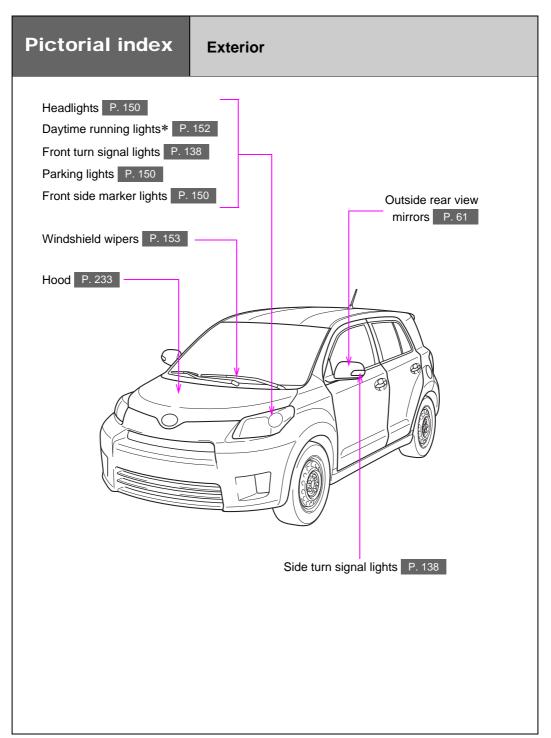


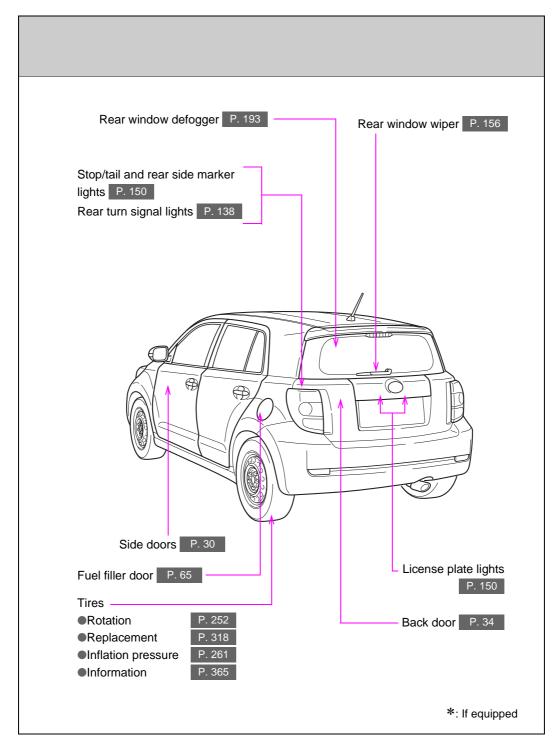


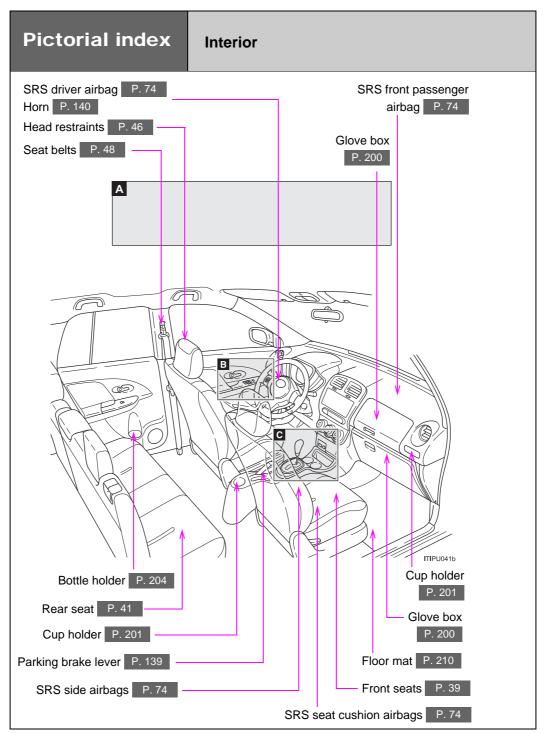


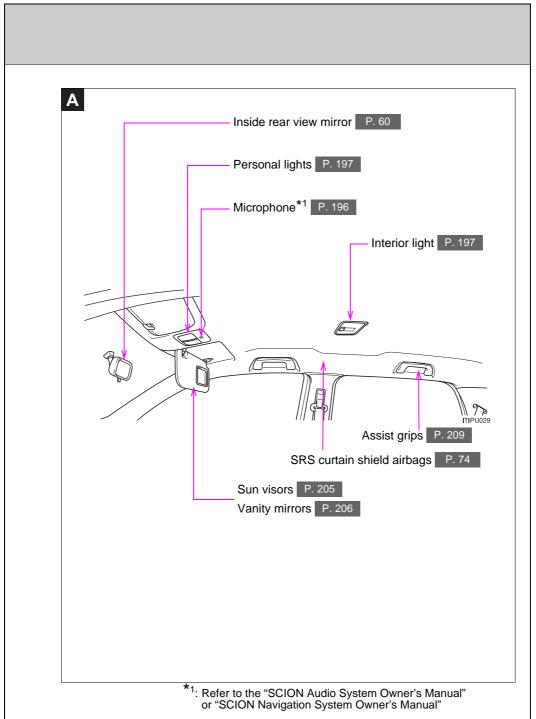


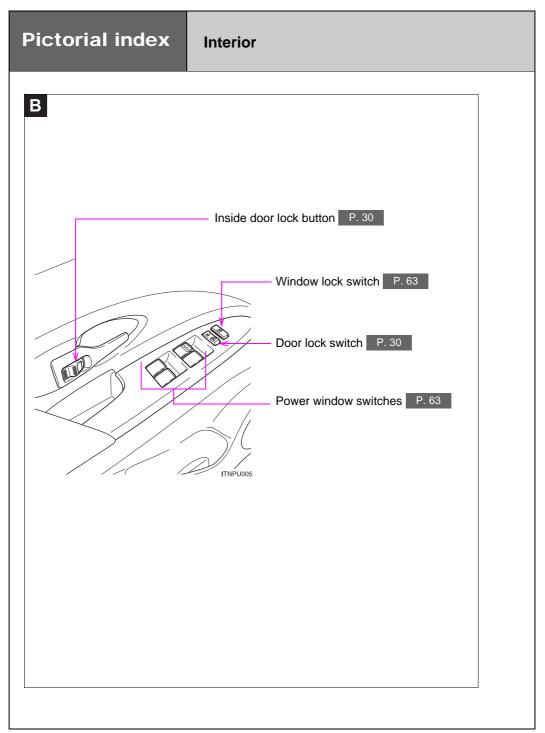


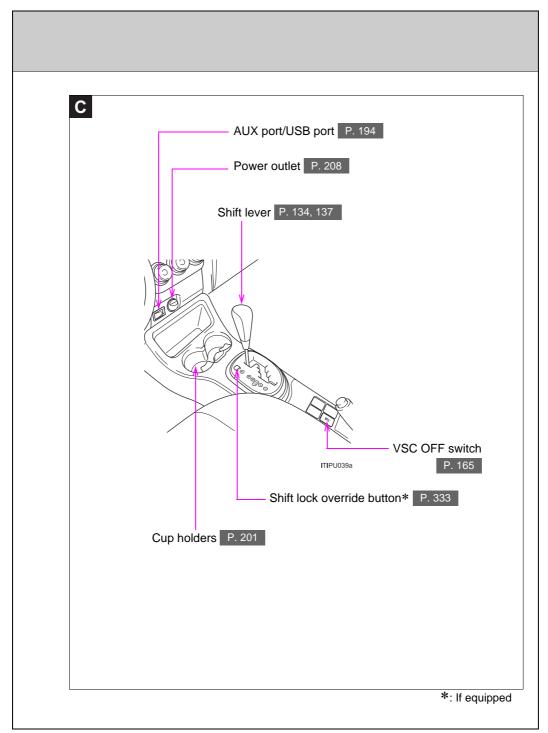

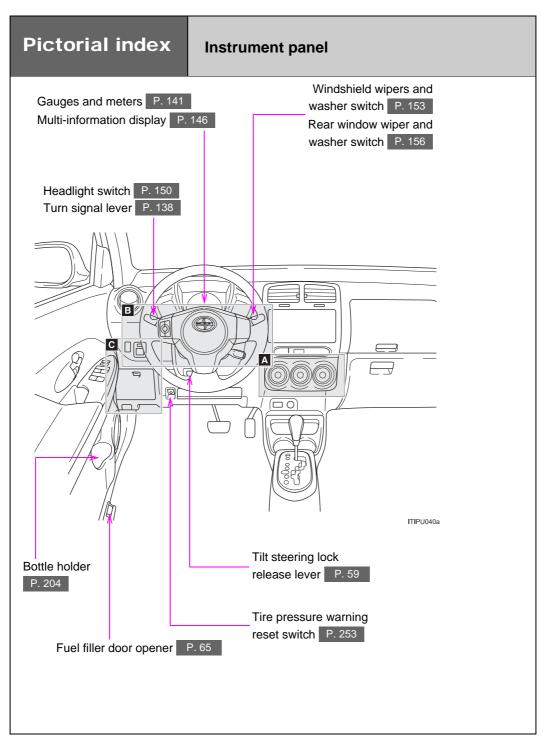

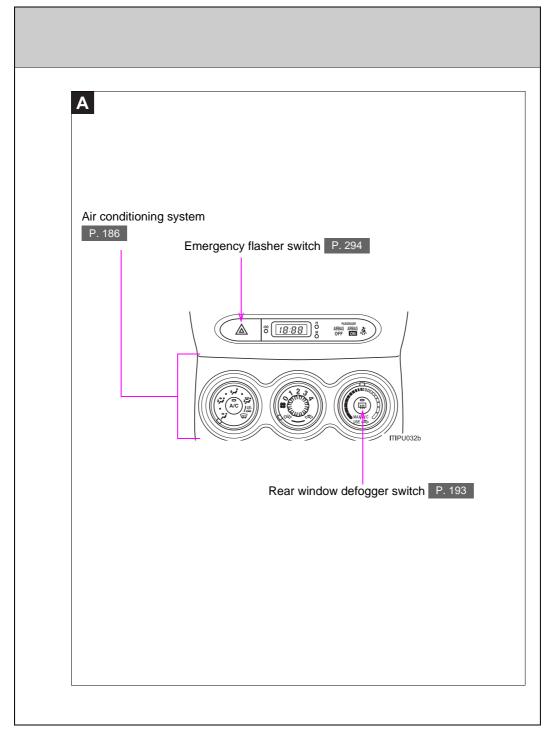

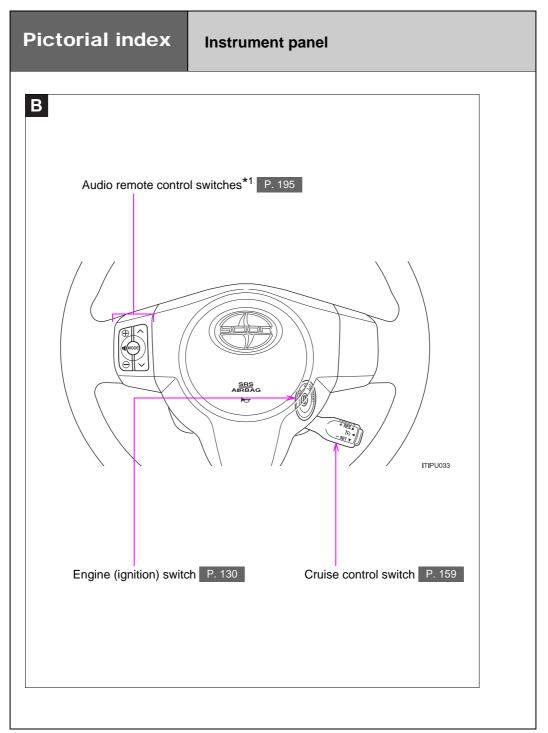

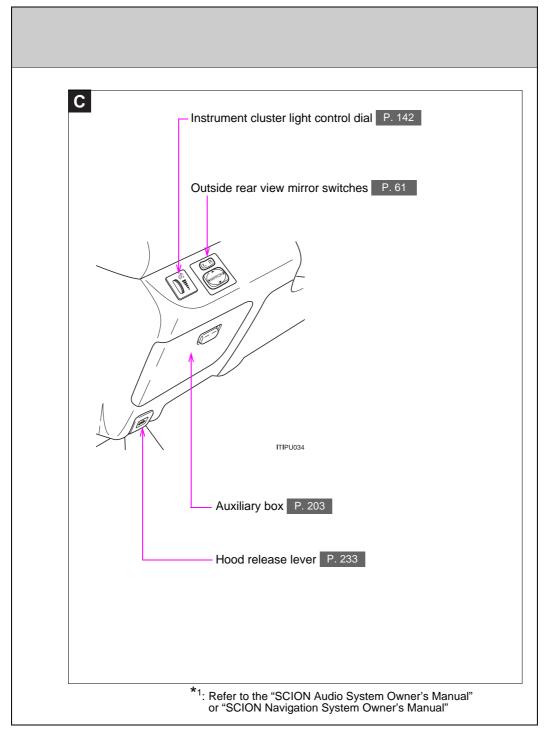

For your information

Main Owner's Manual

Please note that this manual applies to all models and explains all equipment, including options. Therefore, you may find some explanations for equipment not installed on your vehicle.

All specifications provided in this manual are current at the time of printing. However, because of the Scion policy of continual product improvement, we reserve the right to make changes at any time without notice.

Depending on specifications, the vehicle shown in the illustrations may differ from your vehicle in terms of equipment.

Noise from under vehicle after turning off the engine

Approximately five hours after the engine is turned off, you may hear sound coming from under the vehicle for several minutes. This is the sound of a fuel evaporation leakage check and, it does not indicate a malfunction.

Accessories, spare parts and modification of your Scion

A wide variety of non-genuine spare parts and accessories for Scion vehicles are currently available on the market. You should know that Scion does not warrant these products and is not responsible for their performance, repair, or replacement, or for any damage they may cause to, or adverse effect they may have on, your Scion vehicle.

This vehicle should not be modified with non-genuine Scion products. Modification with non-genuine Scion products could affect its performance, safety or durability, and may even violate governmental regulations. In addition, damage or performance problems resulting from the modification may not be covered under warranty.

Installation of a mobile two-way radio system

The installation of a mobile two-way radio system in your vehicle could affect electronic systems such as:

- Multiport fuel injection system/sequential multiport fuel injection system
- Cruise control system
- Anti-lock brake system
- SRS airbag system
- Seat belt pretensioner system

Be sure to check with your Scion dealer for precautionary measures or special instructions regarding installation of a mobile two-way radio system.

Vehicle data recording

Your Scion is equipped with several sophisticated computers that will record certain data, such as:

- · Engine speed
- · Accelerator status
- Brake status
- Vehicle speed
- · Shift position

The recorded data varies according to the vehicle grade level and options with which it is equipped. Furthermore, these computers do not record conversations, sounds or pictures.

Data usage

Scion may use the data recorded in these computers to diagnose malfunctions, conduct research and development, and improve quality.

Scion will not disclose the recorded data to a third party except:

- With the consent of the vehicle owner or with the consent of the lessee if the vehicle is leased
- In response to an official request by the police, a court of law or a government agency
- · For use by Scion in a lawsuit
- For research purposes where the data is not tied to a specific vehicle or vehicle owner

Event data recorder

This vehicle is equipped with an event data recorder (EDR). The main purpose of an EDR is to record, in certain crash or near crash-like situations, such as an air bag deployment or hitting a road obstacle, data that will assist in understanding how a vehicle's systems performed. The EDR is designed to record data related to vehicle dynamics and safety systems for a short period of time, typically 30 seconds or less.

The EDR in this vehicle is designed to record such data as:

- · How various systems in your vehicle were operating;
- Whether or not the driver and passenger safety belts were buckled/fastened;
- How far (if at all) the driver was depressing the accelerator and/or brake pedal; and,
- · How fast the vehicle was traveling.

These data can help provide a better understanding of the circumstances in which crashes and injuries occur.

NOTE: EDR data are recorded by your vehicle only if a nontrivial crash situation occurs; no data are recorded by the EDR under normal driving conditions and no personal data (e.g., name, gender, age, and crash location) are recorded. However, other parties, such as law enforcement, could combine the EDR data with the type of personally identifying data routinely acquired during a crash investigation.

To read data recorded by an EDR, special equipment is required, and access to the vehicle or the EDR is needed. In addition to the vehicle manufacturer, other parties, such as law enforcement, that have the special equipment, can read the information if they have access to the vehicle or the EDR.

Disclosure of the EDR data

Scion will not disclose the data recorded in an EDR to a third party except when:

- An agreement from the vehicle's owner (or the lessee for a leased vehicle) is obtained
- In response to an official request by the police, a court of law or a government agency
- · For use by Scion in a lawsuit

However, if necessary, Scion may:

- · Use the data for research on vehicle safety performance
- Disclose the data to a third party for research purposes without disclosing information about the specific vehicle or vehicle owner

Scrapping of your Scion

The SRS airbag and seat belt pretensioner devices in your Scion contain explosive chemicals. If the vehicle is scrapped with the airbags and seat belt pretensioners left as they are, this may cause an accident such as fire. Be sure to have the systems of the SRS airbag and seat belt pretensioner removed and disposed of by a qualified service shop or by your Scion dealer before you scrap your vehicle.

Perchlorate Material

Special handling may apply,

See www.dtsc.ca.gov/hazardouswaste/perchlorate.

Your vehicle has components that may contain perchlorate. These components may include airbags, seat belt pretensioners, and wireless remote control batteries.

A CAUTION

General precautions while driving

Driving under the influence: Never drive your vehicle when under the influence of alcohol or drugs that have impaired your ability to operate your vehicle. Alcohol and certain drugs delay reaction time, impair judgment and reduce coordination, which could lead to an accident that could result in death or serious injury.

Defensive driving: Always drive defensively. Anticipate mistakes that other drivers or pedestrians might make and be ready to avoid accidents.

Driver distraction: Always give your full attention to driving. Anything that distracts the driver, such as adjusting controls, talking on a cellular phone or reading can result in a collision with resulting death or serious injury to you, your occupants or others.

General precaution regarding children's safety

Never leave children unattended in the vehicle, and never allow children to have or use the key.

Children may be able to start the vehicle or shift the vehicle into neutral. There is also a danger that children may injure themselves by playing with the windows or other features of the vehicle. In addition, heat build-up or extremely cold temperatures inside the vehicle can be fatal to children.

Symbols used throughout this manual

Cautions & Notices



A CAUTION

This is a warning against something which, if ignored, may cause death or serious injury to people. You are informed about what you must or must not do in order to reduce the risk of death or serious injury to yourself and others.



NOTICE


This is a warning against something which, if ignored, may cause damage to the vehicle or its equipment. You are informed about what you must or must not do in order to avoid or reduce the risk of damage to your Scion and its equipment.

Symbols used in illustrations



Safety symbol

The symbol of a circle with a slash through it means "Do not", "Do not do this", or "Do not let this happen".

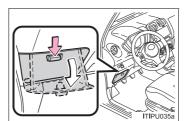

Arrows indicating operations

- Indicates the action (pushing, turning, etc.) used to operate switches and other devices.
- Indicates the outcome of an operation (e.g. a lid opens).

Before driving

1


1-1.	Key information Keys	24	1-4.	Opening and closing the windows	
				Power windows	63
1-2.	Opening, closing and lock	ing			
	the doors		1-5.	Refueling	
	Wireless remote control	26		Opening the fuel tank	
	Side doors	30		cap	65
	Back door	34			
			1-6.	Theft deterrent system	
1-3.	Adjustable components (seats, mirrors, steering			Engine immobilizer system	69
	wheel)			Theft prevention labels	
	Front seats	39		(for U.S.A.)	71
	Rear seats	41			
	Head restraints	46	1-7.	Safety information	
	Seat belts			Correct driving posture	
	Steering wheel	59		SRS airbags	74
	Anti-glare inside rear view mirror Outside rear view			Front passenger occupant classification system	88
				Child restraint systems	95
	mirrors	61		Installing child	
				restraints	100

1-1. Key information

Keys


The following keys are provided with the vehicle.

Vehicles without engine immobilizer system

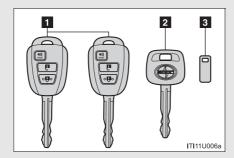

- Keys (with a wireless remote control function)
 - Operating the wireless remote control function $(\rightarrow P. 26)$
- Key (without a wireless remote control function)
- 3 Key number plate

Vehicles with engine immobilizer system

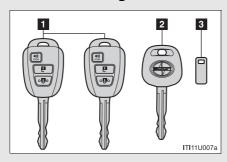

- Master keys
 - Operating the wireless remote control function (→P. 26)
- 2 Valet key
- 3 Key number plate

■ When required to leave the vehicle's key with a parking attendant (vehicles with engine immobilizer system)

Carry the master key for your own use and provide the attendant with the valet key.

■ Key number plate

Keep the plate in a safe place such as your wallet, not in the vehicle. In the event that a key is lost, a new key can be made by your Scion dealer using the key number plate. (\rightarrow P. 334)

■When riding in an aircraft

When bringing a key with wireless remote control function onto an aircraft, make sure you do not press any buttons on the key while inside the aircraft cabin. If you are carrying the key in your bag etc., ensure that the buttons are not likely to be pressed accidentally. Pressing a button may cause the key to emit radio waves that could interfere with the operation of the aircraft.



NOTICE


To prevent key damage

Observe the following:

- Do not subject the keys to strong shocks, expose them to high temperatures by placing them in direct sunlight, or get them wet.
- Do not expose the keys to electromagnetic materials or attach any material that blocks electromagnetic waves to the key surface.
- Do not disassemble the key.

1-2. Opening, closing and locking the doors Wireless remote control

The wireless remote control can be used to lock and unlock the vehicle.

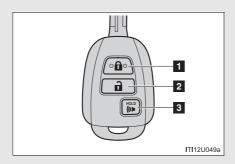

- 1 Locks all the side doors and back door
- 2 Unlocks all the side doors and back door

Pressing the button unlocks the driver's door. Pressing the button again within 3 seconds unlocks the other doors.

Sounds the alarm (press and hold) (→P. 27)

■ Operation signals

A buzzer sounds and the emergency flashers flash to indicate that the doors have been locked/unlocked. (Locked: Once; Unlocked: Twice)

■ Door lock buzzer

If an attempt to lock the doors is made when a door is not fully closed, a buzzer sounds continuously for 10 seconds. Fully close the door to stop the buzzer, and lock the vehicle once more.

■ Panic mode



When will is pressed for longer than about one second, an alarm will sound intermittently and the vehicle lights will flash to deter any person from trying to break into or damage your vehicle.

To stop the alarm, press any button on the wireless remote control.

■ Security feature

If a door is not opened within approximately 30 seconds after the vehicle is unlocked, the security feature automatically locks the vehicle again.

■ Conditions affecting operation

The wireless remote control function may not operate normally in the following situations:

- Near a TV tower, radio station, electric power plant, airport or other facility that generates strong radio waves
- When carrying a portable radio, cellular phone or other wireless communication devices
- When multiple wireless keys are in the vicinity
- When the wireless key is in contact with, or is covered by, a metallic object
- When a wireless key (that emits radio waves) is being used nearby
- When the wireless key has been left near an electrical appliance such as a personal computer

■ Key battery depletion

If the wireless remote control function does not operate, the battery may be depleted. Replace the battery when necessary. (\rightarrow P. 271)

■ Customization

Settings (e.g. door lock buzzer) can be changed. (Customizable features: \rightarrow P. 378)

■ Certification for wireless remote control

U.S.A.

FCC ID: MOZB52TH FCC ID: MOZB41RH

NOTE:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC WARNING:

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Canada

NOTE:

Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

1-2. Opening, closing and locking the doors

Side doors


The vehicle can be locked and unlocked using the key, wireless remote control or door lock switch.

■ Wireless remote control

→P. 26

■ Key


Turning the key operates the doors as follows:

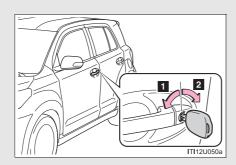

- 1 Locks all the side doors and back door
- 2 Unlocks all the side doors and back door


Turning the key unlocks the driver's door. Turning the key again within 3 seconds unlocks the other doors.

Door lock switch

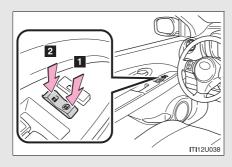

- Locks all the side doors and back door
- Unlocks all the side doors and back door

■ Inside lock buttons

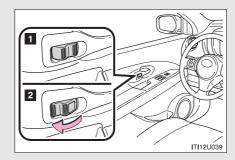

- 1 Locks the door
- 2 Unlocks the door

The front doors can be opened by pulling the inside handle even if the lock buttons are in the lock position.


Locking the front doors from the outside without a key

STEP 1 Move the inside lock button to the lock position.

STEP 2 Close the door.

The door cannot be locked if the key is in the engine switch.

Rear door child-protector lock

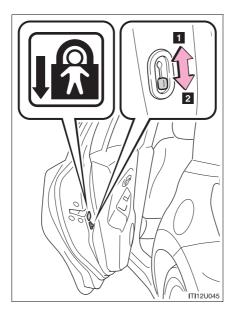

The door cannot be opened from inside the vehicle when the lock is set.

- 1 Unlock
- 2 Lock

These locks can be set to prevent children from opening the rear doors. Push down on each rear door switch to lock both rear doors.

A CAUTION

To prevent an accident

Observe the following precautions while driving the vehicle. Failure to do so may result in a door opening and an occupant falling out, resulting in death or serious injury.

- Always use a seat belt.
- Always lock all the doors.
- Ensure that all doors are properly closed.
- Do not pull the inside handle of the doors while driving. The doors may be opened and the passengers are thrown out of the vehicle and it may result in serious injury or death.
 - Be especially careful for the front doors, as the doors may be opened even if the inside lock buttons are in locked position.
- Set the rear door child-protector locks when children are seated in the rear seat.

1-2. Opening, closing and locking the doors

Back door

The back door can be locked/unlocked and opened by the following procedures.

■ Locking and unlocking the back door

Wireless remote control


→P. 26

Door lock switch

→P. 30

■ Opening the back door from outside the vehicle

Back door opener

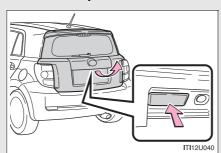


Raise the back door while pushing up the back door opener switch.

■ Luggage compartment light

The luggage compartment light turns on when the back door is opened.

■ When closing the back door

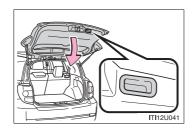

Lower the back door using the back door handle, and make sure to push the back door down from the outside to close it.

■ If the back door opener is inoperative or the battery is discharged

→P. 335

A CAUTION

Caution while driving

- Keep the back door closed while driving. If the back door is left open, it may hit near-by objects while driving or luggage may be unexpectedly thrown out, causing an accident. In addition, exhaust gases may enter the vehicle, causing death or a serious health hazard. Make sure to close the back door before driving.
- Before driving the vehicle, make sure that the back door is fully closed. If the back door is not fully closed, it may open unexpectedly while driving, causing an accident.
- Never let anyone sit in the luggage compartment. In the event of sudden braking, sudden swerving or an accident, they are susceptible to death or serious injury.

When children are in the vehicle

Observe the following precautions.

Failure to do so may result in death or serious injury.

- Do not leave children alone in the luggage compartment. If a child is accidentally locked in the luggage compartment, they could have heat exhaustion.
- Do not allow a child to open or close the back door. Doing so may cause the back door to move unexpectedly, or cause the child's hands, head, or neck to be caught by the closing back door.

Operating the back door

Observe the following precautions.

Failure to do so may cause parts of the body to be caught, resulting in death or serious injury.

- Remove any heavy loads, such as snow and ice, from the back door before opening it. Failure to do so may cause the back door to suddenly shut again after it is opened.
- •When opening or closing the back door, thoroughly check to make sure the surrounding area is safe.
- If anyone is in the vicinity, make sure they are safe and let them know that the back door is about to open or close.
- Use caution when opening or closing the back door in windy weather as it may move abruptly in strong wind.





- The back door may suddenly shut if it is not opened fully. It is more difficult to open or close the back door on an incline than on a level surface, so beware of the back door unexpectedly opening or closing by itself. Make sure that the back door is fully open and secure before using the luggage compartment.
- When closing the back door, take extra care to prevent your fingers etc. from being caught.
- When closing the back door, make sure to press it lightly on its outer surface. If the back door handle is used to fully close the back door, it may result in hands or arms being caught.

▲ CAUTION

- On not pull on the back door damper stay to close the back door, and do not hang on the back door damper stay.
 - Doing so may cause hands to be caught or the back door damper stay to break, causing an accident.
- If a bicycle carrier or similar heavy object is attached to the back door, it may suddenly shut again after being opened, causing someone's hands, head or neck to be caught and injured. When installing an accessory part to the back door, using a genuine Scion part is recommended.




NOTICE

Back door damper stays

The back door is equipped with damper stays that hold the back door in


Observe the following precautions.

Failure to do so may cause damage to the back door damper stay, resulting in malfunction.

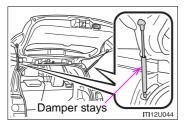


- Do not attach any foreign objects, such as stickers, plastic sheets, or adhesives to the damper stay rod.
- Do not touch the damper stay rod with gloves or other fabric items.
- Do not attach any accessories other than genuine Scion parts to the back
- Do not place your hand on the damper stay or apply lateral forces to it.

1-3. Adjustable components (seats, mirrors, steering wheel) **Front seats**

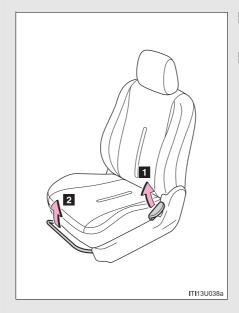

- Seatback angle adjustment lever
- 2 Seat position adjustment lever

Active head restraint

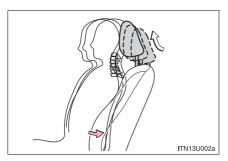

When the occupant's lower back presses against the seatback during a rear-end collision, the head restraint moves slightly forward and upward to help reduce the risk of whiplash on the seat occupant.

■ Active head restraint

Even small forces applied to the seatback may cause the head restraint to move. This does not indicate a problem.




CAUTION

Seat adjustment

- To reduce the risk of sliding under the lap belt during a collision, do not recline the seat more than necessary.
 - If the seat is too reclined, the lap belt may slide past the hips and apply restraint forces directly to the abdomen, or your neck may contact the shoulder belt, increasing the risk of death or serious injury in the event of an accident.
 - Adjustments should not be made while driving as the seat may unexpectedly move and cause the driver to lose control of the vehicle.
- After adjusting the seat, make sure that the seat is locked in position.


1-3. Adjustable components (seats, mirrors, steering wheel) Rear seats

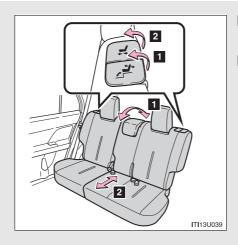

- Seatback angle adjustment lever
- 2 Seat position adjustment lever


Folding down rear seatbacks

■ Before folding down rear seatbacks

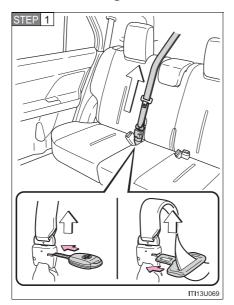


Insert the key or the other tab into the hole on the center seat belt buckle to release the tab (with hooked end), and allow the belt to retract.


Retract the belt slowly when releasing and stowing the seat belt.

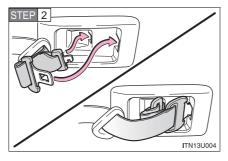

Stow the center seat belt tabs in the cover set in the roof as shown.

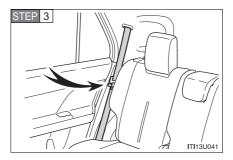


Use the seat belt hangers to prevent the side seat belts from being tangled.

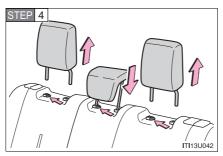


Center seat: Lower the head restraint to the lowest position. Side seats: Remove the head restraints.

■ Folding down rear seatbacks

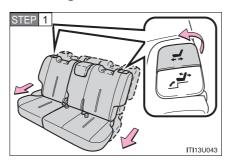


Pull the seat position adjustment lever up. Then slide the rear seat fully forward.

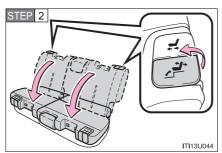

Pull the seatback angle adjustment lever up and fold the seatback down.

Each seatback may be folded separately.

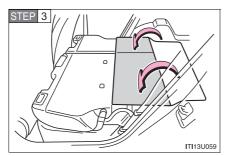

Flip over the deck board.

This will enlarge the luggage compartment as far as the seat-backs.

A CAUTION

When folding the rear seatbacks down

Observe the following precautions. Failure to do so may result in death or serious injury.

- Do not fold the seatbacks down while driving.
- Stop the vehicle on level ground, set the parking brake and shift the shift lever to P (automatic transmission) or 1 (manual transmission).
- Do not allow anyone to sit on a folded seatback or in the luggage compartment while driving.
- Do not allow children to enter the luggage compartment.

Seat adjustment

- Do not recline the seat more than necessary when the vehicle is in motion to reduce the risk of sliding under the lap belt. If the seat is too reclined, during an accident the lap belt may slide past the hips and apply restraint forces directly to the abdomen or your neck may contact the shoulder belt, increasing the risk of death or serious injury.
- After adjusting the seat, make sure that the seat is locked in position.

When returning the seatback to the upright position

Observe the following precautions. Failure to do so may result in death or serious injury.

- Be careful not to get your hands or feet pinched in the seat.
- Make sure the seats are securely locked by pressing forward and rearward on the top of the seatback.
- Check that the seat belts are not twisted or caught under the seat.
- Arrange the seat belts in the proper positions for ready use.



NOTICE

When returning the seatbacks to their original position


Do not pull the pocket that stores the seat belt comfort guide.

1-3. Adjustable components (seats, mirrors, steering wheel)

Head restraints

Head restraints are provided for all seats.

Front seats

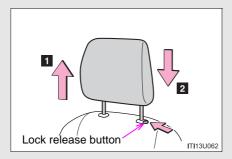


1 Up

Pull the head restraints up.

2 Down

Push the head restraint down while pushing the lock release button.

Rear seats

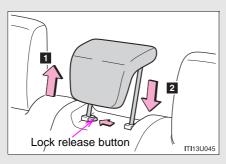


1 Up

Pull the head restraints up.

2 Down


Push the head restraint down while pushing the lock release button.

■ Removing the head restraints

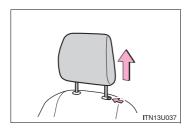

Pull the head restraint up while pressing the lock release button.


■ Installing the head restraints

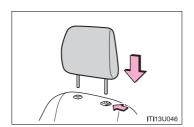

Align the head restraint with the installation holes and push it down to the lock position.

Press and hold the lock release button when lowering the head restraint.

■ Adjusting the height of the head restraints

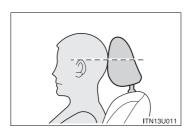

Make sure that the head restraints are adjusted so that the center of the head restraint is closest to the top of your ears.

■ Adjusting the rear center seat head restraint

Always raise the head restraint one level from the stowed position when using.

A CAUTION

Head restraint precautions

Observe the following precautions regarding the head restraints. Failure to do so may result in death or serious injury.

- Use the head restraints designed for each respective seat.
- Adjust the head restraints to the correct position at all times.
- After adjusting the head restraints, push down on them and make sure they are locked in position.
- Do not drive with the head restraints removed.

1-3. Adjustable components (seats, mirrors, steering wheel) **Seat belts**


Make sure that all occupants are wearing their seat belts before driving the vehicle.

■ Correct use of the seat belts




- Extend the shoulder belt so that it comes fully over the shoulder, but does not come into contact with the neck or slide off the shoulder.
- Position the lap belt as low as possible over the hips.
- Adjust the position of the seatback. Sit up straight and well back in the seat.
- Do not twist the seat belt.

■ Fastening and releasing the seat belt

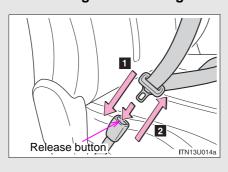

- To fasten the seat belt, push the plate into the buckle until a click sound is heard.
- 2 To release the seat belt, press the release button.

■ Adjusting the seat belt shoulder anchor height (front seats)

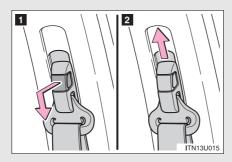


- Push the seat belt shoulder anchor down while pulling the lock release knob.
- 2 Push the seat belt shoulder anchor up.

Move the height adjuster up and down as needed until you hear a click.

Rear center seat belt

The rear center seat belt is a 3-point type restraint with 2 buckles. Both seat belt buckles must be correctly located and securely latched for proper operation.

■ Fastening the belt

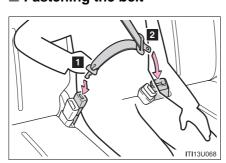


Push the tabs into the buckles.

- 1 Tab A
- 2 Tab B

Push the tabs into the buckles until a clicking sound is heard.


■ Releasing and stowing the belt

The belt can be completely released when not required, such as when folding down the rear seat.

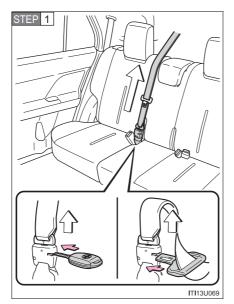


To release the hooked end tab, insert the vehicle's key or tab B into the hole on the buckle.

Retract the belt slowly when releasing and stowing the seat belt.

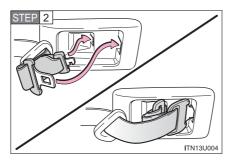

Stow the seat belt tabs in the cover set in the roof as shown.


■ Extracting the belt

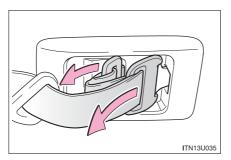


Push the tab and then pull the tabs out from the cover.

Seat belt comfort guide (rear center seat)


If the shoulder belt sits close to a person's neck, use the seat belt comfort guide.

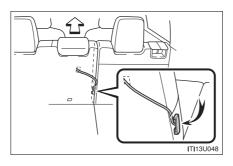

The seat belt comfort guide is stored in the pocket on the right side of the left rear seatback.

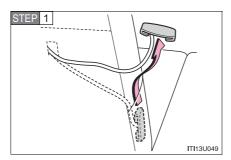


Pull the comfort guide from the pocket.

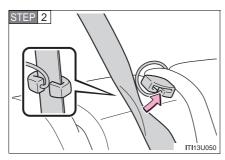


Slide the belt past the slot of the guide.

The elastic cord must be behind the seat belt.

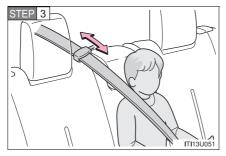

Buckle the seat belt and position it comfortably.

Seat belt pretensioners (front seats)

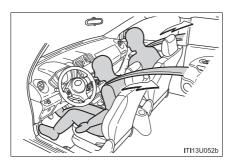

The pretensioner helps the seat belt to quickly restrain the occupant by retracting the seat belt when the vehicle is subjected to certain types of severe frontal collision.

The pretensioner does not activate in the event of a minor frontal impact, a side impact, a rear impact or vehicle rollover.

■ Emergency locking retractor (ELR)

The retractor will lock the belt during a sudden stop or on impact. It may also lock if you lean forward too quickly. A slow, easy motion will allow the belt to extend so that you can move around fully.

■ Automatic locking retractor (ALR)

When a passenger's shoulder belt is completely extended and then retracted even slightly, the belt is locked in that position and cannot be extended. This feature is used to hold the child restraint system (CRS) firmly. To free the belt again, fully retract the belt and then pull the belt out once more. $(\rightarrow P. 100)$

■ Child seat belt usage


The seat belts of your vehicle were principally designed for persons of adult size

- Use a child restraint system appropriate for the child, until the child becomes large enough to properly wear the vehicle's seat belt. (→P. 95)
- When the child becomes large enough to properly wear the vehicle's seat belt, follow the instructions on P. 48 regarding seat belt usage.

■ Replacing the belt after the pretensioner has been activated

If the vehicle is involved in multiple collisions, the pretensioner will activate for the first collision, but will not activate for the second or subsequent collisions.

■ Seat belt extender

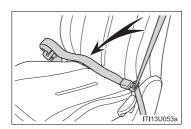

If your seat belts cannot be fastened securely because they are not long enough, a personalized seat belt extender is available from your Scion dealer free of charge.


Observe the following precautions to reduce the risk of injury in the event of sudden braking, sudden swerving or an accident.

Failure to do so may cause death or serious injury.

Wearing a seat belt

- Ensure that all passengers wear a seat belt.
- Always wear a seat belt properly.
- Each seat belt should be used by one person only. Do not use a seat belt for more than one person at once, including children.
- Scion recommends that children be seated in the rear seat and always use a seat belt and/or an appropriate child restraint system.
- To achieve a proper seating position, do not recline the seat more than necessary. The seat belt is most effective when the occupants are sitting up straight and well back in the seats.
- Do not wear the shoulder belt under your arm.
- Always wear your seat belt low and snug across your hips.

Pregnant women

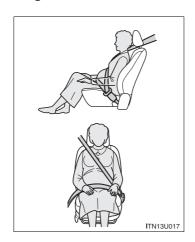

Obtain medical advice and wear the seat belt in the proper way. $(\rightarrow P. 48)$

Women who are pregnant should position the lap belt as low as possible over the hips in the same manner as other occupants. Extend the shoulder belt completely over the shoulder and position the belt across the chest. Avoid belt contact over the rounding of the abdominal area.

If the seat belt is not worn properly, not only the pregnant woman, but also the fetus could suffer death or serious injury as a result of sudden braking or a collision.

People suffering illness

Obtain medical advice and wear the seat belt in the proper way. (→P. 48)

When children are in the vehicle

Do not allow children to play with the seat belt. If the seat belt becomes twisted around a child's neck, it may lead to choking or other serious injuries that could result in death.

If this occurs and the buckle cannot be unfastened, scissors should be used to cut the belt.

Adjustable shoulder anchor

Always make sure the shoulder belt is positioned across the center of your shoulder. The belt should be kept away from your neck, but not falling off your shoulder. Failure to do so could reduce the amount of protection in an accident and cause death or serious injuries in the event of a sudden stop, sudden swerve or accident. (\rightarrow P. 49)

Seat belt pretensioners

- Do not place anything, such as a cushion, on the front passenger's seat. Doing so will disperse the passenger's weight, which prevents the sensor from detecting the passenger's weight properly. As a result, the seat belt pretensioner for the front passenger's seat may not activate in the event of a collision.
- If the pretensioner has activated, the SRS warning light will come on. In that case, the seat belt cannot be used again and must be replaced at your Scion dealer.

Seat belt damage and wear

- Do not damage the seat belts by allowing the belt, plate, or buckle to be jammed in the door.
- Inspect the seat belt system periodically. Check for cuts, fraying, and loose parts. Do not use a damaged seat belt until it is replaced. Damaged seat belts cannot protect an occupant from death or serious injury.
- Ensure that the belt and plate are locked and the belt is not twisted.
 If the seat belt does not function correctly, immediately contact your Scion dealer.
- Replace the seat assembly, including the belts, if your vehicle has been involved in a serious accident, even if there's no obvious damage.
- Do not attempt to install, remove, modify, disassemble or dispose of the seat belts. Have any necessary repairs carried out by your Scion dealer. Inappropriate handling of the pretensioner may prevent it from operating properly, resulting in death or serious injury.

Using a seat belt comfort guide

- Make sure the belt is not twisted and that it lies flat. The elastic cord must be behind the belt and the guide must be on the front.
- To reduce the chance of injury in case of an accident or a sudden stop while driving, remove and store the comfort guide in its pocket when it is not in use.
- Always make sure the shoulder belt is positioned across the center of the shoulder. The belt should be kept away from the neck, and should not fall off the shoulder.

Using a seat belt extender

- Do not wear the seat belt extender if you can fasten the seat belt without the extender.
- Do not use the seat belt extender when installing a child restraint system because the belt will not securely hold the child restraint system, increasing the risk of death or serious injury in the event of an accident.
- The personalized extender may not be safe on another vehicle, when used by another person, or at a different seating position other than the one originally intended.

When using the rear center seat belt



Do not use the rear center seat belt with either buckle released. Fastening only one of the buckles may result in death or serious injury in case of sudden braking or a collision.



NOTICE


When using a seat belt extender

When releasing the seat belt, press on the buckle release button on the extender, not on the seat belt.


This helps prevent damage to the vehicle interior and the extender itself.

1-3. Adjustable components (seats, mirrors, steering wheel) Steering wheel

The steering wheel can be adjusted to a comfortable position.

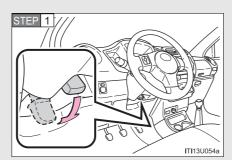

Hold the steering wheel and push the lever down.

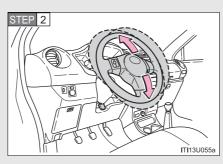

Adjust to the ideal position by moving the steering wheel vertically.

After adjustment, pull the lever up to secure the steering wheel.

A CAUTION

Caution while driving

Do not adjust the steering wheel while driving.

Doing so may cause the driver to mishandle the vehicle and cause an accident, resulting in death or serious injury.


After adjusting the steering wheel

Make sure that the steering wheel is securely locked.

Otherwise, the steering wheel may move suddenly, possibly causing an accident and resulting in death or serious injury.


1-3. Adjustable components (seats, mirrors, steering wheel) Anti-glare inside rear view mirror

Glare from the headlights of vehicles behind can be reduced by using the following functions:

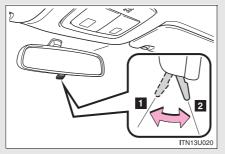

- Normal position
- 2 Anti-glare position

Adjusting the height of rear view mirror

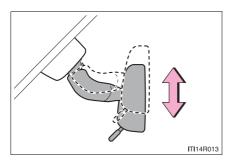

Adjust the height of the rear view mirror by moving it up and down.

A CAUTION


Caution while driving

Do not adjust the position of the mirror while driving.

Doing so may lead to mishandling of the vehicle and cause an accident, resulting in death or serious injury.


1-3. Adjustable components (seats, mirrors, steering wheel) Outside rear view mirrors

Mirror angle can be adjusted using the switch.

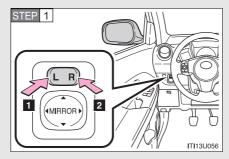

To select a mirror to adjust, press the switch.


- 1 Left
- 2 Right

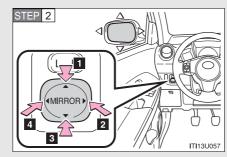

To adjust the mirror, press the switch.

- 1 Up
- 2 Right
- 3 Down
- 4 Left

Folding the mirrors

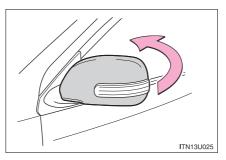

Push the mirror back in the direction of the vehicle's rear.

■ Mirror angle can be adjusted when

The engine switch is in the "ACC" or "ON" position.

■ When the mirrors are fogged up (vehicles with outside rear view mirror defoggers)

Turn on the mirror defoggers to defog the mirrors. (\rightarrow P. 193)

A CAUTION

When driving the vehicle

Observe the following precautions while driving.

Failure to do so may result in loss of control of the vehicle and cause an accident, resulting in death or serious injury.

- Do not adjust the mirrors while driving.
- Do not drive with the mirrors folded.
- Both the driver and passenger side mirrors must be extended and properly adjusted before driving.

When a mirror is moving

To avoid personal injury and mirror malfunction, be careful not to get your hand caught by the moving mirror.

When the mirror defoggers are operating (vehicles with outside rear view mirror defoggers)

Do not touch the rear view mirror surfaces, as they can become very hot and burn you.


If ice should jam the mirror

Do not operate the control or scrape the mirror face. Use a spray de-icer to free the mirror.

1-4. Opening and closing the windows **Power windows**


The power windows can be opened and closed using the switches.

Operating the switch moves the windows as follows:

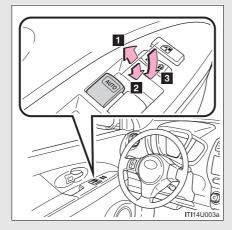

- 1 Closing
- 2 Opening
- One-touch opening (driver's window only)*
- *: To stop the window partway, operate the switch in the opposite direction.

Window lock switch

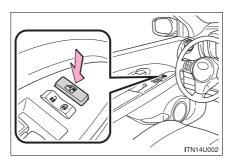

Press the switch down to lock the passenger window switches.

Use this switch to prevent children from accidentally opening or closing a passenger window.

1-4. Opening and closing the windows

■The power windows can be operated when

The engine switch is in the "ON" position.

■ Operating the power windows after turning the engine off

The power windows can be operated for approximately 45 seconds even after the engine switch is turned to the "ACC" or "LOCK" position. They cannot, however, be operated once either front door is opened.

A CAUTION

Closing the windows

Observe the following precautions.

Failure to do so may result in death or serious injury.

- Check to make sure that all passengers do not have any part of their body in a position where it could be caught when a window is being operated.
- Do not allow children to operate the power windows. Closing a power window on someone can cause serious injury, and in some instances, even death.

1-5. Refueling


Opening the fuel tank cap

Perform the following steps to open the fuel tank cap:


■ Before refueling the vehicle

Turn the engine switch off and ensure that all the doors and windows are closed.


■ Opening the fuel tank cap

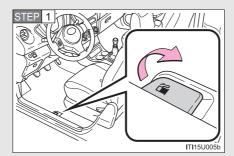

Open the fuel filler door.

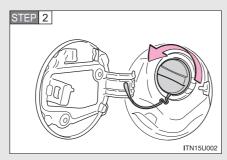


Turn the fuel tank cap slowly to open.

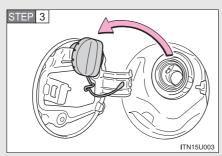

Hang the fuel tank cap on the back of the fuel filler door.

Closing the fuel tank cap

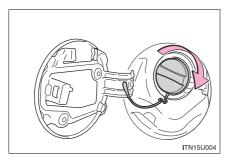

When replacing the fuel tank cap, turn it until a clicking sound is heard.

After releasing your hand, the cap will turn slightly to the opposite direction.


■ Fuel types

Use unleaded gasoline. (Octane Rating 87 [Research Octane Number of 91] or higher)

■ Fuel tank capacity

Approximately 11.1 gal. (42 L, 9.2 lmp. gal.)

■ Use of ethanol blended gasoline in a gasoline engine

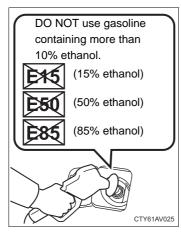

- Use only gasoline containing a maximum of 10% ethanol.
 - DO NOT use any flex-fuel or gasoline that could contain more than 10% ethanol, including from any pump labeled E15, E30, E50, E85 (which are only some examples of fuel containing more than 10% ethanol).

• Make sure that the ethanol blended gasoline to be used has a suitable Research Octane Number. (→P. 361)

■When refueling the vehicle

Observe the following precautions while refueling the vehicle. Failure to do so may result in death or serious injury.

- After exiting the vehicle and before opening the fuel door, touch an unpainted metal surface to discharge any static electricity. It is important to discharge static electricity before refueling because sparks resulting from static electricity can cause fuel vapors to ignite while refueling.
- Always hold the grips on the fuel tank cap and turn it slowly to remove it. A whooshing sound may be heard when the fuel tank cap is loosened. Wait until the sound cannot be heard before fully removing the cap. In hot weather, pressurized fuel may spray out the filler neck and cause injury.
- Do not allow anyone that has not discharged static electricity from their body to come close to an open fuel tank.
- Do not inhale vaporized fuel.
 Fuel contains substances that are harmful if inhaled.
- Do not smoke while refueling the vehicle.
 Doing so may cause the fuel to ignite and cause a fire.
- Do not return to the vehicle or touch any person or object that is statically charged.

This may cause static electricity to build up, resulting in a possible ignition hazard.

When replacing the fuel cap

Do not use anything but a genuine Scion fuel tank cap designed for your vehicle. Doing so may cause a fire or other incident which may result in death or serious injury.

1-5. Refueling



NOTICE

Refueling


Do not spill fuel during refueling.

Doing so may damage the vehicle, such as causing the emission control system to operate abnormally or damaging fuel system components or the vehicle's painted surface.

1-6. Theft deterrent system Engine immobilizer system*

The vehicle's keys have built-in transponder chips that prevent the engine from starting if a key has not been previously registered in the vehicle's on-board computer.

Never leave the keys inside the vehicle when you leave the vehicle.

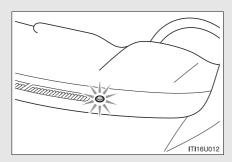

The indicator light flashes after the key has been removed from the engine switch to indicate that the system is operating.

The indicator light stops flashing after the registered key has been inserted into the engine switch to indicate that the system has been canceled.

■ System maintenance

The vehicle has a maintenance-free type engine immobilizer system.

- Conditions that may cause the system to malfunction
 - If the grip portion of the key is in contact with a metallic object
 - If the key is in close proximity to or touching a key to the security system (key with a built-in transponder chip) of another vehicle
- Certifications for the engine immobilizer system (for vehicles sold in Canada)

Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

*: If equipped

69

1-6. Theft deterrent system

A CAUTION

Certifications for the immobilizer system

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.


NOTICE

To ensure the system operates correctly

Do not modify or remove the system. If modified or removed, the proper operation of the system cannot be guaranteed.

1-6. Theft deterrent system

Theft prevention labels (for U.S.A.)

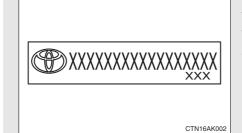

These labels are attached to the vehicle to reduce vehicle theft by facilitating the tracing and recovery of parts from stolen vehicles. Do not remove under penalty of law.

1-7. Safety information

Correct driving posture

Drive with a good posture as follows:



- Sit upright and well back in the seat. (→P. 39)
- Adjust the position of the seat forward or backward to ensure the pedals can be reached and easily depressed to the extent required. (→P. 39)
- 3 Adjust the seatback so that the controls are easily operable. (→P. 39)
- 4 Adjust the tilt positions of the steering wheel downward so the airbag is facing your chest. (→P. 59)
- 5 Lock the head restraint in place with the center of the head restraint closest to the top of your ears. (→P. 46)
- 6 Wear the seat belt correctly.(→P. 48)

While driving

- Do not adjust the position of the driver's seat. Doing so could cause the driver to lose control of the vehicle.
- Do not place a cushion between the driver or passenger and the seatback. A cushion may prevent correct posture from being achieved, and reduce the effectiveness of the seat belt and head restraint, increasing the risk of death or serious injury to the driver or passenger.
- Do not place anything under the front seats. Objects placed under the front seats may become jammed in the seat tracks and stop the seat from locking in place. This may lead to an accident, resulting in death or serious injury. The adjustment mechanism may also be damaged.


Adjusting the seat position

- Take care when adjusting the seat position to ensure that other passengers are not injured by the moving seat.
- Do not put your hands under the seat or near the moving parts to avoid

Fingers or hands may become jammed in the seat mechanism.

1-7. Safety information SRS airbags

The SRS airbags inflate when the vehicle is subjected to certain types of severe impacts that may cause significant injury to the occupants. They work together with the seat belts to help reduce the risk of death or serious injury.

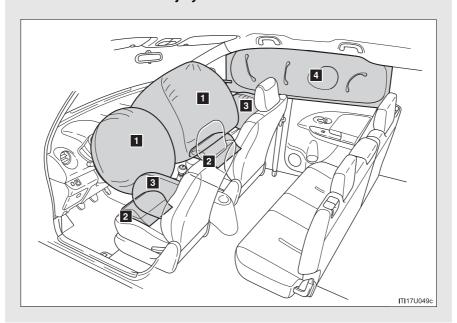


SRS front airbags

- SRS driver airbag/front passenger airbag Can help protect the head and chest of the driver and front passenger from impact with interior components
- SRS seat cushion airbags
 Can help restrain the front seat occupants

SRS side and curtain shield airbags

- SRS front side airbags
 Can help protect the torso of the front seat occupants
- SRS curtain shield airbags Can help protect primarily the head of occupants in the outer seats

SRS airbag system components

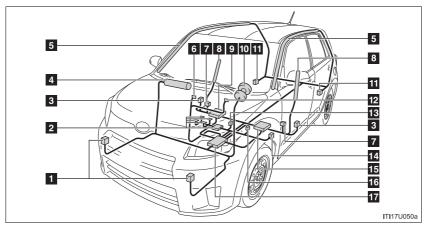

- Front impact sensors
- Front passenger occupant classification system (ECU and sensors)
- 3 Side airbag sensor (front)
- 4 Front passenger airbag
- 5 Curtain shield airbags
- 6 "AIR BAG ON" and "AIR BAG OFF" indicator lights
- 7 Seat belt pretensioners
- 8 Side airbags
- 9 Front passenger's seat cushion airbag

- 10 Driver airbag
- 12 SRS warning light
- Front passenger's seat belt buckle switch
- Driver's seat position sensor
- 15 Driver's seat cushion airbag
- Driver's seat belt buckle switch
- Airbag sensor assembly

Your vehicle is equipped with ADVANCED AIRBAGS designed based on the US motor vehicle safety standards (FMVSS208). The airbag sensor assembly (ECU) controls airbag deployment based on information obtained from the sensors etc. shown in the system components diagram above. This information includes crash severity and occupant information. As the airbags deploy, a chemical reaction in the inflators quickly fills the airbags with non-toxic gas to help restrain the motion of the occupants.

■ If the SRS airbags deploy (inflate)

- Bruising and slight abrasions may result from contact with a deploying (inflating) SRS airbag.
- A loud noise and white powder will be emitted.
- Parts of the airbag module (steering wheel hub, airbag cover and inflator) as well as the front seats, parts of the front and rear pillars, and roof side rails, may be hot for several minutes. The airbag itself may also be hot.
- The windshield may crack.

■ SRS airbag deployment conditions (SRS front airbags)

• The SRS front airbags will deploy in the event of an impact that exceeds the set threshold level (the level of force corresponding to an approximately 12 - 18 mph [20 - 30 km/h] frontal collision with a fixed wall that does not move or deform).

However, this threshold velocity will be considerably higher in the following situations:


- If the vehicle strikes an object, such as a parked vehicle or sign pole, which can move or deform on impact
- If the vehicle is involved in an underride collision, such as a collision in which the front of the vehicle "underrides", or goes under the bed of a truck
- Depending on the type of collision, it is possible that only the seat belt pretensioners will activate.
- The SRS front airbags for the front passenger will not activate if there is no passenger sitting in the front passenger seat. However, the SRS front airbags for the front passenger may deploy if luggage is put on the seat, even if the seat is unoccupied. (→P. 88)
- The SRS seat cushion airbags on the front seats will not operate if the occupant is not wearing a seat belt.

■ SRS airbag deployment conditions (SRS side and curtain shield airbags)

The SRS side and curtain shield airbags will deploy in the event of an impact that exceeds the set threshold level (the level of force corresponding to the impact force produced by an approximately 3300 lb. [1500 kg] vehicle colliding with the vehicle cabin from a direction perpendicular to the vehicle orientation at an approximate speed of 12 - 18 mph [20 - 30 km/h]).

■ Conditions under which the SRS airbags may deploy (inflate), other than a collision


The SRS front airbags may also deploy if a serious impact occurs to the underside of your vehicle. Some examples are shown in the illustration.

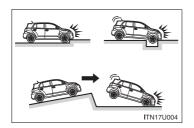

- Hitting a curb, edge of pavement or hard surface
- Falling into or jumping over a deep hole
- Landing hard or falling

■ Types of collisions that may not deploy the SRS airbags (SRS front airbags)


The SRS front airbags do not generally inflate if the vehicle is involved in a side or rear collision, if it rolls over, or if it is involved in a low-speed frontal collision. But, whenever a collision of any type causes sufficient forward deceleration of the vehicle, deployment of the SRS front airbags may occur.

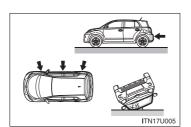

- Collision from the side
- Collision from the rear
- Vehicle rollover


■ Types of collisions that may not deploy the SRS airbags (SRS side and curtain shield airbags)

The SRS side and curtain shield airbags may not activate if the vehicle is subjected to a collision from the side at certain angles, or a collision to the side of the vehicle body other than the passenger compartment.

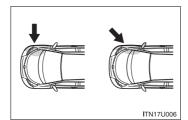

- Collision from the side to the vehicle body other than the passenger compartment
- Collision from the side at an angle

The SRS side and curtain shield airbags do not generally inflate if the vehicle is involved in a frontal or rear collision, if it rolls over, or if it is involved in a low-speed side collision.

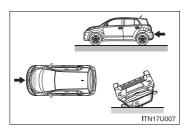


- Collision from the front
- Collision from the rear
- Vehicle rollover


■ When to contact your Scion dealer

In the following cases, the vehicle will require inspection and/or repair. Contact your Scion dealer as soon as possible.


Any of the SRS airbags have been inflated.

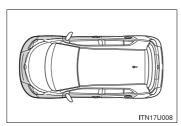

The front of the vehicle is damaged or deformed, or was involved in an accident that was not severe enough to cause the SRS front airbags to inflate.

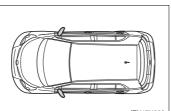


A portion of a door is damaged or deformed, or the vehicle was involved in an accident that was not severe enough to cause the SRS side and curtain shield airbags to inflate.

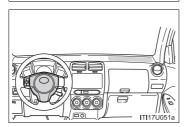

• The pad section of the steering wheel or dashboard near the front passenger airbag cover is scratched, cracked, or otherwise damaged.

1-7. Safety information

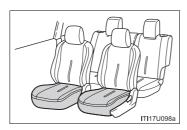

 The front seat cushion surface is scratched, cracked, or otherwise damaged.



- The surface of the seats with the side airbag is scratched, cracked, or otherwise damaged.
- The portion of the front pillars, rear pillars or roof side rail garnishes (padding) containing the curtain shield airbags inside is scratched, cracked or otherwise damaged.

SRS airbag precautions

Observe the following precautions regarding the SRS airbags. Failure to do so may cause death or serious injury.

- The driver and all passengers in the vehicle must wear their seat belts properly.
 - The SRS airbags are supplemental devices to be used with the seat belts.
- The SRS driver airbag deploys with considerable force, and can cause death or serious injury especially if the driver is very close to the airbag. The National Highway Traffic Safety Administration (NHTSA) advises:

Since the risk zone for the driver's airbag is the first 2 - 3 in. (50 - 75 mm) of inflation, placing yourself 10 in. (250 mm) from your driver airbag provides you with a clear margin of safety. This distance is measured from the center of the steering wheel to your breastbone. If you sit less than 10 in. (250 mm) away now, you can change your driving position in several ways:

- Move your seat to the rear as far as you can while still reaching the pedals comfortably.
- · Slightly recline the back of the seat. Although vehicle designs vary, many drivers can achieve the 10 in. (250 mm) distance, even with the driver seat all the way forward, simply by reclining the back of the seat somewhat. If reclining the back of your seat makes it hard to see the road, raise yourself by using a firm, non-slippery cushion, or raise the seat if your vehicle has that feature.
- If your steering wheel is adjustable, tilt it downward. This points the airbag toward your chest instead of your head and neck.

The seat should be adjusted as recommended by NHTSA above, while still maintaining control of the foot pedals, steering wheel, and your view of the instrument panel controls.

SRS airbag precautions



- If the seat belt extender has been connected to the driver's seat belt buckle but the seat belt extender has not also been fastened to the latch plate of the driver's seat belt, the SRS front airbags for the driver will judge that the driver is wearing the seat belt even though the seat belt has not been connected. In this case, the SRS front airbags for the driver may not activate correctly in a collision, resulting in death or serious injury in the event of a collision. Be sure to wear the seat belt with the seat belt extender.
- The SRS front passenger airbag also deploys with considerable force, and can cause death or serious injury especially if the front passenger is very close to the airbag. The front passenger seat should be as far from the airbag as possible with the seatback adjusted, so the front passenger sits upright.
- Improperly seated and/or restrained infants and children can be killed or seriously injured by a deploying airbag. An infant or child who is too small to use a seat belt should be properly secured using a child restraint system. Scion strongly recommends that all infants and children be placed in the rear seats of the vehicle and properly restrained. The rear seats are safer for infants and children than the front passenger seat. (→P. 95)

SRS airbag precautions



Do not sit on the edge of the seat or lean against the dashboard.



- Do not allow a child to stand in front of the SRS front passenger airbag unit or sit on the knees of a front passenger.
- Do not allow the front seat occupants to hold items on their knees.




 Do not lean against the door, the roof side rail or the front, side and rear pillars.



 Do not allow anyone to kneel on the passenger seat toward the door or put their head or hands outside the vehicle.

SRS airbag precautions

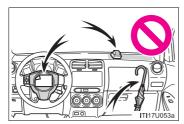

- Do not attach anything to or lean anything against areas such as the dashboard or steering wheel pad. These items can become projectiles
 - when the SRS driver and front passenger airbags deploy.



- Do not attach anything to areas such as a door, windshield glass, side door glass, front or rear pillar, roof side rail or assist grip.
- Do not hang coat hangers or other hard objects on the coat hooks. All of these items could become projectiles and may cause death or serious injury, should the SRS curtain shield airbags deploy.
- Do not use seat accessories which cover the parts where the SRS side airbags and SRS seat cushion airbags inflate as they may interfere with inflation of the SRS airbags. Such accessories may prevent the side airbags and seat cushion airbags from activating correctly, disable the system or cause the side airbags and seat cushion airbag to inflate accidentally, resulting in death or serious injury.
- Do not strike or apply significant levels of force to the area of the SRS airbag components.
 - Doing so can cause the SRS airbags to malfunction.
- Do not touch any of the component parts immediately after the SRS airbags have deployed (inflated) as they may be hot.

SRS airbag precautions

- If breathing becomes difficult after the SRS airbags have deployed, open a door or window to allow fresh air in, or leave the vehicle if it is safe to do so. Wash off any residue as soon as possible to prevent skin irritation.
- If the areas where the SRS airbags are stored, such as the steering wheel pad and front and rear pillar garnishes, are damaged or cracked, have them replaced by your Scion dealer.

Modification and disposal of SRS airbag system components


Do not dispose of your vehicle or perform any of the following modifications without consulting your Scion dealer. The SRS airbags may malfunction or deploy (inflate) accidentally, causing death or serious injury.

- Installation, removal, disassembly and repair of the SRS airbags
- Repairs, modifications, removal or replacement of the steering wheel, instrument panel, dashboard, seats or seat upholstery, front, side and rear pillars or roof side rails
- Repairs or modifications of the front fender, front bumper, or side of the occupant compartment
- Installation of a grille guard (bull bars, kangaroo bar, etc.), snow plows or winches
- Modifications to the vehicle's suspension system
- Installation of electronic devices such as mobile two-way radios and CD players
- Modifications to your vehicle for a person with a physical disability

1-7. Safety information

Front passenger occupant classification system

Your vehicle is equipped with a front passenger occupant classification system. This system detects the conditions of the front passenger seat and activates or deactivates the devices for the front passenger.

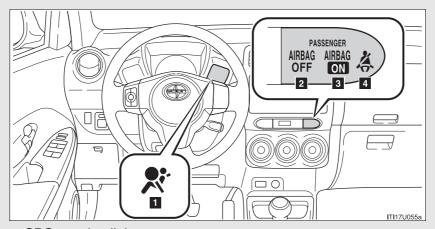

- SRS warning light
- 2 "AIR BAG OFF" indicator light
- 3 "AIR BAG ON" indicator light
- 4 Front passenger's seat belt reminder light

Conditions and operation in the front passenger occupant classification system

■ Adult*1

Addit		
Indicator/ warning light	"AIR BAG ON" and "AIR BAG OFF" indicator lights	"AIR BAG ON"
	SRS warning light	Off
		Off*2
	Front passenger's seat belt reminder light	or flashing ^{*3}
Devices	Front passenger airbag	
	Side airbag on the front	
	passenger seat	Activated
	Curtain shield airbag in the front passenger side	
	Seat cushion airbag in the front passenger side	Activated*2 or deactivated*3
	Front passenger's seat belt pretensioner	Activated

■ Child*4 or child restraint system*5

Indicator/ warning light	"AIR BAG ON" and "AIR BAG OFF" indicator lights	"AIR BAG OFF" ^{*6}
	SRS warning light	Off
		Off*2
	Front passenger's seat belt reminder light	or flashing ^{*3}
Devices	Front passenger airbag	Deactivated
	Side airbag on the front	
	passenger seat	Activated
	Curtain shield airbag in the front	Activated
	passenger side	
	Seat cushion airbag in the front	Deactivated
	passenger side	
	Front passenger's seat belt pretensioner	Activated

■ Unoccupied

Indicator/ warning light	"AIR BAG ON" and "AIR BAG OFF" indicator lights	Not illuminated
	SRS warning light	Off
	Front passenger's seat belt reminder light	Oii
	Front passenger airbag	Deactivated
Devices	Side airbag on the front	
	passenger seat	Activated
	Curtain shield airbag in the front	Activated
	passenger side	
	Seat cushion airbag in the front	
	passenger side	Deactivated
	Front passenger's seat belt pretensioner	

■ There is a malfunction in the system

Indicator/ warning light	"AIR BAG ON" and	"AIR BAG
	"AIR BAG OFF" indicator lights	OFF"
	SRS warning light	On
	Front passenger's seat belt reminder light	Off
Devices	Front passenger airbag	Deactivated
	Side airbag on the front	
	passenger seat	Activated
	Curtain shield airbag in the front	Activated
	passenger side	
	Seat cushion airbag in the front	Deactivated
	passenger side	
	Front passenger's seat belt pretensioner	Activated

1-7. Safety information

- *1: The system judges a person of adult size as an adult. When a smaller adult sits in the front passenger seat, the system may recognize him/her as a child depending on his/her physique and posture.
- *2: In the event the front passenger is wearing a seat belt.
- *3: In the event the front passenger does not wear a seat belt.
- *4: When a larger child who has outgrown a child restraint system sits in the front passenger seat, the system may recognize him/ her as an adult depending on his/her physique or posture.
- *5: Never install a rear-facing child restraint system on the front passenger seat. A forward-facing child restraint system should only be installed on the front passenger seat when it is unavoidable. (→P. 95)
- *6: In case the indicator light is not illuminated, consult this manual on how to install the child restraint system properly. (→P. 100)

Front passenger occupant classification system precautions

Observe the following precautions regarding the front passenger occupant classification system.

Failure to do so may cause death or serious injury.

- Wear the seat belt properly.
- Make sure the front passenger's seat belt plate has not been left inserted into the buckle before someone sits in the front passenger seat.
- Make sure the "AIR BAG OFF" indicator light is not illuminated when using the seat belt extender for the front passenger seat. If the "AIR BAG OFF" indicator light is illuminated, disconnect the extender tongue from the seat belt buckle, and reconnect the seat belt. Reconnect the seat belt extender after making sure the "AIR BAG ON" indicator light is illuminated. If you use the seat belt extender while the "AIR BAG OFF" indicator light is illuminated, the SRS airbags for the passenger will not activate correctly, which could cause death or serious injury in the event of a collision.
- Do not apply a heavy load to the front passenger seat or equipment.
- Do not put weight on the front passenger seat by putting your hands or feet on the front passenger seat seatback from the rear passenger seat.
- On not let a rear passenger lift the front passenger seat with their feet or press on the seatback with their legs.
- Do not put objects under the front passenger seat.

Front passenger occupant classification system precautions

- Do not recline the front passenger seatback so far that it touches a rear seat. This may cause the "AIR BAG OFF" indicator light to be illuminated, which indicates that the SRS airbags for the passenger will not activate in the event of a severe accident. If the seatback touches the rear seat, return the seatback to a position where it does not touch the rear seat. Keep the front passenger seatback as upright as possible when the vehicle is moving. Reclining the seatback excessively may lessen the effectiveness of the seat belt system.
- If an adult sits in the front passenger seat, the "AIR BAG ON" indicator light is illuminated. If the "AIR BAG OFF" indicator is illuminated, ask the passenger to sit up straight, well back in the seat, feet on the floor, and with the seat belt worn correctly. If the "AIR BAG OFF" indicator still remains illuminated, either ask the passenger to move to the rear seat, or if that is not possible, move the front passenger seat fully rearward.
- When it is unavoidable to install a forward-facing child restraint system on the front passenger seat, install the child restraint system on the front passenger seat in the proper order. $(\rightarrow P. 100)$
- Do not modify or remove the front seats.
- Do not kick the front passenger seat or subject it to severe impact. Otherwise, the SRS warning light may come on to indicate a malfunction of the front passenger occupant classification system. In this case, contact your Scion dealer immediately.
- Child restraint systems installed on the rear seat should not contact the front seatbacks.
- Do not use a seat accessory, such as a cushion and seat cover, that covers the seat cushion surface.
- Do not modify or replace the upholstery of the front seat.

1-7. Safety information Child restraint systems

A child restraint system for a small child or baby must itself be properly restrained on the seat with the lap portion of the lap/shoulder belt.

The laws of all 50 states of the U.S.A. and Canada now require the use of child restraint systems.

Points to remember

Studies have shown that installing a child restraint on a rear seat is much safer than installing one on the front passenger seat.

- Choose a child restraint system that suits your vehicle and is appropriate to the age and size of the child.
- For installation details, follow the instructions provided with the child restraint system.
 - General installation instructions are provided in this manual. $(\rightarrow P. 100)$

Types of child restraints

Child restraint systems are classified into the following 3 types according to the age and size of the child:

Rear facing — Infant seat/convertible seat



Forward facing — Convertible seat



Booster seat



96

■ Selecting an appropriate child restraint system

- •Use a child restraint system appropriate for the child until the child becomes large enough to properly wear the vehicle's seat belt.
- If the child is too large for a child restraint system, sit the child on a rear seat and use the vehicle's seat belt. (\rightarrow P. 48)

▲ CAUTION

Child restraint precautions

- For effective protection in automobile accidents and sudden stops, a child must be properly restrained, using a seat belt or child restraint system depending on the age and size of the child. Holding a child in your arms is not a substitute for a child restraint system. In an accident, the child can be crushed against the windshield, or between you and the vehicle's interior.
- Scion strongly urges the use of a proper child restraint system that conforms to the size of the child, installed on the rear seat. According to accident statistics, the child is safer when properly restrained in the rear seat than in the front seat.
- Never install a rear-facing child restraint system on the front passenger seat even if the "AIR BAG OFF" indicator light is illuminated. In the event of an accident, the force of the rapid inflation of the front passenger airbag can cause death or serious injury to the child if the rear-facing child restraint system is installed on the front passenger seat.

Child restraint precautions

- A forward-facing child restraint system may be installed on the front passenger seat only when it is unavoidable. A child restraint system that requires a top tether strap should not be used in the front passenger seat since there is no top tether strap anchor for the front passenger seat. Adjust the seatback as upright as possible and always move the seat as far back as possible even if the "AIR BAG OFF" indicator light is illuminated, because the front passenger airbag could inflate with considerable speed and force. Otherwise, the child may be killed or seriously injured.
- Do not use the seat belt extender when installing a child restraint system on the front or rear passenger seat. If installing a child restraint system with the seat belt extender connected to the seat belt, the seat belt will not securely hold the child restraint system, which could cause death or serious injury to the child or other passengers in the event of a sudden stop, sudden swerve or accident.
- Do not allow the child to lean his/her head or any part of his/her body against the door or the area of the seat, front and rear pillars or roof side rails from which the SRS side airbags or SRS curtain shield airbags deploy even if the child is seated in the child restraint system. It is dangerous if the SRS side airbags and curtain shield airbags inflate, and the impact could cause death or serious injury to the child.
- Make sure you have complied with all installation instructions provided by the child restraint manufacturer and that the system is properly secured. If it is not secured properly, it may cause death or serious injury to the child in the event of a sudden stop, sudden swerve or accident.

When children are in the vehicle

Do not allow children to play with the seat belt. If the seat belt becomes twisted around a child's neck, it may lead to choking or other serious injuries that could result in death.

If this occurs and the buckle cannot be unfastened, scissors should be used to cut the belt.


When the child restraint system is not in use

- Keep the child restraint system properly secured on the seat even if it is not in use.
 - Do not store the child restraint system unsecured in the passenger compartment.
- If it is necessary to detach the child restraint system, remove it from the vehicle or store it securely in the luggage compartment. This will prevent it from injuring passengers in the event of a sudden stop, sudden swerve or accident.

1-7. Safety information Installing child restraints

Follow the child restraint system manufacturer's instructions. Firmly secure child restraints to the seats using the LATCH anchors or a seat belt. Attach the top tether strap when installing a child restraint.

The lap/shoulder belt can be used if your child restraint system is not compatible with the LATCH (Lower Anchors and Tethers for Children) system.

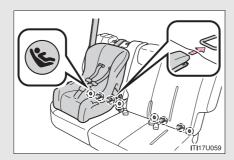


Child restraint LATCH anchors

LATCH anchors are provided for the outside rear seats. (Buttons displaying the location of the anchors are attached to the seats.)




Seat belts equipped with a child restraint locking mechanism (ALR/ELR belts except driver's seat belt) (→P. 48)

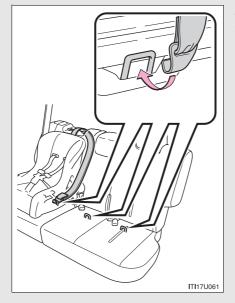

Anchor bracket (for top tether strap)

An anchor bracket is provided for each rear seat.


Installation with LATCH system

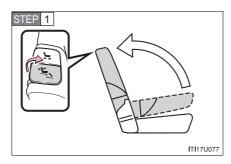

Fold the seatback while pulling the seatback angle adjustment lever up. Return the seatback and secure it at the first lock position (most upright position). $(\rightarrow P. 41)$

STEP 2 Widen the gap between the seat cushion and seatback slightly.

Type A

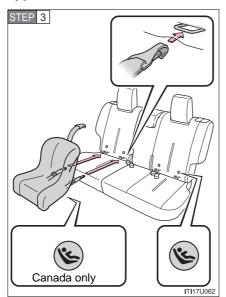


Latch the hooks of the lower straps onto the LATCH anchors. If the child restraint has a top tether strap, the top tether strap should be latched onto the top tether strap anchor.

For owners in Canada:

The symbol on a child restraint system indicates the presence of a lower connector system.

Type B

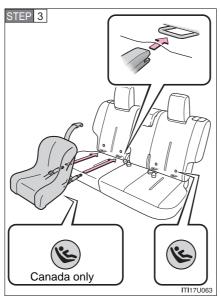


Latch the buckles onto the LATCH anchors. If the child restraint has a top tether strap, the top tether strap should be latched onto the top tether strap anchor.

For owners in Canada:


The symbol on a child restraint system indicates the presence of a lower connector system.

Installing child restraints using a seat belt (child restraint lock function belt)


■ Rear facing — Infant seat/convertible seat

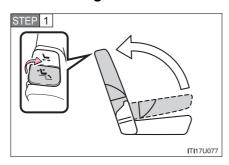


Fold the seatback while pulling the seatback angle adjustment lever up. Return the seatback and secure it at the first lock position (most upright position). $(\rightarrow P. 41)$

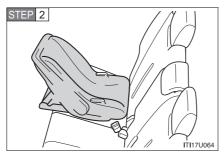


Place the child restraint system on the rear seat facing the rear of the vehicle.

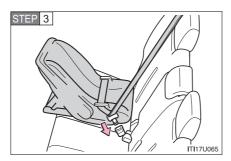

Run the seat belt through the child restraint system and insert the plate into the buckle. Make sure that the belt is not twisted.

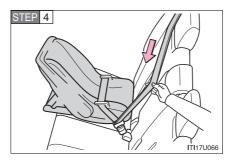


Fully extend the shoulder belt and allow it to retract to put it in lock mode. In lock mode, the belt cannot be extended.

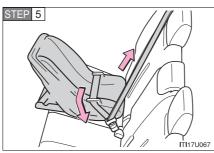

While pushing the child restraint system down into the rear seat, allow the shoulder belt to retract until the child restraint system is securely in place.

After the shoulder belt has retracted to a point where there is no slack in the belt, pull the belt to check that it cannot be extended.

■ Forward facing — Convertible seat

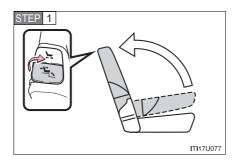

Fold the seatback while pulling the seatback angle adjustment lever up. Return the seatback and secure it at the first lock position (most upright position). $(\rightarrow P. 41)$


1-7. Safety information



Place the child restraint system on the seat facing the front of the vehicle.



Run the seat belt through the child restraint system and insert the plate into the buckle. Make sure that the belt is not twisted.

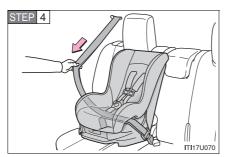

Fully extend the shoulder belt and allow it to retract to put it in lock mode. In lock mode, the belt cannot be extended.




While pushing the child restraint system into the rear seat, allow the shoulder belt to retract until the child restraint system is securely in place.


After the shoulder belt has retracted to a point where there is no slack in the belt, pull the belt to check that it cannot be extended.

STEP 6 If the child restraint has a top tether strap, the top tether strap should be latched onto the top tether strap anchor. (\rightarrow P. 109)


■ Booster seat

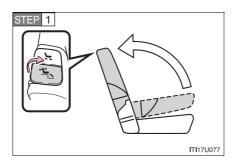

Fold the seatback while pulling the seatback angle adjustment lever up. Return the seatback and secure it at the first lock position (most upright position). $(\rightarrow P. 41)$

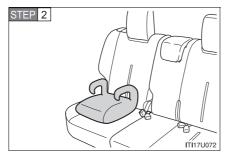

Place the child restraint system on the seat facing the front of the vehicle.

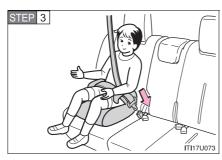


Sit the child in the child restraint system. Fit the seat belt to the child restraint system according to the manufacturer's instructions and insert the plate into the buckle. Make sure that the belt is not twisted.

Check that the shoulder belt is correctly positioned over the child's shoulder and that the lap belt is as low as possible. $(\rightarrow P. 48)$


108

Removing a child restraint installed with a seat belt

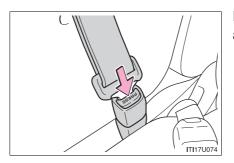


Push the buckle release button and fully retract the seat belt.

Child restraint systems with a top tether strap

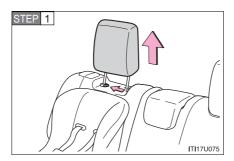

Secure the child restraint system using a seat belt or the lower anchors, and remove the head restraint.

1-7. Safety information

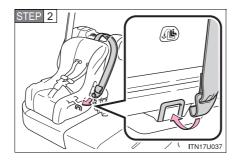

Latch the hook onto the anchor bracket and tighten the top tether strap.

Make sure the top tether strap is securely latched.

■ Laws and regulations pertaining to anchorages

The LATCH system conforms to FMVSS225 or CMVSS210.2. Child restraint systems conforming to FMVSS213 or CMVSS213 specifications can be used.

This vehicle is designed to conform to SAE J1819.

When installing a booster seat

To prevent the belt from going into ALR lock mode, do not fully extend the shoulder belt. ALR mode causes the belt to tighten only. This could cause injury or discomfort to the child. (\rightarrow P. 53)

When installing a child restraint system

Follow the directions given in the child restraint system installation manual and fix the child restraint system securely in place.


If the child restraint system is not correctly fixed in place, the child or other passengers may be seriously injured or even killed in the event of sudden braking, sudden swerving or an accident.





- If the driver's seat interferes with the child restraint system and prevents it from being attached correctly, attach the child restraint system to the righthand rear seat.
- Adjust the front passenger seat so that it does not interfere with the child restraint system.
- Only put a forward-facing child restraint system on the front seat when unavoidable. When installing a forward-facing child restraint system on the front passenger seat, move the seat as far back as possible even if the "AIR BAG OFF" indicator light is illuminated. Failure to do so may result in death or serious injury if the airbags deploy (inflate).

When installing a child restraint system

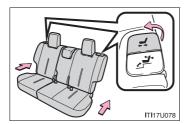

- When installing a rear-facing child restraint system in the rear seat, move the rear seat to the rearmost lock position to prevent the child restraint system from interfering with the front seat. Otherwise, the child restraint system may not be properly secured. In the event of an accident, this may cause death or serious injury.
- When a booster seat is installed, always ensure that the shoulder belt is positioned across the center of the child's shoulder. The belt should be kept away from the child's neck, but not so that it could fall off the child's shoulder. Failure to do so may result in death or serious injury in the event of sudden braking, sudden swerving or an accident.
- Ensure that the belt and plate are securely locked and the seat belt is not twisted.
- Shake the child restraint system left and right, and forward and backward to ensure that it has been securely installed.
- After securing a child restraint system, never adjust the seat.
- Follow all installation instructions provided by the child restraint system manufacturer.

Do not use a seat belt extender

If a seat belt extender is used when installing a child restraint system, the seat belt will not securely hold the child restraint system, which could cause death or serious injury to the child or other passengers in the event of sudden braking, sudden swerving or an accident.

To correctly attach a child restraint system to the anchors

When using the LATCH anchors, be sure that there are no foreign objects around the anchors and that the seat belt is not caught behind the child restraint. Make sure the child restraint system is securely attached, or it may cause death or serious injury to the child or other passengers in the event of a sudden braking, sudden swerving or an accident.

1-7. Safety information

2-1.	Driving procedures	
	Driving the vehicle	116
	Engine (ignition)	
	switch	130
	Automatic	
	transmission	134
	Manual transmission	137
	Turn signal lever	138
	Parking brake	139
	Horn	140
2-2.	Instrument cluster	
	Gauges and meters	141
	Indicators and warning	
	lights	143
	Multi-information	
	display	146

2-3.	Operating the lights and Windshield wipers	
	Headlight switch	150
	Windshield wipers and washer	153
	Rear window wiper and	
	washer	156
2-4.	Using other driving syste	ems
	Cruise control	159
	Driving assist systems	164
2-5.	Driving information	
	Cargo and luggage	169
	Vehicle load limits	174
	Winter driving tips	175
	Trailer towing	180
	Dinghy towing (automatic transmission)	1Ω1
	Dinghy towing (manual	101
	transmission)	182

115

Driving the vehicle

The following procedures should be observed to ensure safe driving:

■ Starting the engine

→P. 130

Driving

Automatic transmission

STEP 1 With the brake pedal depressed, shift the shift lever to D.

(→P. 134)

STEP 2 Release the parking brake.

(→P. 139)

Gradually release the brake pedal and gently depress the accelerator pedal to accelerate the vehicle.

Manual transmission

While depressing the clutch pedal, shift the shift lever to 1. (→P. 137)

STEP 2 Release the parking brake.

(→P. 139)

Gradually release the clutch pedal. At the same time, gently depress the accelerator pedal to accelerate the vehicle.

■ Stopping

Automatic transmission

- STEP 1 With the shift lever in D, depress the brake pedal.
- If the vehicle is to be stopped for an extended period of time, shift the shift lever to P or N. (→P. 134)

Manual transmission

- While depressing the clutch pedal, depress the brake pedal.
- STEP 2 If necessary, set the parking brake.

 If the vehicle is to be stopped for an extended period of time, shift the shift lever to N. (→P. 137)

■ Parking the vehicle

Automatic transmission

- STEP 1 With the shift lever in D, depress the brake pedal.
- STEP 2 Set the parking brake. $(\rightarrow P. 139)$
- STEP 3 Shift the shift lever to P. (→P. 134)

 If parking on a hill, block the wheels as needed.
- Turn the engine switch to the "LOCK" position to stop the engine.
- STEP 5 Lock the door, making sure that you have the key on your person.

Manual transmission

- While depressing the clutch pedal, depress the brake pedal.
- STEP 2 Set the parking brake. $(\rightarrow P. 139)$
- STEP 3 Shift the shift lever to N. (→P. 137)

 If parking on a hill, shift the shift lever to 1 or R and block the wheels as needed.
- Turn the engine switch to the "LOCK" position to stop the engine.
- STEP 5 Lock the door, making sure that you have the key on your person.

Starting off on a steep uphill

Automatic transmission

- Make sure that the parking brake is set and shift the shift lever to D.
- STEP 2 Gently depress the accelerator pedal.
- STEP 3 Release the parking brake.

Manual transmission

- With the parking brake firmly set and the clutch pedal fully depressed, shift the shift lever to 1.
- Lightly depress the accelerator pedal at the same time as gradually releasing the clutch pedal.
- STEP 3 Release the parking brake.

■ Driving in the rain

- Drive carefully when it is raining, because visibility will be reduced, the windows may become fogged-up, and the road will be slippery.
- Drive carefully when it starts to rain, because the road surface will be especially slippery.
- Refrain from high speeds when driving on an expressway in the rain, because there may be a layer of water between the tires and the road surface, preventing the steering and brakes from operating properly.

■ Engine speed while driving

In the following conditions, the engine speed may become high while driving. This is due to automatic up-shifting control or down-shifting implementation to meet driving conditions. It does not indicate sudden acceleration.

- The vehicle is judged to be driving uphill or downhill
- When the accelerator pedal is released

■ Breaking in your new Scion

To extend the life of the vehicle, observing the following precautions is recommended:

- For the first 200 miles (300 km): Avoid sudden stops.
- For the first 1000 miles (1600 km):
 - Do not drive at extremely high speeds.
 - Avoid sudden acceleration.
 - Do not drive continuously in low gears.
 - Do not drive at a constant speed for extended periods.

Operating your vehicle in a foreign country

Comply with the relevant vehicle registration laws and confirm the availability of the correct fuel. $(\rightarrow P. 352)$

When starting the vehicle

On vehicles with an automatic transmission, always keep your foot on the brake pedal while stopped with the engine running. This prevents the vehicle from creeping.

When driving the vehicle

- Do not drive if you are unfamiliar with the location of the brake and accelerator pedals to avoid depressing the wrong pedal.
 - · Accidentally depressing the accelerator pedal instead of the brake pedal will result in sudden acceleration that may lead to an accident that could result in death or serious injury.
 - · When backing up, you may twist your body around, leading to a difficulty in operating the pedals. Make sure to operate the pedals properly.
 - Make sure to keep a correct driving posture even when moving the vehicle only slightly. This allows you to depress the brake and accelerator pedals properly.
 - Depress the brake pedal using your right foot. Depressing the brake pedal using your left foot may delay response in an emergency, resulting in an accident.
- Do not drive the vehicle over or stop the vehicle near flammable materials. The exhaust system and exhaust gases can be extremely hot. These hot parts may cause a fire if there is any flammable material nearby.
- On vehicles with an automatic transmission, do not let the vehicle roll backward while the shift lever is in a driving position, or roll forward while the shift lever is in R.
 - Doing so may cause the engine to stall or lead to poor brake and steering performance, resulting in an accident or damage to the vehicle.
- If the smell of exhaust is noticed inside the vehicle, open the windows and check that the back door is closed. Large amounts of exhaust in the vehicle can cause driver drowsiness and an accident, resulting in death or a serious health hazard. Have the vehicle inspected by your Scion dealer immediately.

- On vehicles with an automatic transmission, do not shift the shift lever to P while the vehicle is moving.
 - Doing so can damage the transmission and may result in a loss of vehicle control
- Do not shift the shift lever to R while the vehicle is moving forward.
 Doing so can damage the transmission and may result in a loss of vehicle control.
- Do not shift the shift lever to D (vehicles with an automatic transmission) or 1 (vehicles with a manual transmission) while the vehicle is moving backward.
 - Doing so can damage the transmission and may result in a loss of vehicle control.
- Moving the shift lever to N while the vehicle is moving will disengage the engine from the transmission. Engine braking is not available when N is selected.
- During normal driving, do not turn off the engine. Turning the engine off while driving will not cause loss of steering or braking control, but the power assist to these systems will be lost. This will make it difficult to steer and brake, so you should pull over and stop the vehicle as soon as it is safe to do so.
 - However, in the event of an emergency, such as if it becomes impossible to stop the vehicle in the normal way: \rightarrow P. 346
- Use engine braking (downshift) to maintain a safe speed when driving down a steep hill.
 - Using the brakes continuously may cause the brakes to overheat and lose effectiveness. $(\rightarrow P. 135)$
- Do not adjust the position of the steering wheel, the seat, or the inside or outside rear view mirrors while driving.
 - Doing so may result in a loss of vehicle control that can cause accidents, resulting in death or serious injury.

CAUTION

- Always check that all passengers' arms, heads or other parts of their body are not outside the vehicle, as this may result in death or serious injury.
- Do not drive in excess of the speed limit. Even if the legal speed limit permits it, do not drive over 85 mph (140 km/h) unless your vehicle has highspeed capability tires. Driving over 85 mph (140 km/h) may result in tire failure, loss of control and possible injury. Be sure to consult a tire dealer to determine whether the tires on your vehicle are high-speed capability tires or not before driving at such speeds.

When driving on slippery road surfaces

- Sudden braking, acceleration and steering may cause tire slippage and reduce your ability to control the vehicle, resulting in an accident.
- Sudden changes in engine speed, such as engine braking caused by upshifting and down-shifting, may cause the vehicle to skid, resulting in an accident.
- After driving through a puddle, lightly depress the brake pedal to make sure that the brakes are functioning properly. Wet brake pads may prevent the brakes from functioning properly. If the brakes on only one side are wet and not functioning properly, steering control may be affected, resulting in an accident.

When shifting the shift lever

On vehicles with an automatic transmission, be careful not to shift the shift lever with the accelerator pedal depressed.

Shifting the shift lever to a gear other than P or N may lead to unexpected rapid acceleration of the vehicle that may cause an accident and result in death or serious injury.

■ If you hear a squealing or scraping noise (brake pad wear indicators)

Have the brake pads checked and replaced by your Scion dealer as soon as possible.

Rotor damage may result if the pads are not replaced when needed. It is dangerous to drive the vehicle when the wear limits of the brake pads and/or those of the brake discs are exceeded.

When the vehicle is stopped

- Do not race the engine.
 If the vehicle is in any gear other than P (vehicles with an automatic transmission only) or N, the vehicle may accelerate suddenly and unexpectedly, causing an accident.
- Do not leave the vehicle with the engine running for a long time.
 If such a situation cannot be avoided, park the vehicle in an open space and check that exhaust fumes do not enter the vehicle interior.
- On vehicles with an automatic transmission, in order to prevent accidents due to the vehicle rolling away, always keep depressing the brake pedal while the engine is running, and apply the parking brake as necessary.
- If the vehicle is stopped on an incline, in order to prevent accidents caused by the vehicle rolling forward or backward, always depress the brake pedal and securely apply the parking brake as needed.
- Avoid revving or racing the engine. Running the engine at high speed while the vehicle is stopped may cause the exhaust system to overheat, which could result in a fire if combustible material is nearby.

When the vehicle is parked

- Do not leave glasses, cigarette lighters, spray cans, or soft drink cans in the vehicle when it is in the sun.
 - Doing so may result in the following:
 - · Gas may leak from a cigarette lighter or spray can, and may lead to a
 - The temperature inside the vehicle may cause the plastic lenses and plastic material of glasses to deform or crack.
 - · Soft drink cans may fracture, causing the contents to spray over the interior of the vehicle, and may also cause a short circuit in the vehicle's electrical components.
- Do not leave cigarette lighters in the vehicle. If a cigarette lighter is in a place such as the glove box or on the floor, it may be lit accidentally when luggage is loaded or the seat is adjusted, causing a fire.
- Do not attach adhesive discs to the windshield or windows. Do not place containers such as air fresheners on the instrument panel or dashboard. Adhesive discs or containers may act as lenses, causing a fire in the vehi-
- Do not leave a door or window open if the curved glass is coated with a metallized film such as a silver-colored one. Reflected sunlight may cause the glass to act as a lens, causing a fire.
- Always apply the parking brake, shift the shift lever to P (vehicles with an automatic transmission only), stop the engine and lock the vehicle. Do not leave the vehicle unattended while the engine is running.

- Do not touch the exhaust pipe while the engine is running or immediately after turning the engine off.
 Doing so may cause burns.
- Do not leave the engine running in an area with snow build-up, or where it is snowing. If snowbanks build up around the vehicle while the engine is running, exhaust gases may collect and enter the vehicle. This may lead to death or a serious health hazard.

Exhaust gases

Exhaust gases include harmful carbon monoxide (CO), which is colorless and odorless. Inhaling exhaust gases may lead to death or a serious health hazard.

- If the vehicle is in a poorly ventilated area, stop the engine. In a closed area, such as a garage, exhaust gases may collect and enter the vehicle. This may lead to death or a serious health hazard.
- The exhaust system should be checked occasionally. If there is a hole or crack caused by corrosion, damage to a joint or abnormal exhaust noise, be sure to have the vehicle inspected and repaired by your Scion dealer. Failure to do so may allow exhaust gases to enter the vehicle, resulting in death or a serious health hazard.

When taking a nap in the vehicle

Always turn the engine off. Otherwise, if you accidentally move the shift lever or depress the accelerator pedal, this could cause an accident or fire due to engine overheating. Additionally, if the vehicle is parked in a poorly ventilated area, exhaust gases may collect and enter the vehicle, leading to death or a serious health hazard.

When braking

- •When the brakes are wet, drive more cautiously. Braking distance increases when the brakes are wet, and this may cause one side of the vehicle to brake differently than the other side. Also the parking brake may not securely hold the vehicle.
- If the power brake assist function does not operate, do not follow other vehicles closely and avoid hills or sharp turns that require braking. In this case, braking is still possible, but the brake pedal should be depressed more firmly than usual. Also, the braking distance will increase. Have your brakes fixed immediately.
- Do not pump the brake pedal if the engine stalls. Each push on the brake pedal uses up the reserve for the power-assisted brakes.
- The brake system consists of 2 individual hydraulic systems; if one of the systems fails, the other will still operate. In this case, the brake pedal should be depressed more firmly than usual and the braking distance will increase.

Have your brakes fixed immediately.

\triangle

NOTICE

When driving the vehicle

Automatic transmission

- Do not depress the accelerator and brake pedals at the same time during driving, as this may restrain driving torque.
- Do not use the accelerator pedal or depress the accelerator and brake pedals at the same time to hold the vehicle on a hill.

Manual transmission

- Do not depress the accelerator and brake pedals at the same time during driving, as this may restrain driving torque.
- Do not shift gears unless the clutch pedal is fully depressed. After shifting, do not release the clutch abruptly. Doing so may damage the clutch, transmission and gears.
- Observe the following to prevent the clutch from being damaged.
 - Do not rest your foot on the clutch pedal while driving.
 Doing so may cause clutch trouble.
 - Do not use any gears other than the 1st gear when starting off and moving forward.
 - Doing so may damage the clutch.
 - Do not use the clutch to hold the vehicle when stopping on an uphill grade.
 - Doing so may damage the clutch.
- Do not shift the shift lever to R when the vehicle is still moving. Doing so may damage the clutch, transmission and gears.

A

NOTICE

When parking the vehicle (vehicles with an automatic transmission)

Always put the shift lever in P. Failure to do so may cause the vehicle to move or the vehicle may accelerate suddenly if the accelerator pedal is accidentally depressed.

Avoiding damage to vehicle parts

- Do not turn the steering wheel fully in either direction and hold it there for an extended period of time.
 - Doing so may damage the power steering motor.
- When driving over bumps in the road, drive as slowly as possible to avoid damaging the wheels, underside of the vehicle, etc.

If you get a flat tire while driving

A flat or damaged tire may cause the following situations. Hold the steering wheel firmly and gradually depress the brake pedal to slow down the vehicle.

- It may be difficult to control your vehicle.
- The vehicle will make abnormal sounds or vibrations.
- The vehicle will lean abnormally.

Information on what to do in case of a flat tire. (\rightarrow P. 318)

<u>^</u>

NOTICE

When encountering flooded roads

Do not drive on a road that has flooded after heavy rain etc. Doing so may cause the following serious damage to the vehicle:

- Engine stalling
- Short in electrical components
- Engine damage caused by water immersion

In the event that you drive on a flooded road and the vehicle is flooded, be sure to have your Scion dealer check the following:

- Brake function
- Ochanges in quantity and quality of engine oil, and transaxle fluid etc.
- Lubricant condition for the bearings and suspension joints (where possible), and the function of all joints, bearings, etc.

Engine (ignition) switch

■ Starting the engine


Automatic transmission

- STEP 1 Check that the parking brake is set.
- STEP 2 Check that the shift lever is set in P.
- STEP 3 Firmly depress the brake pedal.
- Turn the engine switch to the "START" position to start the engine.

Manual transmission

- STEP 1 Check that the parking brake is set.
- STEP 2 Check that the shift lever is set in N.
- STEP 3 Firmly depress the clutch pedal.
- STEP 4 Turn the engine switch to the "START" position to start the engine.

■ Changing engine switch position

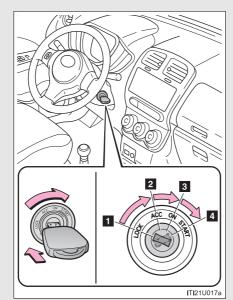

1 "LOCK"

The steering wheel is locked and the key can be removed. (Vehicles with an automatic transmission: The key can be removed only when the shift lever is in P.)

2 "ACC"

Some electrical components such as the power outlet can be used.

3 "ON"


All electrical components can be used.

4 "START"

For starting the engine.

■Turning the key from "ACC" to "LOCK"

STEP 1 Shift the shift lever to P (automatic transmission) or N (manual transmission). (→P. 134, 137)

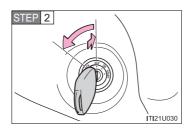


Push in the key and turn it to the "LOCK" position.

■ If the engine does not start

The engine immobilizer system may not have been deactivated. (→P. 69)

■When the steering lock cannot be released

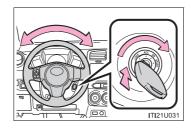

When starting the engine, the engine switch may seem stuck in the "LOCK" position. To free it, turn the key while turning the steering wheel slightly left and right.

■Key reminder buzzer

A buzzer sounds if the driver's door is opened while the engine switch is in the "LOCK" or "ACC" position to remind you to remove the key.

▲ CAUTION

■When starting the engine

Always start the engine while sitting in the driver's seat. Do not depress the accelerator pedal while starting the engine under any circumstances. Doing so may cause an accident resulting in death or serious injury.

Caution when driving

Do not turn the engine switch to the "LOCK" position while driving. If, in an emergency, you must turn the engine off while the vehicle is moving, turn the engine switch only to the "ACC" position to stop the engine. An accident may result if the engine is stopped while driving.



NOTICE

To prevent battery discharge

Do not leave the engine switch in the "ACC" or "ON" position for long periods of time without the engine running.


When starting the engine

- Do not crank the engine for more than 30 seconds at a time. This may overheat the starter and wiring system.
- Do not race a cold engine.
- If the engine becomes difficult to start or stalls frequently, have the engine checked immediately.

2-1. Driving procedures **Automatic transmission***

Select a shift position appropriate for the driving conditions.

■ Shifting the shift lever

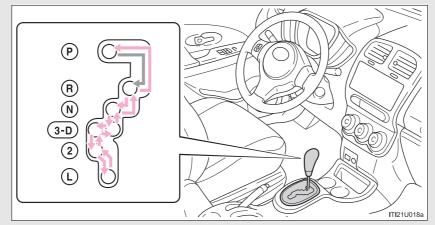

While the engine switch is in the "ON" position, move the shift lever with the brake pedal depressed.

When shifting the shift lever between P and D, make sure that the vehicle is completely stopped.

■ Shift position purpose

Shift position	Function
Р	Parking the vehicle/starting the engine
R	Reversing
N	Neutral
D	Normal driving*
3	Position for engine braking
2	Position for more powerful engine braking
L	Position for maximum engine braking

^{*:} Shifting to the D position allows the system to select a gear suitable for the driving conditions. Setting the shift lever to the D position is recommended for normal driving.

■ Driving on a downhill

On declines, there may be case where the vehicle shifts down automatically to obtain engine braking. As a result of the downshifting, the engine speed may increase.

■ Downshifting restrictions

The maximum allowable speeds are as follows.

mph (km/h)

Downshifting	Maximum speed
3 → 2	60 (97)
2 → L	29 (47)

■When driving with the cruise control system

Engine braking will not operate, even when downshifting to 3. (→P. 159)

■ If the shift lever cannot be shifted from P

→P. 333




■ When driving on slippery road surfaces

Do not accelerate or shift gears suddenly.

Sudden changes in engine braking may cause the vehicle to spin or skid, resulting in an accident.

2-1. Driving procedures Manual transmission*

■ Shifting the shift lever

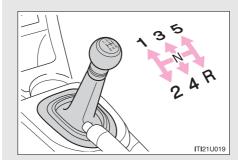

Fully depress the clutch pedal before operating the shift lever, and then release it slowly.

■ Maximum allowable speeds

Observe the downshifting speeds in the following table to prevent over-revving the engine.

mph (km/h)


Shift position	Maximum speed
1	34 (54)
2	63 (101)
3	92 (147)

*: If equipped

137

Turn signal lever

The turn signal lever can be used to show the following intentions of the driver:

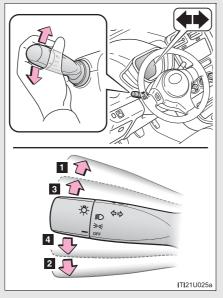

- Right turn
- 2 Left turn
- Lane change to the right (push and hold the lever partway)

The right hand signal will flash until you release the lever.

4 Lane change to the left (push and hold the lever partway)

The left hand signal will flash until you release the lever.


■Turn signals can be operated when

The engine switch is in the "ON" position.

■ If the indicator flashes faster than usual

Check that a light bulb in the front or rear turn signal lights has not burned out.

Parking brake

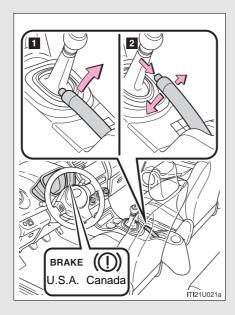

- Sets the parking brake Fully set the parking brake while depressing the brake pedal.
- Releases the parking brake Slightly raise the lever and lower it completely while pressing the button.

■ Usage in winter time

See "Winter driving tips" for parking brake usage in winter time. (→P. 175)




NOTICE

Before driving

Fully release the parking brake.

Driving the vehicle with the parking brake set will lead to brake components overheating, which may affect braking performance and increase brake wear.

Horn

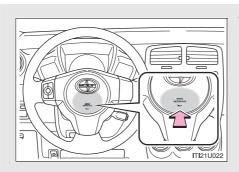


To sound the horn, press on or close to the mark.

■ After adjusting the steering wheel

Make sure that the steering wheel is securely locked. The horn may not sound if the steering wheel is not securely locked. $(\rightarrow P. 59)$

2-2. Instrument cluster

Gauges and meters

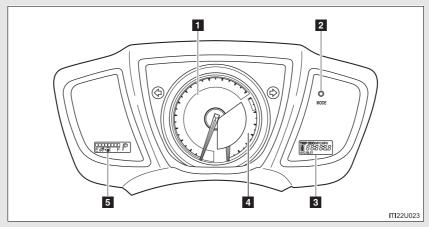

Speedometer

Displays the vehicle speed.

2 "MODE" button

Switches the multi-information display. Pushing and holding the button will reset the trip meter when the trip meter is being displayed.

Multi-information display

→P. 146

4 Tachometer


Displays the engine speed in revolutions per minute.

5 Fuel gauge

Displays the quantity of fuel remaining in the tank.

Instrument panel light control

The brightness of the instrument panel lights can be adjusted by turning the dial.

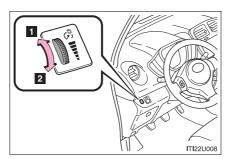

- Brighter
- 2 Darker

■The meters and display illuminate when

The engine switch is in the "ON" position.



NOTICE

To prevent damage to the engine and its components


- Do not let the indicator needle of the tachometer enter the red zone, which indicates the maximum engine speed.
- The engine may be overheating if the high engine coolant temperature warning light comes on. In this case, immediately stop the vehicle in a safe place, and check the engine after it has cooled completely. (→P. 341)

2-2. Instrument cluster


Indicators and warning lights

The indicators and warning lights on the instrument cluster and center panel inform the driver of the status of the vehicle's various systems.

Instrument cluster

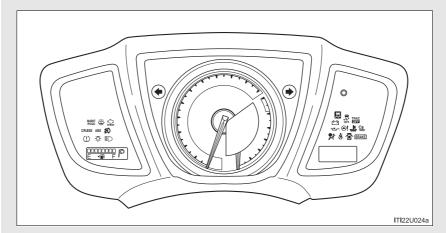

Center panel

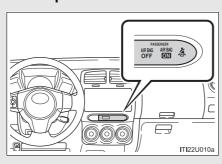

■ Indicators

The indicators inform the driver of the operating state of the vehicle's various systems.



Turn signal indicator (→P. 138)



Headlight indicator (→P. 150)



Headlight high beam indicator (→P. 152)



Tail light indicator (→P. 150)



Slip indicator (→P. 164)



Low engine coolant temperature indicator



VSC OFF indicator (→P. 165)

(vehicles with an automatic transmission)



Cruise control indicator (→P. 159)



Shift position indicators



"TRAC OFF" indicator (→P. 165)




"AIR BAG ON" and "AIR BAG OFF" indicator (→P. 88)

- *1: These lights turn on when the engine switch is turned to the "ON" position to indicate that a system check is being performed. They will turn off after the engine is started, or after a few seconds. There may be a malfunction in a system if a light does not come on, or if the lights do not turn off. Have the vehicle inspected by your Scion dealer for details.
- *2: The light flashes to indicate that the system is operating.

■ Warning lights

Warning lights inform the driver of malfunctions in any of the vehicle's systems. (\rightarrow P. 304)

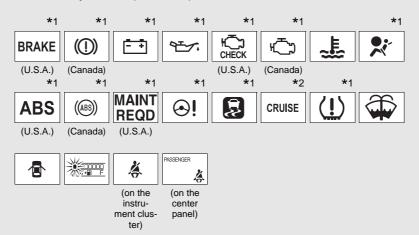

- *1: These lights turn on when the engine switch is turned to the "ON" position to indicate that a system check is being performed. They will turn off after the engine is started, or after a few seconds. There may be a malfunction in a system if a light does not come on, or if the lights do not turn off. Have the vehicle inspected by your Scion dealer.
- *2: The light flashes to indicate a malfunction.

If a safety system warning light does not come on


A CAUTION

Should a safety system light such as the ABS or SRS warning light not come on when you start the engine, this could mean that these systems are not available to help protect you in an accident, which could result in death or serious injury. Have the vehicle inspected by your Scion dealer immediately

if this occurs.

2-2. Instrument cluster Multi-information display


The multi-information display presents the driver with a variety of driving-related data.

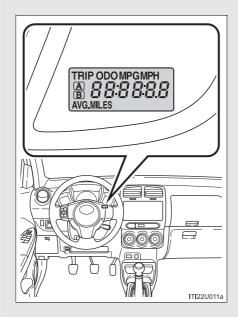

- Odometer/trip meter display (→P. 147)
- Trip information (→P. 147)
 Displays driving range, fuel consumption and other cruising-related information.
- Outside temperature display (→P. 148)

Indicates the outside temperature.

Switching the display

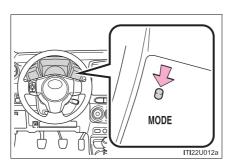

Display items can be switched by pressing the "MODE" button.

Odometer



Displays the total distance the vehicle has been driven.

Trip meters A and B



В

Displays the distance the vehicle has been driven since the meter was last reset. Trip meters A and B can be used to record and display different distances independently.

Press and hold the button to reset.

• Instantaneous fuel consumption



Displays the instantaneous fuel consumption.

Average fuel consumption



Displays the average fuel consumption since the vehicle was last refueled.

Use the displayed average fuel consumption as a reference.

Average vehicle speed



Displays the average vehicle speed since the engine was started.

Driving range



Displays the estimated maximum distance that can be driven with the quantity of fuel remaining.

- This distance is computed based on your average fuel consumption. As a result, the actual distance that can be driven may differ from that displayed.
- When only a small amount of fuel is added to the tank, the display may not be updated.
- Outside temperature display (if equipped)



C Displays the outside temperature.

The temperature range that can be displayed is from $-40^{\circ}F$ ($-40^{\circ}C$) to $122^{\circ}F$ ($50^{\circ}C$).

When the outside air temperature falls below 37°F (3°C) while driving, the temperature display flashes to indicate that the outside air temperature is becoming low.

■ When disconnecting and reconnecting battery terminals

The following information data will be reset:

- Instantaneous fuel consumption
- Average fuel consumption
- Average vehicle speed
- Driving range

■ Outside temperature display (if equipped)

- In the following situations, the correct outside temperature may not be displayed, or the display may take longer than normal to change.
 - When stopped, or driving at low speeds (less than 12 mph [20 km/h])
 - When the outside temperature has changed suddenly (at the entrance/ exit of a garage, tunnel, etc.)
- When "--" is displayed, the system may be malfunctioning. Have the vehicle inspected by your Scion dealer.

/\ N0

NOTICE

The multi-information display at low temperatures


Allow the interior of the vehicle to warm up before using the liquid crystal information display. At extremely low temperatures, the information display monitor may respond slowly, and display changes may be delayed.

2-3. Operating the lights and Windshield wipers Headlight switch

The headlights can be operated manually.

Turning the end of the lever turns on the lights as follows:

Type A

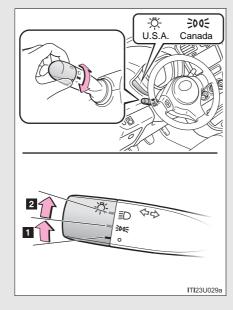


- The side marker, parking, tail, license plate and instrument panel lights turn on.

 Vehicles with day-time running light system:

 The daytime running
- The headlights and all lights listed above turn on.

light turn on.

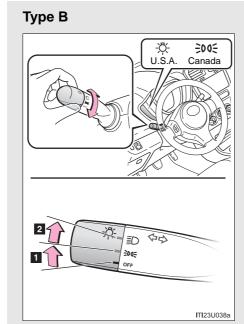


- The side marker, parking, tail, license plate and instrument panel lights turn on.

 Vehicles with day-time running light system:

 The daytime running light turn on.
- The headlights and all lights listed above turn on.

Turning on the high beam headlights

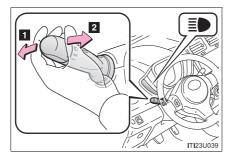

■ With the headlights on, push the lever away from you to turn on the high beams.

Pull the lever toward you to the center position to turn the high beams off.

2 Pull the lever toward you and release it to flash the high beams once.

You can flash the high beams with the headlights on or off.

■ Daytime running light system (if equipped)

- To make your vehicle more visible to other drivers, the headlights turn on automatically (at a reduced intensity) whenever the engine is started and the parking brake is released. Daytime running lights are not designed for use at night.
- Compared to turning on the headlights, the daytime running light system offers greater durability and consumes less electricity, so it can help improve fuel economy.

■Light reminder buzzer

A buzzer sounds when the driver's door is opened with the key removed from the engine switch while the lights are turned on.



NOTICE


To prevent battery discharge

Do not leave the lights on longer than necessary when the engine is not running.


2-3. Operating the lights and Windshield wipers Windshield wipers and washer

The wiper operation is selected by moving the lever as follows.


Type A

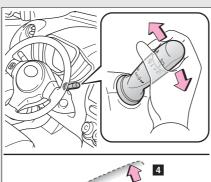


Intermittent windshield wiper operation

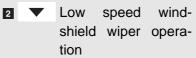


- High speed windshield wiper operation
- ▲ Temporary operation

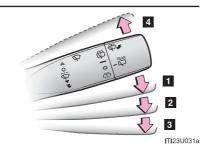


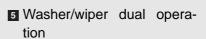

The wipers will automatically operate a couple of times after the washer squirts.

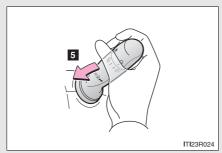

2-3. Operating the lights and Windshield wipers

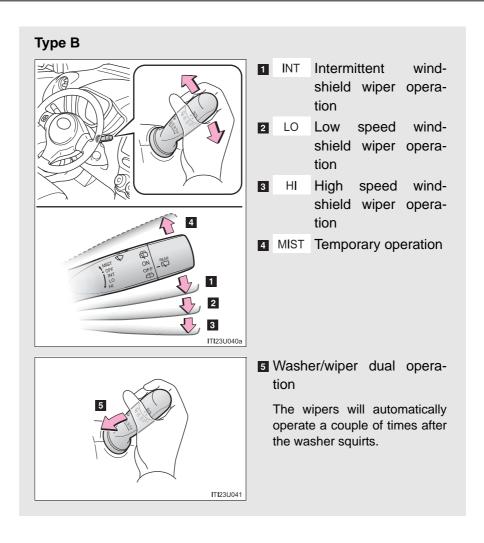

■ The windshield wipers and washer can be operated when

The engine switch is in the "ON" position.

■ If no windshield washer fluid sprays

Check that the washer nozzles are not blocked if there is washer fluid in the windshield washer fluid reservoir.



NOTICE

When the windshield is dry

Do not use the wipers, as they may damage the windshield.

When the washer fluid tank is empty


Do not operate the switch continually as the washer fluid pump may overheat.


When a nozzle becomes blocked

In this case, contact your Scion dealer.

Do not try to clear it with a pin or other object. The nozzle will be damaged.

2-3. Operating the lights and Windshield wipers Rear window wiper and washer

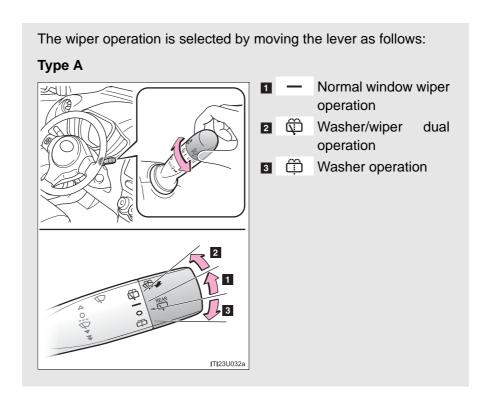

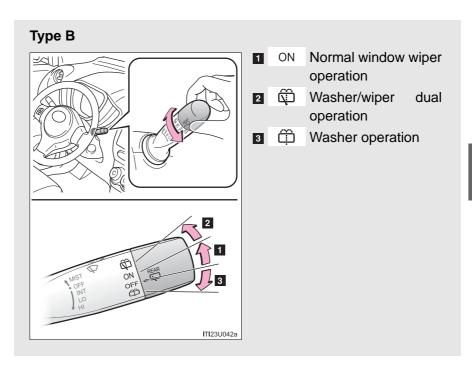

2-3. Operating the lights and Windshield wipers

■ The rear window wiper and washer can be operated when

The engine switch is in the "ON" position

■ If no washer fluid sprays

Check that the washer nozzle is not blocked if there is washer fluid in the washer fluid reservoir.

Λ

NOTICE

■When the rear window is dry


Do not use the wiper, as it may damage the rear window.

When the washer fluid tank is empty

Do not operate the switch continually as the washer fluid pump may overheat.


2-4. Using other driving systems Cruise control

Use the cruise control to maintain a set speed without depressing the accelerator pedal.

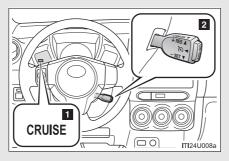


- 1 Indicator
- 2 Cruise control switch

■ Setting the vehicle speed

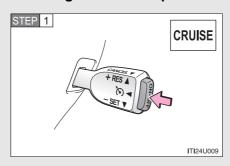

Press the "ON-OFF" button to activate the cruise control.

Press the button again to deactivate the cruise control.

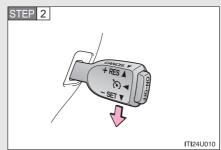


Accelerate or decelerate the vehicle to the desired speed, and push the lever down to set the speed.

The vehicle speed at the moment the lever is released becomes the set speed.

■ Adjusting the set speed

To change the set speed, operate the lever until the desired set speed is obtained.

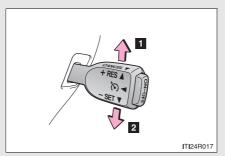

- 1 Increases the speed
- 2 Decreases the speed

Fine adjustment: Momentarily move the lever in the desired direction.


Large adjustment: Hold the lever in the desired direction.

The set speed will be increased or decreased as follows:

Fine adjustment: By approximately 1 mph (1.6 km/h) each time the lever is operated.

Large adjustment: The set speed can be increased or decreased continually until the lever is released.

■ Canceling and resuming the constant speed control

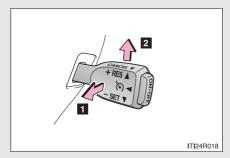

Pulling the lever toward you cancels the constant speed control.

The speed setting is also canceled when the brakes are applied or the clutch pedal (manual transmission only) is depressed.

Pushing the lever up resumes the constant speed control.

Resuming is available when the vehicle speed is more than approximately 25 mph (40 km/h).

■ Cruise control can be set when

- On vehicles with an automatic transmission, the shift lever is in the D or range 3 has been selected.
- Vehicle speed is above approximately 25 mph (40 km/h).

■ Accelerating

The vehicle can be accelerated normally. After acceleration, the set speed resumes.

■ Automatic cruise control cancelation

Cruise control will stop maintaining the vehicle speed in any of the following situations.

- Actual vehicle speed falls more than approximately 10 mph (16 km/h) below the preset vehicle speed.
 - At this time, the memorized set speed is not retained.
- Actual vehicle speed is below approximately 25 mph (40 km/h).
- VSC is activated.

■If the "CRUISE" indicator light flashes

Press the "ON-OFF" button once to deactivate the system, and then press the button again to reactivate the system.

If the cruise control speed cannot be set or if the cruise control cancels immediately after being activated, there may be a malfunction in the cruise control system. Have the vehicle inspected by your Scion dealer.

A CAUTION

■ To avoid operating the cruise control by mistake

Switch the cruise control off using the "ON-OFF" button when not in use.

■ Situations unsuitable for cruise control

Do not use cruise control in any of the following situations. Doing so may result in loss of control and could cause an accident resulting in death or serious injury.

- In heavy traffic
- On roads with sharp bends
- On winding roads
- On slippery roads, such as those covered with rain, ice or snow
- On steep hills
 Vehicle speed may exceed the set speed when driving down a steep hill.
- During emergency towing

2-4. Using other driving systems **Driving assist systems**

To help enhance driving safety and performance, the following systems operate automatically in response to various driving situations. Be aware, however, that these systems are supplementary and should not be relied upon too heavily when operating the vehicle.

■ ABS (Anti-lock Brake System)

Helps to prevent wheel lock when the brakes are applied suddenly, or if the brakes are applied while driving on a slippery road surface

■ Brake assist

Generates an increased level of braking force after the brake pedal is depressed when the system detects a panic stop situation

■ VSC (Vehicle Stability Control)

Helps the driver to control skidding when swerving suddenly or turning on slippery road surfaces


■ TRAC (Traction Control)

Helps to maintain drive power and prevent the drive wheels from spinning when starting the vehicle or accelerating on slippery roads

■ EPS (Electric Power Steering)

Employs an electric motor to reduce the amount of effort needed to turn the steering wheel

When the TRAC/VSC systems are operating

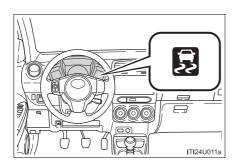

The slip indicator light will flash while the TRAC/VSC systems are operating.

164

Disabling the TRAC system


If the vehicle gets stuck in mud, dirt or snow, the TRAC system may

reduce power from the engine to the wheels. Pressing



to turn

the system off may make it easier for you to rock the vehicle in order to free it.

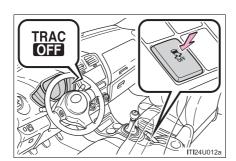

To turn the TRAC system off, quickly press and release



The "TRAC OFF" indicator light will come on.

Press again to turn the system back on.

■ Turning off both TRAC and VSC systems

To turn the TRAC and VSC systems off, press and hold $\,$



for more than

3 seconds while the vehicle is stopped.

The "TRAC OFF" indicator light and VSC OFF indicator light will come on.

Press



again to turn the systems back on.

■When the "TRAC OFF" indicator light comes on even if the VSC OFF switch has not been pressed

TRAC cannot be operated. Contact your Scion dealer.

■ Sounds and vibrations caused by the ABS, brake assist, TRAC and VSC systems

- A sound may be heard from the engine compartment when the brake pedal is depressed repeatedly, when the engine is started or just after the vehicle begins to move. This sound does not indicate that a malfunction has occurred in any of these systems.
- Any of the following conditions may occur when the above systems are operating. None of these indicates that a malfunction has occurred.
 - Vibrations may be felt through the vehicle body and steering.
 - A motor sound may be heard after the vehicle comes to a stop.
 - The brake pedal may pulsate slightly after ABS is activated.
 - The brake pedal may move down slightly after the ABS is activated.

■ EPS operation sound

When the steering wheel is operated, a motor sound (whirring sound) may be heard. This does not indicate a malfunction.

■ Automatic reactivation of TRAC and VSC systems

After turning the TRAC and VSC systems off, the systems will be automatically re-enabled in the following situations:

- When the engine switch is turned to the "LOCK" position
- If only the TRAC system is turned off, the TRAC will turn on when vehicle speed increases

If both the TRAC and VSC systems are turned off, automatic re-enabling will not occur when vehicle speed increases.

■ Reduced effectiveness of the EPS system

The effectiveness of the EPS system is reduced to prevent the system from overheating when there is frequent steering input over an extended period of time. The steering wheel may feel heavy as a result. Should this occur, refrain from excessive steering input or stop the vehicle and turn the engine off. The EPS system should return to normal within 10 minutes.

A CAUTION

■ The ABS does not operate effectively when

- The limits of tire gripping performance have been exceeded (such as excessively worn tires on a snow covered road).
- The vehicle hydroplanes while driving at high speed on the wet or slick roads

Stopping distance when the ABS is operating may exceed that of normal conditions

The ABS is not designed to shorten the vehicle's stopping distance. Always maintain a safe distance from the vehicle in front of you, especially in the following situations:

- When driving on dirt, gravel or snow-covered roads
- When driving with tire chains
- When driving over bumps in the road
- When driving over roads with potholes or uneven surfaces

TRAC may not operate effectively when

Directional control and power may not be achievable while driving on slippery road surfaces, even if the TRAC system is operating.

Drive the vehicle carefully in conditions where stability and power may be lost.

When VSC is activated

The slip indicator light flashes. Always drive carefully. Reckless driving may cause an accident. Exercise particular care when the indicator light flashes.

When the TRAC/VSC systems are turned off

Be especially careful and drive at a speed appropriate to the road conditions. As these are the systems to ensure vehicle stability and driving force, do not turn the TRAC/VSC systems off unless necessary.

A CAUTION

Replacing tires

Make sure that all tires are of the specified size, brand, tread pattern and total load capacity. In addition, make sure that the tires are inflated to the recommended tire inflation pressure level.

The ABS, TRAC and VSC systems will not function correctly if different tires are installed on the vehicle.

Contact your Scion dealer for further information when replacing tires or wheels.

Handling of tires and the suspension

Using tires with any kind of problem or modifying the suspension will affect the driving assist systems, and may cause a system to malfunction.

2-5. Driving information Cargo and luggage

Take notice of the following information about storage precautions, cargo capacity and load:

- Stow cargo and luggage in the luggage compartment whenever possible.
- Be sure all items are secured in place.
- To maintain vehicle balance while driving, position luggage evenly within the luggage compartment.
- For better fuel economy, do not carry unnecessary weight.

Capacity and distribution


Cargo capacity depends on the total weight of the occupants.

(Cargo capacity) = (Total load capacity) - (Total weight of occupants)

Steps for Determining Correct Load Limit —

- (1) Locate the statement "The combined weight of occupants and cargo should never exceed XXX kg or XXX lbs." on your vehicle's placard.
- (2) Determine the combined weight of the driver and passengers that will be riding in your vehicle.
- (3) Subtract the combined weight of the driver and passengers from XXX kg or XXX lbs.
- (4) The resulting figure equals the available amount of cargo and luggage load capacity.
 - For example, if the "XXX" amount equals 1400 lbs. and there will be five 150 lb passengers in your vehicle, the amount of available cargo and luggage load capacity is 650 lbs. (1400 750 (5 \times 150) = 650 lbs.)
- (5) Determine the combined weight of luggage and cargo being loaded on the vehicle. That weight may not safely exceed the available cargo and luggage load capacity calculated in Step 4.
- (6) If your vehicle will be towing a trailer, load from your trailer will be transferred to your vehicle. Consult this manual to determine how this reduces the available cargo and luggage load capacity of your vehicle. (→P. 180)
 - Scion does not recommend towing a trailer with your vehicle. Your vehicle is not designed for trailer towing.

Calculation formula for your vehicle

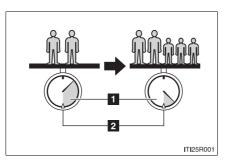

- Cargo capacity
- 2 Total load capacity (vehicle capacity weight) (→P. 350)

When 2 people with the combined weight of A lb. (kg) are riding in your vehicle, which has a total load capacity (vehicle capacity weight) of B lb. (kg), the available amount of cargo and luggage load capacity will be C lb. (kg) as follows:

$$B^{*2}$$
 lb. (kg) - A^{*1} lb. (kg) = C^{*3} lb. (kg)

- *1: A = Weight of people
- *2: B = Total load capacity
- *3: C = Available cargo and luggage load

In this condition, if 3 more passengers with the combined weight of D lb. (kg) get on, the available cargo and luggage load will be reduced E lb. (kg) as follows:

C lb. (kg) -
$$D^{*4}$$
 lb. (kg) = E^{*5} lb. (kg)

- *4: D = Additional weight of people
- *5: E = Available cargo and luggage load

As shown in the example above, if the number of occupants increases, the cargo and luggage load will be reduced by an amount that equals the increased weight due to the additional occupants. In other words, if an increase in the number of occupants causes an excess of the total load capacity (combined weight of occupants plus cargo and luggage load), you must reduce the cargo and luggage on your vehicle.

A CAUTION

Things that must not be carried in the luggage compartment

The following things may cause a fire if loaded in the luggage compartment:

- Receptacles containing gasoline
- Aerosol cans

Storage precautions

Observe the following precautions.

Failing to do so may result in death or serious injury.

- Stow cargo and luggage in the luggage compartment whenever possi-
- Do not stack anything in the luggage compartment higher than the seatbacks. Such items may be thrown about and possibly injure people in the vehicle in the event of sudden braking or in an accident.
- Do not place cargo or luggage in or on the following locations as the item may get under the clutch, brake or accelerator pedal and prevent the pedals from being depressed properly, block the driver's vision, or hit the driver or passengers, causing an accident:
 - At the feet of the driver
 - On the front passenger or rear seats (when stacking items)
 - On the instrument panel
 - · On the dashboard
 - · Auxiliary box or tray that has no lid

A CAUTION

- Secure all items in the occupant compartment, as they may shift and injure someone during sudden braking, sudden swerving or an accident.
- When you fold down the rear seats, long items should not be place directly behind the front seats.
- Never allow anyone to ride in the luggage compartment. It is not designed for passengers. They should ride in their seats with their seat belts properly fastened. Otherwise, they are much more likely to suffer death or serious bodily injury, in the event of sudden braking, sudden swerving or an accident.

■ Capacity and distribution

- Do not exceed the maximum axle weight rating or the total vehicle weight rating.
- Even if the total load of occupant's weight and the cargo load is less than the total load capacity, do not apply the load unevenly.
 Improper loading may cause deterioration of steering or braking control which may cause death or serious injury.

2-5. Driving information Vehicle load limits

Vehicle load limits include total load capacity, seating capacity, towing capacity and cargo capacity.

■ Total load capacity (vehicle capacity weight): (→P. 350)

Total load capacity means the combined weight of occupants, cargo and luggage.

■ Seating capacity: 5 occupants (Front 2, Rear 3)

Seating capacity means the maximum number of occupants whose estimated average weight is 150 lb. (68 kg) per person.

■ Towing capacity

Scion does not recommend towing a trailer with your vehicle.

■ Cargo capacity

Cargo capacity may increase or decrease depending on the weight and the number of occupants.

■ Total load capacity and seating capacity

These details are also described on the tire and loading information label. (→P. 261)



▲ CAUTION

Overloading the vehicle

Do not overload the vehicle.

It may not only cause damage to the tires, but also degrade steering and braking ability, resulting in an accident.

2-5. Driving information Winter driving tips

Carry out the necessary preparations and inspections before driving the vehicle in winter. Always drive the vehicle in a manner appropriate to the prevailing weather conditions.

■ Pre-winter preparations

- Use fluids that are appropriate to the prevailing outside temperatures.
 - · Engine oil
 - · Engine coolant
 - · Washer fluid
- Have a service technician inspect the level and specific gravity of battery electrolyte.
- Have the vehicle fitted with four snow tires or purchase a set of tire chains for the front tires.

Ensure that all tires are the same size and brand, and that chains match the size of the tires.

■ Before driving the vehicle

Perform the following according to the driving conditions:

- Do not try to forcibly open a window or move a wiper that is frozen. Pour warm water over the frozen area to melt the ice.
 Wipe away the water immediately to prevent it from freezing.
- To ensure proper operation of the climate control system fan, remove any snow that has accumulated on the air inlet vents in front of the windshield.
- Remove any ice that has accumulated on the vehicle chassis.
- Periodically check for and remove any excess ice or snow that may have accumulated in the wheel well or on the brakes.

■ When driving the vehicle


Accelerate the vehicle slowly and drive at a reduced speed suitable to the road conditions.

■ When parking the vehicle (in the winter time or in the cold latitudes)

Park the vehicle and move the shift lever to P (automatic transmission) or 1 or R (manual transmission) without setting the parking brake. The parking brake may freeze up, preventing it from being released. If necessary, block the wheels to prevent inadvertent sliding or creeping.

Selecting tire chains

Use the correct tire chain size when mounting the tire chains. Chain size is regulated for each size.

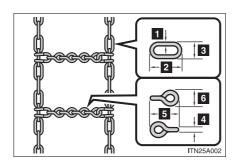

Side chain:

- **1** 0.12 in. (3.0 mm)
- **2** 1.18 in. (30.0 mm)
- 3 0.39 in. (10.0 mm)

Cross chain:

- 4 0.16 in. (4.0 mm)
- 5 0.98 in. (25.0 mm)
- 6 0.55 in. (14.0 mm)

Regulations on the use of tire chains

Regulations regarding the use of tire chains vary depending on location and type of road. Always check local regulations before installing chains.

■ Tire chain installation

Observe the following precautions when installing and removing chains:

- Install and remove tire chains in a safe location.
- Install tire chains on the front tires only. Do not install tire chains on the rear tires.
- Install tire chains on front tires as tightly as possible. Retighten chains after driving 1/4 1/2 mile (0.5 1.0 km).
- Install tire chains following the instructions provided with the tire chains.

A CAUTION

Driving with snow tires

Observe the following precautions to reduce the risk of accidents. Failure to do so may result in a loss of vehicle control and cause death or serious injury.

- Use tires of the size specified.
- Maintain the recommended level of air pressure.
- Do not drive in excess of 75 mph (120 km/h), regardless of the type of snow tires being used.
- Use snow tires on all, not just some wheels.

Driving with tire chains

Observe the following precautions to reduce the risk of accidents. Failure to do so may result in the vehicle being unable to be driven safely, and may cause death or serious injury.

- Do not drive in excess of the speed limit specified for the tire chains being used, or 30 mph (50 km/h), whichever is lower.
- Avoid driving on bumpy road surfaces or over potholes.
- Avoid sudden turns and braking, as use of chains may adversely affect vehicle handling.
- Slow down sufficiently before entering a curve to ensure that vehicle control is maintained.

↑ NOTICE

Repairing or replacing snow tires

Request repairs or replacement of snow tires from Scion dealers or legitimate tire retailers.


This is because the removal and attachment of snow tires affects the operation of the tire pressure warning valves and transmitters.

Fitting tire chains

The tire pressure warning valves and transmitters may not function correctly when tire chains are fitted.

2-5. Driving information **Trailer towing**


Scion does not recommend towing a trailer with your vehicle. Scion also does not recommend the installation of a tow hitch or the use of a tow hitch carrier for a wheelchair, scooter, bicycle, etc. Your vehicle is not designed for trailer towing or for the use of tow hitch mounted carriers.

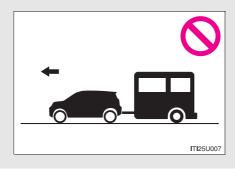

2-5. Driving information

Dinghy towing (automatic transmission)

Your vehicle is not designed to be dinghy towed (with 4 wheels on the ground) behind a motor home.

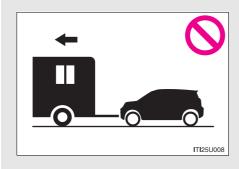

↑ NOTICE


■ To avoid serious damage to your vehicle

Do not tow your vehicle with four wheels on the ground.

2-5. Driving information

Dinghy towing (manual transmission)

Your vehicle can be dinghy towed in a forward direction (with 4 wheels on the ground) behind a motor home.

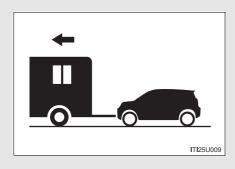

Towing your vehicle with 4 wheels on the ground

To prevent damage to your vehicle, perform the following procedures before towing:

- STEP 1 Shift the shift lever to N.
- Turn the engine switch to the "ACC" position. (→P. 130)

 Ensure that the audio system and other powered devices are turned off.
- STEP 3 Release the parking brake.

After towing, leave the engine in idle for at least 3 minutes before driving the vehicle.

■ Necessary equipment and accessories

Specialized equipment and accessories are required for dinghy towing. Contact the service branch of the motor home manufacturer regarding recommended equipment.



Dinghy towing direction




Do not tow the vehicle backward. Doing so may cause serious damage.

■To prevent the steering from locking

Ensure the engine switch is in the "ACC" position.

184

3-1. Using the air conditioning system and defogger Air conditioning system

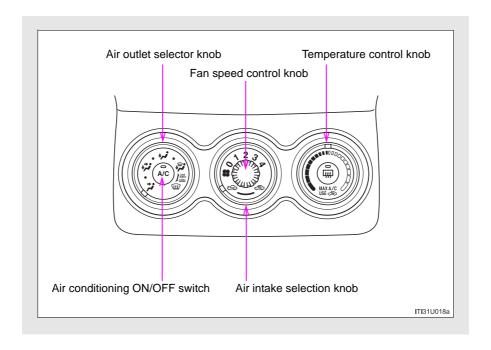


Adjusting the settings

■ Basic setting


- STEP 1 To turn on the air conditioning system and adjust the fan speed, turn the fan speed control knob clockwise (increase) or counterclockwise (decrease).
 - Turning the knob to "0" turns off the fan.
- To adjust the temperature setting, turn the temperature control knob clockwise (warm) or counterclockwise (cool).
 - If (ac) is not pressed, the system will blow ambient temperature air or heated air.
- STEP 3 To select the air outlets, set the air outlet selector knob to the desired position.

The positions between the air outlet selections shown below can also be selected for more delicate adjustment.


3-1. Using the air conditioning system and defogger

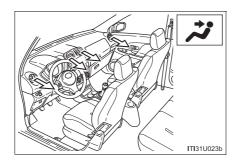


Air flows to the upper body.

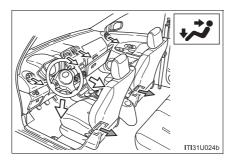

Air flows to the upper body and feet.

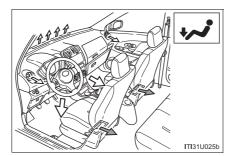


Air flows to the feet.

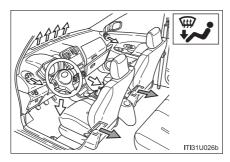

Air flows to the feet and the windshield defogger operates.


Set the air intake selection knob to (outside air) mode.

Pressing (\vec{R}) to turn the cooling and dehumidification function on clears the windshield and side windows faster.

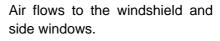

Set the air intake selection knob to (outside air) mode.

Pressing $\widehat{\mathbb{A}^{\mathbb{Z}}}$ to turn the cooling and dehumidification function on clears the windshield and side windows faster.

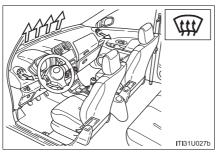

■ Selecting the air intake modes


Turn air intake selection knob to (outside air) mode or



(recirculated air) mode.


Adjusting the position of the air outlets

Center outlets

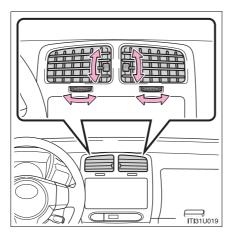

Direct air flow to the left or right, up or down.


Right and left side outlets

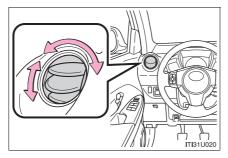

Direct air flow to the left or right, up or down.


Opening and closing the air outlets

Center outlets

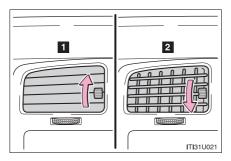

- 1 Open the vent.
- 2 Close the vent.

Right and left side outlets

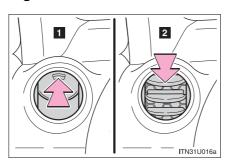

- 1 Open the vent.
- 2 Close the vent.

■Using the system in recirculated air mode

The windows will fog up more easily if recirculated air mode is used for an extended period of time.

■When ⇒ is selected for the air outlets used

For your driving comfort, air flowing to the feet may be warmer than air flowing to the upper body depending on the temperature setting.

■ When outside air temperature is below 32°F (0°C)

The cooling and dehumidification function may not operate even when (is pressed.

■ Air conditioning odors

- During use, various odors from inside and outside the vehicle may enter into and accumulate in the air conditioning system. This may then cause odor to be emitted from the vents.
- To reduce potential odors from occurring: It is recommended that the air conditioning system be set to outside air mode prior to turning the vehicle off.



To prevent the windshield from fogging up

Do not use word during cool air operation in extremely humid weather. The difference between the temperature of the outside air and that of the windshield can cause the outer surface of the windshield to fog up, blocking your vision.


№ NOTICE

To prevent battery discharge

Do not leave the air conditioning system on longer than necessary when the engine is stopped.

3-1. Using the air conditioning system and defogger Rear window and outside rear view mirror defoggers*

Defoggers are used to defog the rear window, and to remove raindrops, dew and frost from the outside rear view mirrors.

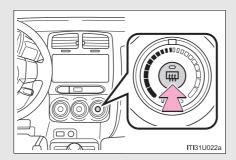

On/off

The defoggers will automatically turn off after approximately 15 minutes. Pressing the switch again also turns the rear window defogger off.

■ The defoggers can be operated when

The engine switch is in the "ON" position.

■ The outside rear view mirror defoggers (if equipped)

Turning the rear window defogger on will turn the outside rear view mirror defoggers on.



A CAUTION

When the outside rear view mirror defoggers are on (if equipped)

Do not touch the outside surface of the rear view mirrors, as they can become very hot and burn you.


*: If equipped

193

3-2. Using the audio system Using the AUX port/USB port

This port can be used to connect a portable audio device and listen to it through the vehicle's speakers.

For more information, please refer to the "SCION Audio System Owner's Manual" or "SCION Navigation System Owner's Manual".

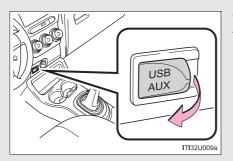

Open the cover and connect the portable audio device.


Interior features

3-2. Using the audio system

Using the steering wheel audio switches

Some audio features (audio volume control, radio, CD player etc.) can be controlled using the switches on the steering wheel.

For more information, please refer to the "SCION Audio System Owner's Manual" or "SCION Navigation System Owner's Manual".

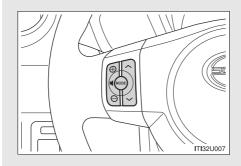

A CAUTION


To reduce the risk of an accident

Exercise care when operating the audio switches on the steering wheel.


3-2. Using the audio system Using the microphone

The microphone can be used for the voice command in the ${\sf Bluetooth}^{\it \textcircled{B}}$ audio system or the hands-free phone system.

For more information, please refer to the "SCION Audio System Owner's Manual" or "SCION Navigation System Owner's Manual".

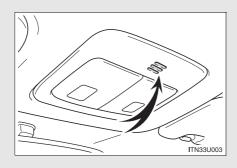


3-3. Using the interior lights **Interior lights list**

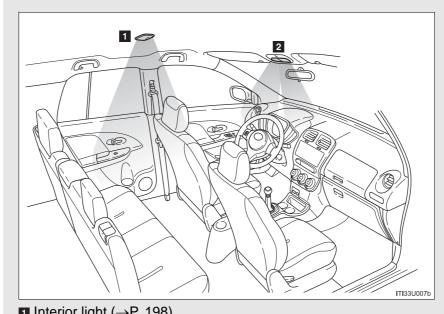

- Interior light (→P. 198)
- 2 Personal lights (→P. 198)

Interior light

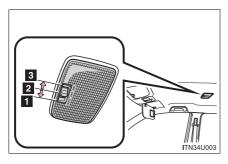


1 "DOOR"

The interior light comes on when any of the side doors is opened. They turn off when all the side doors are closed.

- 2 "OFF"
- 3 "ON"

Personal lights

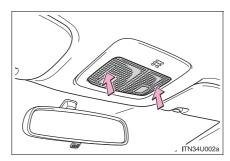

On/off

■Illuminated entry system

The lights automatically turn on/off according to the engine switch position, whether the doors are locked/unlocked, and whether the doors are open/closed.

■To prevent the battery discharged


If the interior light remain on when the door is not fully closed and the interior light switch is in the "DOOR" position, the lights will go off automatically after 20 minutes.

■ Customization

Settings (e.g. The time elapsed before lights turn off) can be changed. (Customizable features: \rightarrow P. 378)

198

3-4. Using the storage features List of storage features

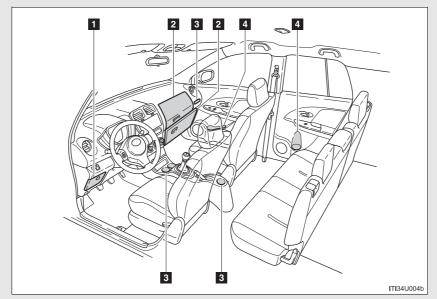

- Auxiliary boxes
- 2 Glove boxes
- 3 Cup holders
- 4 Bottle holders

A CAUTION


Items that should not be left in the storage spaces

Do not leave glasses, lighters or spray cans in the storage spaces, as this may cause the following when cabin temperature becomes high:

- Glasses may be deformed by heat or cracked if they come into contact with other stored items.
- Lighters or spray cans may explode. If they come into contact with other stored items, the lighter may catch fire or the spray can may release gas, causing a fire hazard.


Glove boxes

Lower glove box

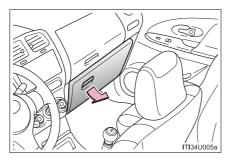

Pull up the lever to open the glove box.

Upper glove box

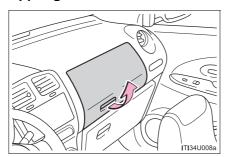


Pull up the lever.




Caution while driving

Keep the glove boxes closed. In the event of sudden braking or sudden swerving, an accident may occur due to an occupant being struck by the open glove boxes or the items stored inside.

Front

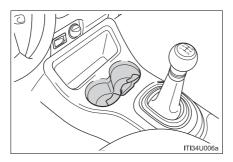


Front passenger's side

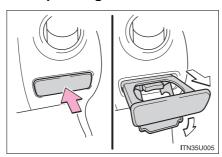

Pull on the lid.

Interior features

Rear

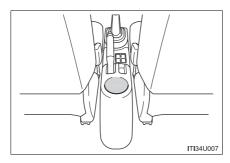



A CAUTION

Items unsuitable for the cup holders

Do not place anything other than cups or aluminum cans in the cup holders. Other items may be thrown out of the holders in the event of an accident, sudden braking or sudden swerving, causing injury. If possible, cover hot drinks to prevent burns.

When not in use (front passenger's side cup holder only)

Keep the cup holder closed. In the event of sudden braking or sudden swerving, an accident may occur due to an occupant being struck by the open cup holder or the items stored inside.




NOTICE

To prevent damage to the front passenger's side cup holder

Be careful not to subject the cup holder to an impact.

Failure to do so may unfix the cup holder. Reattach them if they are unfixed.

Auxiliary box

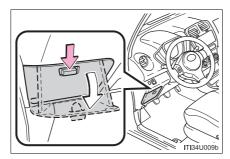

Press the knob then pull the lid down.

A CAUTION

Caution while driving


Keep the auxiliary box closed. In the event of sudden braking or sudden swerving, an accident may occur due to an occupant being struck by the open auxiliary box or the items stored inside.

2

Interior features

Bottle holders

Front

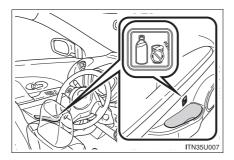

Rear



■When using the holder as a bottle holder

- When storing a bottle, close the cap.
- The bottle may not be stored depending on its size or shape.




NOTICE

Items that should not be stowed in the bottle holders

Do not place open bottles in the bottle holders, or glasses and paper cups containing liquid. The contents may spill and glasses may break.


204

3-5. Other interior features **Sun visors**

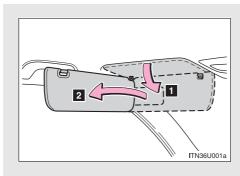

- 1 Forward position: Flip down.
- Side position:
 Flip down, unhook, and swing to the side.


3-5. Other interior features **Vanity mirrors**

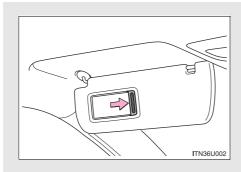

Slide the cover to open.

3-5. Other interior features

Clock

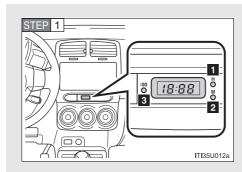


- 1 Adjusts the hour.
- 2 Adjusts the minutes.
- Rounds to the nearest hour.*
 - *: e.g. 1:00 to 1:29 \rightarrow 1:00 1:30 to 1:59 \rightarrow 2:00

■ When disconnecting and reconnecting battery terminals

The time display will automatically be set to 1:00.

3-5. Other interior features **Power outlet**

The power outlet can be used for 12 V accessories that run on less than 10 A.

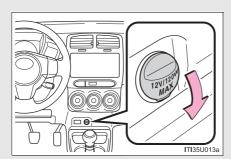

Open the lid.

■The power outlet can be used when

The engine switch is in the "ACC" or "ON" position.



NOTICE

■ To avoid damaging the power outlet

Close the power outlet lid when the power outlet is not in use.

Foreign objects or liquids that enter the power outlet may cause a short circuit.

■To prevent blown fuse

Do not use an accessory that uses more than 12 V 10 A.


■To prevent battery discharge

Do not use the power outlet longer than necessary when the engine is not running.

3-5. Other interior features

Assist grips

An assist grip installed on the ceiling can be used to support your body while sitting on the seat.

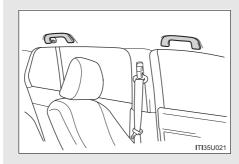

A CAUTION

Assist grip

Do not use the assist grip when getting in or out of the vehicle or rising from your seat.


NOTICE

To prevent damage of the assist grip


Do not hang any heavy object or put a heavy load on the assist grip.

3-5. Other interior features **Floor mat**

Use only floor mats designed specifically for vehicles of the same model and model year as your vehicle. Fix them securely in place onto the carpet.

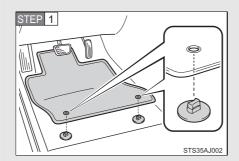

Insert the retaining hooks (clips) into the floor mat eyelets.

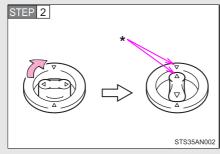

Turn the upper knob of each retaining hook (clip) to secure the floor mats in place.

*: Always align the \triangle marks.

The shape of the retaining hooks (clips) may differ from that shown in the illustration.

A CAUTION


Observe the following precautions.

Failure to do so may cause the driver's floor mat to slip, possibly interfering with the pedals while driving. An unexpectedly high speed may result or it may become difficult to stop the vehicle, leading to a serious accident.

When installing the driver's floor mat

- Do not use floor mats designed for other models or different model year vehicles, even if they are Scion Genuine floor mats.
- Only use floor mats designed for the driver's seat.
- Always install the floor mat securely using the retaining hooks (clips) pro-
- Do not use two or more floor mats on top of each other.
- Do not place the floor mat bottom-side up or upside-down.

Before driving

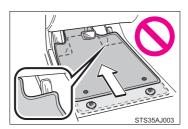


- Check that the floor mat is securely fixed in the correct place with all the provided retaining hooks (clips). Be especially careful to perform this check after cleaning the floor.
- With the engine stopped and the shift lever in P (automatic transmission) or N (manual transmission), fully depress each pedal to the floor to make sure it does not interfere with the floor mat.

3-5. Other interior features


Luggage compartment features

■ Cargo hooks

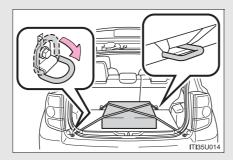

The cargo hooks are provided for securing loose items.


■ Auxiliary boxes

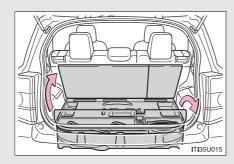

Lift the luggage mat up to use the boxes.

■ Removing the luggage cover (if equipped)

The luggage cover can be removed by following the procedure below.

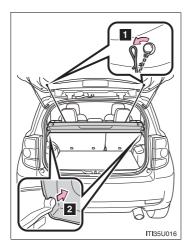

- 1 Unhook the cords.
- 2 Remove the cover out of the retainers.

▲ CAUTION

■ When the cargo hooks are not in use

To avoid injury, always return the cargo hooks to their stowed positions.

While driving

Do not place anything on the luggage cover. Such items may be thrown about and possibly injure people in the vehicle during sudden braking or an accident.

3-5. Other interior features

Maintenance and care	4
4-1. Maintenance and care Cleaning and protecting the vehicle exterior	4-2. Maintenance Maintenance requirements
	215

4-1. Maintenance and care

Cleaning and protecting the vehicle exterior

Perform the following to protect the vehicle and maintain it in prime condition.

- Working from top to bottom, liberally apply water to the vehicle body, wheel wells and underside of the vehicle to remove any dirt and dust.
- Wash the vehicle body using a sponge or soft cloth, such as a chamois.
- For hard-to-remove marks, use car wash soap and rinse thoroughly with water.
- Wipe away any water.
- Wax the vehicle when the waterproof coating deteriorates.
 If water does not bead on a clean surface, apply wax when the vehicle body is cool.

■ Automatic car washes

- Fold the mirrors and remove the antenna before washing the vehicle. Start washing from the front of the vehicle. Make sure to re-install the antenna and extend the mirrors before driving.
- Brushes used in automatic car washes may scratch the vehicle surface and harm your vehicle's paint.

■ High pressure car washes

- Do not allow the nozzles of the car wash to come within close proximity of the windows.
- Before using the car wash, check that the fuel filler door on your vehicle is closed properly.

■Bumpers

Do not scrub with abrasive cleaners.

A CAUTION

When washing the vehicle

Do not apply water to the inside of the engine compartment. Doing so may cause the electrical components etc. to catch fire.

Precautions regarding the exhaust pipe

Exhaust gasses cause the exhaust pipe to become quite hot.

When washing the vehicle, be careful not to touch the pipe until it has cooled sufficiently, as touching a hot exhaust pipe can cause burns.

Λ

NOTICE

To prevent paint deterioration and corrosion on the body and components (wheels etc.)

- Wash the vehicle immediately in the following cases:
 - After driving near the sea coast
 - After driving on salted roads
 - If coal tar or tree sap is present on the paint surface
 - If dead insects, insect droppings or bird droppings are present on the paint surface
 - After driving in an area contaminated with soot, oily smoke, mine dust, iron powder or chemical substances
 - If the vehicle becomes heavily soiled with dust or mud
 - If liquids such as benzene and gasoline are spilled on the paint surface
- If the paint is chipped or scratched, have it repaired immediately.
- To prevent the wheels from corroding, remove any dirt and store in a place with low humidity when storing the wheels.

Cleaning the exterior lights

- Wash carefully. Do not use organic substances or scrub with a hard brush.
 This may damage the surfaces of the lights.
- Do not apply wax to the surfaces of the lights.
 Wax may cause damage to the lenses.

Antenna installation and removal precautions

- Before driving, ensure that the antenna is installed.
- When the antenna is removed, such as before entering an automatic car wash, make sure to store it in a suitable place so as not to lose it. Also, before driving, make sure to reinstall the antenna in its original position.

4-1. Maintenance and care

Cleaning and protecting the vehicle interior

The following procedures will help protect your vehicle's interior and keep it in top condition:

■ Protecting the vehicle interior

Remove dirt and dust using a vacuum cleaner. Wipe dirty surfaces with a cloth dampened with lukewarm water.

■ Shampooing the carpets

There are several commercial foaming-type cleaners available. Use a sponge or brush to apply the foam. Rub in overlapping circles. Do not use water. Wipe dirty surfaces and let them dry. Excellent results are obtained by keeping the carpet as dry as possible.

■ Seat belts

Clean with mild soap and lukewarm water using a cloth or sponge. Also check the belts periodically for excessive wear, fraying or cuts.



A CAUTION

Water in the vehicle

- Do not splash or spill liquid in the vehicle. Doing so may cause electrical components etc. to malfunction or catch
- Do not get any of the SRS components or wiring in the vehicle interior wet. (→P. 76)

An electrical malfunction may cause the airbags to deploy or not function properly, resulting in death or serious injury.

Cleaning the interior (especially instrument panel)

Do not use polish wax or polish cleaner. The instrument panel may reflect off the windshield, obstructing the driver's view and leading to an accident, resulting in death or serious injury.

\triangle

NOTICE

Cleaning detergents

- Do not use the following types of detergent, as they may discolor the vehicle interior or cause streaks or damage to painted surfaces:
 - Non-seat portions: Organic substances such as benzene or gasoline, alkaline or acidic solutions, dve, and bleach
 - Seats: Alkaline or acidic solutions, such as thinner, benzene, and alcohol
- Do not use polish wax or polish cleaner. The instrument panel's or other interior part's painted surface may be damaged.

Water on the floor

Do not wash the vehicle floor with water.

Vehicle systems such as the audio system may be damaged if water comes into contact with electrical components such as the audio system above or under the floor of the vehicle. Water may also cause the body to rust.

Cleaning the inside of the rear window

- Do not use glass cleaner to clean the rear window, as this may cause damage to the rear window defogger heater wires. Use a cloth dampened with lukewarm water to gently wipe the window clean. Wipe the window in strokes running parallel to the heater wires.
- Be careful not to scratch or damage the heater wires.

4-2. Maintenance

Maintenance requirements

To ensure safe and economical driving, day-to-day care and regular maintenance is essential. It is the owner's responsibility to perform regular checks. Scion recommends performing the following maintenance:

■ General maintenance

General maintenance should be performed on a daily basis. This can be done by yourself or by a Scion dealer.

■ Scheduled maintenance

Scheduled maintenance should be performed at specified intervals according to the maintenance schedule.

For details about maintenance items and schedules, refer to the "Scheduled Maintenance Guide" or "Owner's Manual Supplement".

■ Do-it-yourself maintenance

You can perform some maintenance procedures by yourself. Please be aware that do-it-yourself maintenance may affect warranty coverage.

The use of Scion Repair Manuals is recommended.

For details about warranty coverage, see the separate "Owner's Warranty Information Booklet" or "Owner's Manual Supplement".

■ Repair and replacement

It is recommended that genuine Scion parts be used for repairs to ensure performance of each system. If non-Scion parts are used in replacement or if a repair shop other than a Scion dealer performs repairs, confirm the warranty coverage.

■ Reset the maintenance data (U.S.A. only)

After the required maintenance is performed according to the maintenance schedule, please reset the maintenance data.

To reset the data, follow the procedures described below:

- STEP 1 Switch the display to the odometer. (\rightarrow P. 141)
- STEP 2 Turn the engine switch to the "LOCK" position.
- While pressing the "MODE" button (→P. 146), turn the engine switch to the "ON" position (but do not start the engine because otherwise the reset mode will be canceled). Continue to press and hold the button until the trip meter displays "000000".

■ Allow inspection and repairs to be performed by a Scion dealer

- Scion technicians are well-trained specialists and are kept up to date with the latest service information. They are well informed about the operations of all systems on your vehicle.
- Keep a copy of the repair order. It proves that the maintenance that has been performed is under warranty coverage. If any problem should arise while your vehicle is under warranty, your Scion dealer will promptly take care of it.

A CAUTION

If your vehicle is not properly maintained

Improper maintenance could result in serious damage to the vehicle and possible serious injury or death.

Handling of the battery

- Engine exhaust, some of its constituents, and a wide variety of automobile components contain or emit chemicals known to the State of California to cause cancer and birth defects and other reproductive harm. Work in a well ventilated area.
- Oils, fuels and fluids contained in vehicles as well as waste produced by component wear contain or emit chemicals known to the State of California to cause cancer and birth defects or other reproductive harm. Avoid exposure and wash any affected area immediately.
- Battery posts, terminals and related accessories contain lead and lead compounds which are known to cause brain damage. Wash your hands after handling. (→P. 248)

4-2. Maintenance

General maintenance

Listed below are the general maintenance items that should be performed at the intervals specified in the "Owner's Warranty Information Booklet" or "Owner's Manual Supplement/Scheduled Maintenance Guide". It is recommended that any problem you notice should be brought to the attention of your Scion dealer or qualified service shop for advice.

Engine compartment

Items	Check points
Battery	Check the connections. (→P. 248)
Brake fluid	Is the brake fluid at the correct level? (→P. 245)
Engine coolant	Is the engine coolant at the correct level? (→P. 243)
Engine oil	Is the engine oil at the correct level? (→P. 238)
Exhaust system	There should not be any fumes or strange sounds.
Radiator/condenser	The radiator and condenser should be free from foreign objects. (→P. 245)
Washer fluid	Is there sufficient washer fluid? (→P. 250)

Vehicle interior

Items	Check points
Accelerator pedal	The accelerator pedal should move smoothly (without uneven pedal effort or catching).
Automatic transmission "Park" mechanism	 When parked on a slope and the shift lever is in P, is the vehicle securely stopped?
Brake pedal	 Does the brake pedal move smoothly? Does the brake pedal have appropriate clearance from the floor? Does the brake pedal have the correct amount of free play?
Clutch pedal	 Does the clutch pedal move smoothly? Does the clutch pedal have appropriate clearance from the floor? Does the clutch pedal have the correct amount of free play?
Brakes	 The vehicle should not pull to one side when the brakes are applied. The brakes should work effectively. The brake pedal should not feel spongy. The brake pedal should not get too close to the floor when the brakes are applied.
Head restraints	Do the head restraints move smoothly and lock securely?

Items	Check points
Indicators/buzzers	Do the indicators and buzzers function properly?
Lights	Do all the lights come on?
Parking brake	 Does the parking brake lever or pedal move smoothly? When parked on a slope and the parking brake is on, is the vehicle securely stopped?
Seat belts	Do the seat belts operate smoothly?The seat belts should not be damaged.
Seats	Do the seat controls operate properly?
Steering wheel	 Does the steering wheel rotate smoothly? Does the steering wheel have the correct amount of free play? There should not be any strange sounds coming from the steering wheel.

Vehicle exterior

Items	Check points
Doors	Do the doors operate smoothly?
Engine hood	Does the engine hood lock system work properly?
Fluid leaks	 There should not be any signs of fluid leakage after the vehicle has been parked.
Tires	 Is the tire inflation pressure correct? The tires should not be damaged or excessively worn. Have the tires been rotated according to the maintenance schedule? The wheel nuts should not be loose.
Windshield wipers/rear window wiper	 The wiper blades should not show any signs of cracking, splitting, wear, contamination or deformation. The wiper blades should clear the windshield/rear window without streaking or skipping.

A CAUTION

■ If the engine is running

Turn the engine off and ensure that there is adequate ventilation before performing maintenance checks.

4-2. Maintenance

Emission inspection and maintenance (I/M) programs

Some states have vehicle emission inspection programs which include OBD (On Board Diagnostics) checks. The OBD system monitors the operation of the emission control system.

■ If the malfunction indicator lamp comes on

The OBD system determines that a problem exists somewhere in the emission control system. Your vehicle may not pass the I/ M test and may need to be repaired. Contact your Scion dealer to service the vehicle.

- Your vehicle may not pass the I/M test in the following situations:
 - When the battery is disconnected or discharged

Readiness codes that are set during ordinary driving are erased.

Also, depending on your driving habits, the readiness codes may not be completely set.

When the fuel tank cap is loose

The malfunction indicator lamp comes on indicating a temporary malfunction and your vehicle may not pass the I/M test.

■ When the malfunction indicator lamp still remains on after several driving trips

The error code in the OBD system will not be cleared unless the vehicle is driven 40 or more times.

■ If your vehicle does not pass the I/M test

Contact your Scion dealer to prepare the vehicle for re-testing.

Do-it-yourself service precautions

If you perform maintenance yourself, be sure to follow the correct procedures as given in these sections.

Items		Parts and tools
Battery condition	(→P. 248)	Warm waterBaking sodaGreaseConventional wrench (for terminal clamp bolts)
Brake fluid level	(→P. 245)	 FMVSS No.116 DOT 3 or SAE J1703 brake fluid Rag or paper towel Funnel (used only for adding brake fluid)
Engine coolant level	(→P. 243)	"Toyota Super Long Life Coolant" or a similar high quality ethylene glycol-based non-silicate, non-amine, non-nitrite and non-borate coolant with long-life hybrid organic acid technology For the U.S.A.: "Toyota Super Long Life Coolant" is pre-mixed with 50% coolant and 50% deionized water. For Canada: "Toyota Super Long Life Coolant" is pre-mixed with 55% coolant and 45% deionized water. Funnel (used only for adding engine coolant)

		D () (
Items		Parts and tools
Engine oil level	(→P. 238)	"Toyota Genuine Motor Oil" or equivalent Rag or paper towel Funnel (used only for adding engine oil)
Fuses	(→P. 273)	Fuse with same amperage rating as original
Light bulbs	(→P. 284)	Bulb with same number and wattage rating as originalFlathead screwdriver
Radiator and conden	ser (→P. 245)	_
Tire inflation pressu	re (→P. 261)	Tire pressure gauge Compressed air source
Washer fluid	(→P. 250)	 Water or washer fluid containing antifreeze (for winter use) Funnel (used only for adding water or washer fluid)

A CAUTION

The engine compartment contains many mechanisms and fluids that may move suddenly, become hot, or become electrically energized. To avoid death or serious injury, observe the following precautions:

When working on the engine compartment

- Keep hands, clothing, and tools away from the moving fan and engine drive belt.
- Be careful not to touch the engine, radiator, exhaust manifold, etc. right after driving as they may be hot. Oil and other fluids may also be hot.
- Do not leave anything that may burn easily, such as paper and rags, in the engine compartment.
- Do not smoke, cause sparks or expose an open flame to fuel or the battery. Fuel and battery fumes are flammable.
- Be extremely cautious when working on the battery. It contains poisonous and corrosive sulfuric acid.

When working near the electric cooling fans or radiator grille

Be sure the engine switch is off.

With the ignition on, the electric cooling fans may automatically start to run if the air conditioning is on and/or the coolant temperature is high. (\rightarrow P. 245)

Safety glasses

Wear safety glasses to prevent flying or falling material, fluid spray, etc. from getting your eyes.




NOTICE

If you remove the air cleaner filter

Driving with the air cleaner filter removed may cause excessive engine wear due to dirt in the air.


Hood

Release the lock from the inside of the vehicle to open the hood.

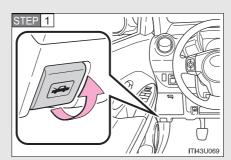


Pull the hood release lever.

The hood will pop up slightly.

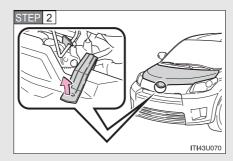

Lift the auxiliary catch lever and lift the hood.

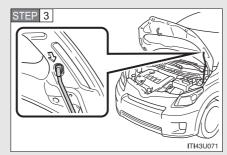

Hold the hood open by inserting the supporting rod into the slot.



▲ CAUTION

Pre-driving check

Check that the hood is fully closed and locked.

If the hood is not locked properly, it may open while the vehicle is in motion and cause an accident, which may result in death or serious injury.

After installing the support rod into the slot

Make sure the rod supports the hood securely from falling down on to your head or body.



NOTICE


When closing the hood

Be sure to return the support rod to its clip before closing the hood. Closing the hood without returning the support rod properly could cause the hood to bend.


4-3. Do-it-yourself maintenance **Positioning a floor jack**

When raising your vehicle with a floor jack, position the jack correctly. Improper placement may damage your vehicle or cause injury.

Front

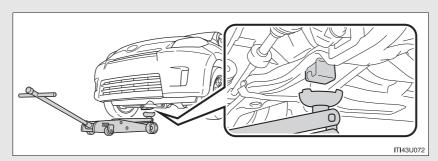


Rear

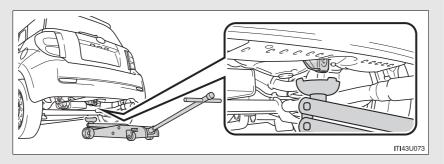

A CAUTION

When raising your vehicle


Make sure to observe the following precautions to reduce the possibility of death or serious injury.

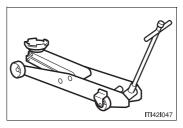

Lift up the vehicle using a floor jack such as the one shown in the illustration.

- When using a floor jack, follow the instructions of the manual provided with the jack.
- Do not use the jack that was supplied with your vehicle.
- Do not put any part of your body underneath the vehicle when it is supported only by the floor jack.
- Always use floor jack and/or automotive jack stands on a solid, flat, level surface.
- Do not start the engine while the vehicle is supported by the floor jack.
- Stop the vehicle on level, firm ground, firmly set the parking brake and shift the shift lever in P (automatic transmission) or R (manual transmission).
- Make sure to set the floor jack properly at the jack point. Raising the vehicle with an improperly positioned floor jack will damage the vehicle and may cause the vehicle to fall off the floor jack.
- Do not raise the vehicle while someone is in the vehicle.
- When raising the vehicle, do not place any objects on top of or underneath the floor jack.

4-3. Do-it-yourself maintenance **Engine compartment**

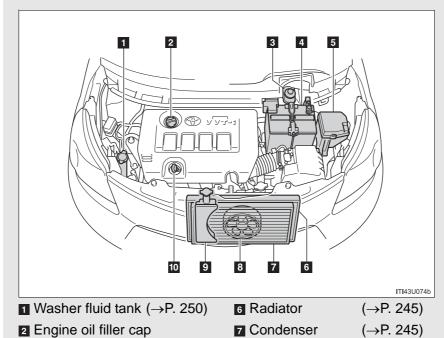

(→P. 240)

3 Brake fluid reservoir

(→P. 245)

- 4 Battery (→P. 248)
- 5 Fuse box (→P. 273)
- B Electric cooling fan
- 9 Engine coolant reservoir

(→P. 243)

no Engine oil level dipstick


(→P. 238)

Engine oil

With the engine at operating temperature and turned off, check the oil level on the dipstick.

■ Checking the engine oil


Park the vehicle on level ground. After warming up the engine and turning it off, wait more than 5 minutes for the oil to drain back into the bottom of the engine.

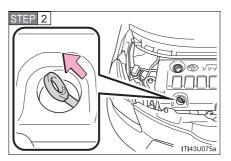

Holding a rag under the end, pull the dipstick out.

STEP 3 Wipe the dipstick clean.


STEP 4 Flat dipstick: Reinsert the dipstick fully.

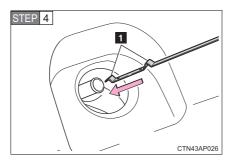

Non-flat dipstick: Reinsert the non-flat dipstick fully with its protruding areas (in the illustration) pointing towards the engine.

STEP 5 Holding a rag under the end, pull the dipstick out and check the oil level.


Flat dipstick

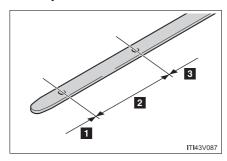

- 1 Low
- 2 Normal
- **3** Excessive

The shape of the dipstick may differ depending on the type of vehicle or engine.

Non-flat dipstick

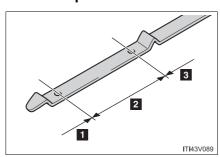


- 1 Low
- 2 Normal
- **3** Excessive

The shape of the dipstick may differ depending on the type of vehicle or engine.

STEP 6 Wipe the dipstick and reinsert it fully.

■ Adding engine oil

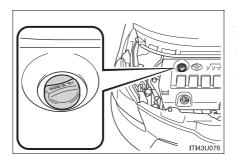

If the oil level is below or near the low level mark, add engine oil of the same type as that already in the engine.

Make sure to check the oil type and prepare the items needed before adding oil.

Engine oil selection	→P. 353
Oil quantity (Low → Full)	1.6 qt. (1.5 L, 1.3 lmp. qt.)
Items	Clean funnel

STEP 1 Remove the oil filler cap by turning it counterclockwise.

STEP 2 Add engine oil slowly, checking the dipstick.

STEP 3 Install the oil filler cap by turning it clockwise.

■ Engine oil consumption

A certain amount of engine oil will be consumed while driving. In the following situations, oil consumption may increase, and engine oil may need to be refilled in between oil maintenance intervals.

- When the engine is new, for example directly after purchasing the vehicle or after replacing the engine
- If low quality oil or oil of an inappropriate viscosity is used
- When driving at high engine speeds or with a heavy load, or when driving while accelerating or decelerating frequently
- When leaving the engine idling for a long time, or when driving frequently through heavy traffic



A CAUTION

Used engine oil

- •Used engine oil contains potentially harmful contaminants which may cause skin disorders such as inflammation and skin cancer, so care should be taken to avoid prolonged and repeated contact. To remove used engine oil from your skin, wash thoroughly with soap and water.
- Dispose of used oil and filters only in a safe and acceptable manner. Do not dispose of used oil and filters in household trash, in sewers or onto the ground. Call your Scion dealer, service station or auto parts store for information concerning recycling or disposal.
- Do not leave used engine oil within the reach of children.



NOTICE

■ To prevent serious engine damage


Check the oil level on a regular basis.

When replacing the engine oil

- Be careful not to spill engine oil on the vehicle components.
- Avoid overfilling, or the engine could be damaged.
- Check the oil level on the dipstick every time you refill the vehicle.
- Be sure the engine oil filler cap is properly tightened.

Engine coolant

The coolant level is satisfactory if it is between the "F" and "L" lines on the reservoir when the engine is cold.

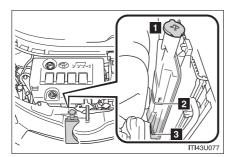

- 1 Reservoir cap
- 2 Full
- 3 Low

If the level is on or below the "L" line, add coolant up to the "F" line. $(\rightarrow P. 341)$

■ Coolant selection

Only use "Toyota Super Long Life Coolant" or a similar high quality ethylene glycol based non-silicate, non-amine, non-nitrite, and non-borate coolant with long-life hybrid organic acid technology.

U.S.A.: "Toyota Super Long Life Coolant" is a mixture of 50% coolant and 50% deionized water. (Minimum temperature: -31°F [-35°C])

Canada: "Toyota Super Long Life Coolant" is a mixture of 55% coolant and 45% deionized water. (Minimum temperature: -44°F [-42°C])

For more details about engine coolant, contact your Scion dealer.

■ If the coolant level drops within a short time of replenishing

Visually check the radiator, hoses, engine coolant reservoir caps, drain cock and water pump.

If you cannot find a leak, have your Scion dealer test the cap and check for leaks in the cooling system.



A CAUTION

When the engine is hot

Do not remove the radiator cap.

The cooling system may be under pressure and may spray hot coolant if the cap is removed, causing serious injuries, such as burns.



NOTICE

When adding coolant

Coolant is neither plain water nor straight antifreeze. The correct mixture of water and antifreeze must be used to provide proper lubrication, corrosion protection and cooling. Be sure to read the antifreeze or coolant label.

If you spill coolant

Be sure to wash it off with water to prevent damaging parts or paint.

Radiator and condenser

Check the radiator and condenser and clear away any foreign objects.

If either of the above parts is extremely dirty or you are not sure of their condition, have your vehicle inspected by your Scion dealer.




A CAUTION

When the engine is hot

Do not touch the radiator or condenser as they may be hot and cause serious injuries, such as burns.

Brake fluid

■ Checking fluid level

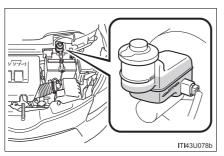


The brake fluid level should be between the "MAX" and "MIN" lines on the tank.


■ Adding fluid

Make sure to check the fluid type and prepare the necessary item.

Fluid type	FMVSS No.116 DOT 3 or SAE J1703 brake fluid
Items	Clean funnel

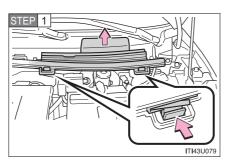


Disconnect the claws to remove the service cover as shown in the illustration.

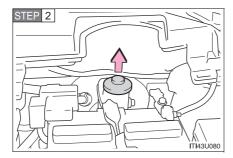

Remove the reservoir cap.

STEP 3 Add brake fluid slowly while checking the fluid level.

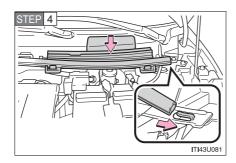

Reinstall the service cover as shown in the illustration.

246

■ Brake fluid can absorb moisture from the air

Excess moisture in the brake fluid can cause a dangerous loss of braking efficiency. Use only newly opened brake fluid.



A CAUTION

When filling the reservoir

Take care as brake fluid can harm your hands and eyes and damage painted surfaces.

If fluid gets on your hands or in your eyes, flush the affected area with clean water immediately.

If you still experience discomfort, see a doctor.



NOTICE

If the fluid level is low or high

It is normal for the brake fluid level to go down slightly as the brake pads wear out or when the fluid level in the accumulator is high.


If the reservoir needs frequent refilling, there may be a serious problem.

Battery

Check the battery as follows:

■ Battery exterior

Make sure that the battery terminals are not corroded and that there are no loose connections, cracks, or loose clamps.

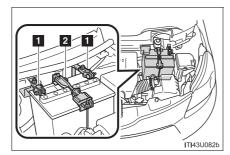

1 Terminals

2 Hold-down clamp

■ Before recharging

When recharging, the battery produces hydrogen gas which is flammable and explosive. Therefore, observe the following before recharging:

- If recharging with the battery installed on the vehicle, be sure to disconnect the ground cable.
- Make sure the power switch on the charger is off when connecting and disconnecting the charger cables to the battery.

A CAUTION

Chemicals in the battery

Batteries contains poisonous and corrosive sulfuric acid and may produce hydrogen gas which is flammable and explosive. To reduce the risk of death or serious injury, take the following precautions while working on or near the battery:

- Do not cause sparks by touching the battery terminals with tools.
- Do not smoke or light a match near the battery.
- Avoid contact with eyes, skin and clothes.
- Never inhale or swallow electrolyte.
- Wear protective safety glasses when working near the battery.
- Keep children away from the battery.

■Where to safely charge the battery

Always charge the battery in an open area. Do not charge the battery in a garage or closed room where there is insufficient ventilation.

How to recharge the battery

Only perform a slow charge (5 A or less). The battery may explode if charged at a quicker rate.

Emergency measures regarding electrolyte

- If electrolyte gets in your eyes
 Flush your eyes with clean water for at least 15 minutes and get immediate medical attention. If possible, continue to apply water with a sponge or cloth while traveling to the nearest medical facility.
- If electrolyte gets on your skin
 Wash the affected area thoroughly. If you feel pain or burning, get medical attention immediately.
- If electrolyte gets on your clothes
 It can soak through clothing on to your skin. Immediately take off the clothing and follow the procedure above if necessary.



▲ CAUTION

If you accidentally swallow electrolyte Drink a large quantity of water or milk. Get emergency medical attention immediately.




NOTICE

When recharging the battery

Never recharge the battery while the engine is running. Also, be sure all accessories are turned off.

Washer fluid

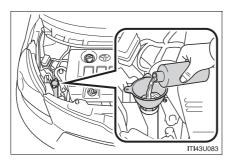

If any washer does not work or the low washer fluid warning light comes on, the washer tank may be empty. Add washer fluid.



A CAUTION

When adding washer fluid

Do not add the washer fluid when the engine is hot or running as washer fluid contains alcohol and may catch fire if spilled on the engine etc.

↑ NOTICE

Do not use any fluid other than washer fluid

Do not use soapy water or engine antifreeze instead of washer fluid. Doing so may cause streaking on the vehicle's painted surfaces.

Diluting washer fluid


Dilute washer fluid with water as necessary.

Refer to the freezing temperatures listed on the washer fluid tank.

Tires

Replace or rotate tires in accordance with maintenance schedules and treadwear.

■ Checking tires

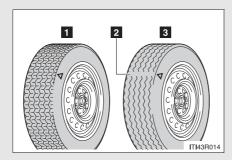


- 1 New tread
- Treadwear indicator
- 3 Worn tread

The location of treadwear indicators is shown by the "TWI" or " \triangle " marks, etc., molded on the sidewall of each tire.

Check spare tire condition and pressure if not rotated.

■ Tire rotation

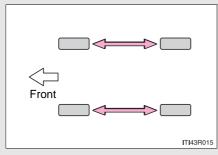

Rotate the tires in the order shown.

To equalize tire wear and extend tire life, Scion recommends that tire rotation is carried out at the same interval as tire inspection.

■ Tire pressure warning system

Your Scion is equipped with a tire pressure warning system that uses tire pressure warning valves and transmitters to detect low tire inflation pressure before serious problems arise. (→P. 310)

Installing tire pressure warning valves and transmitters


When replacing tires or wheels, tire pressure warning valves and transmitters must also be installed.

When new tire pressure warning valves and transmitters are installed, new ID codes must be registered in the tire pressure warning computer and the tire pressure warning system must be initialized. Have tire pressure warning valve and transmitter ID codes registered by your Scion dealer. (→P. 254)

■ How to initialize the tire pressure warning system

- Park the vehicle in a safe place and turn the engine switch off.

 Initialization cannot be performed while the vehicle is moving.
- STEP 2 Adjust the tire inflation pressure to the specified cold tire inflation pressure level. (→P. 359)
 - Make sure to adjust the tire pressure to the specified cold tire inflation pressure level. The tire pressure warning system will operate based on this pressure level.
- STEP 3 Turn the engine switch to the "ON" position.

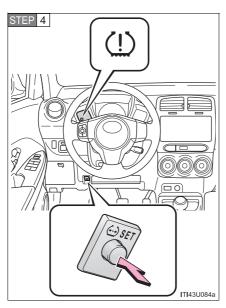

Press and hold the tire pressure warning reset switch until the tire pressure warning light blinks slowly 3 times.

Wait for a few minutes with the engine switch in the "ON" position and then turn the engine switch to the "LOCK" position.

Registering ID codes

The tire pressure warning valve and transmitter is equipped with a unique ID code. When replacing a tire pressure warning valve and transmitter, it is necessary to register the ID code. Have the ID code registered by your Scion dealer.

■When to replace your vehicle's tires

Tires should be replaced if:

- You have tire damage such as cuts, splits, cracks deep enough to expose the fabric, and bulges indicating internal damage
- A tire goes flat repeatedly or cannot be properly repaired due to the size or location of a cut or other damage

If you are not sure, consult with your Scion dealer.

■ Replacing tires and wheels

If the ID code of the tire pressure warning valve and transmitter is not registered, the tire pressure warning system will not work properly. After driving for about 20 minutes, the tire pressure warning light blinks for 1 minute and stay on to indicate a system malfunction.

■ Tire life

Any tire over 6 years old must be checked by a qualified technician even if it has seldom or never been used or damage is not obvious.

■ Routine tire inflation pressure checks

The tire pressure warning system does not replace routine tire inflation pressure checks. Make sure to check tire inflation pressure as part of your routine of daily vehicle checks.

■ Maximum load of tire

Check that the maximum load of the replacement tire is greater than 1/2 of the Gross Axle Weight Ratings (GAWR) of either the front axle or the rear axle, whichever is greater.



For the GAWR, see the Certification Label. For the maximum load of the tire, see the load limit at maximum cold tire inflation pressure mentioned on the sidewall of the tire. $(\rightarrow P. 365)$

■Tire types

Summer tires

Summer tires are high-speed performance tires best suited to highway driving under dry conditions. Since summer tires do not have the same traction performance as snow tires, summer tires are inadequate for driving on snow-covered or icy roads. For driving on snow-covered roads or icy roads, the use of snow tires is recommended. When installing snow tires, be sure to replace all four tires.

All season tires

All season tires are designed to provide better traction in snow and to be adequate for driving in most winter conditions as well as for use year round. All season tires, however, do not have adequate traction performance compared with snow tires in heavy or loose snow. Also, all season tires fall short in acceleration and handling performance compared with summer tires in highway driving.

Snow tires

For driving on snow-covered roads or icy roads, we recommend using snow tires. If you need snow tires, select tires of the same size, construction and load capacity as the originally installed tires. Since your vehicle has radial tires as original equipment, make sure your snow tires also have radial construction. Do not install studded tires without first checking local regulations for possible restrictions. Snow tires should be installed on all wheels. (\rightarrow P. 175)

■Initializing the tire pressure warning system

Initialize the system with the tire inflation pressure adjusted to the specified level.

■ If the tread on snow tires wears down below 0.16 in. (4 mm)

The effectiveness of the tires as snow tires is lost.

- If you push the tire pressure warning reset switch accidentally
 - If initialization is performed, adjust the tire inflation pressure to the specified level and initialize the tire pressure warning system again.
- ■When the initialization of the tire pressure warning system has failed

Initialization can be completed in a few minutes. However, in the following cases, the settings have not been recorded and the system will not operate properly. If repeated attempts to record tire inflation pressure settings are unsuccessful, have the vehicle inspected by your Scion dealer.

- When operating the tire pressure warning reset switch, the tire pressure warning light does not blink 3 times.
- After driving for a certain period of time since the initialization has been completed, the warning light comes on after blinking for 1 minute.

■Tire pressure warning system certification

MODEL/FCC IDs:

Transmitter: PAXPMV107J Receiver: HYQ13BCX

For vehicles sold in the U.S.A.

NOTE:

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC WARNING:

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

For vehicles sold in Canada

NOTE:

Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

A CAUTION

When inspecting or replacing tires

Observe the following precautions to prevent accidents.

Failure to do so may cause damage to parts of the drive train as well as dangerous handling characteristics, which may lead to an accident resulting in death or serious injury.

- Do not mix tires of different makes, models or tread patterns.
 Also, do not mix tires of remarkably different treadwear.
- Do not use tire sizes other than those recommended by Scion.
- Do not mix differently constructed tires (radial, bias-belted or bias-ply tires).
- Do not mix summer, all season and snow tires.
- Do not use tires that have been used on another vehicle.
 Do not use tires if you do not know how they were used previously.

■When initializing the tire pressure warning system

Do not operate the tire pressure warning reset switch without first adjusting the tire inflation pressure to the specified level. Otherwise, the tire pressure warning light may not come on even if the tire inflation pressure is low, or it may come on when the tire inflation pressure is actually normal.

Λ

NOTICE

Repairing or replacing tires, wheels, tire pressure warning valves, transmitters and tire valve caps

- When removing or fitting the wheels, tires or the tire pressure warning valves and transmitters, contact your Scion dealer as the tire pressure warning valves and transmitters may be damaged if not handled correctly.
- When replacing tire valve caps, do not use tire valve caps other than those specified. The cap may become stuck.

To avoid damage to the tire pressure warning valves and transmitters

When a tire is repaired with liquid sealants, the tire pressure warning valve and transmitter may not operate properly. If a liquid sealant is used, contact your Scion dealer or other qualified service shop as soon as possible. Make sure to replace the tire pressure warning valve and transmitter when replacing the tire. $(\rightarrow P. 253)$

Driving on rough roads

Take particular care when driving on roads with loose surfaces or potholes.

These conditions may cause losses in tire inflation pressure, reducing the cushioning ability of the tires. In addition, driving on rough roads may cause damage to the tires themselves, as well as the vehicle's wheels and body.


If tire inflation pressure of each tire becomes low while driving

Do not continue driving, or your tires and/or wheels may be ruined.


4-3. Do-it-yourself maintenance Tire inflation pressure

■ Tire inflation pressure

The recommended cold tire inflation pressure and tire size are displayed on the tire and loading information label. $(\rightarrow P.~359)$

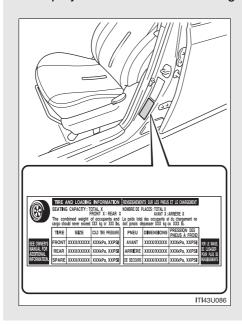

■ Inspection and adjustment procedure

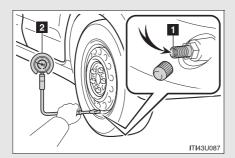

- Tire valve
- 2 Tire pressure gauge

- STEP 1 Remove the tire valve cap.
- STEP 2 Press the tip of the tire pressure gauge onto the tire valve.
- STEP 3 Read the pressure using the gauge gradations.
- If the tire inflation pressure is not at the recommended level, adjust the pressure.
 - If you add too much air, press the center of the valve to deflate.
- After completing the tire inflation pressure measurement and adjustment, apply soapy water to the valve and check for leakage.
- STEP 6 Put the tire valve cap back on.

■Tire inflation pressure check interval

You should check tire inflation pressure every two weeks, or at least once a month.

Do not forget to check the spare.

■ Effects of incorrect tire inflation pressure

Driving with incorrect tire inflation pressure may result in the following:

- Reduced fuel efficiency
- Reduced driving comfort and tire life
- Reduced safety
- Damage to the drive train

If a tire needs frequent inflating, have it checked by your Scion dealer.

■Instructions for checking tire inflation pressure

When checking tire inflation pressure, observe the following:

- Check only when the tires are cold.
 If your vehicle has been parked for at least 3 hours or has not been driven for more than 1 mile or 1.5 km, you will get an accurate cold tire inflation pressure reading.
- Always use a tire pressure gauge. The appearance of the tire can be misleading. In addition, tire inflation pressure that is even just a few pounds off can affect ride quality and handling.
- Do not reduce tire inflation pressure after driving. It is normal for the inflation pressure to be higher after driving.
- Never exceed the vehicle capacity weight.
 Passengers and luggage weight should be placed so that the vehicle is balanced.

A CAUTION

Proper inflation is critical to save tire performance

Keep your tires properly inflated. Otherwise, the following conditions may occur and result in an accident causing death or serious injury:

- Excessive wear
- Uneven wear
- Poor handling
- Possibility of blowouts resulting from overheated tires
- Poor sealing of the tire bead
- •Wheel deformation and/or tire separation
- A greater possibility of tire damage from road hazards



NOTICE

When inspecting and adjusting tire inflation pressure

Be sure to put the tire valve caps back on.

Without the valve caps, dirt or moisture could get into the valve and cause air leakage, which could result in an accident. If the caps are lost, replace them as soon as possible.

4-3. Do-it-yourself maintenance **Wheels**

If a wheel is bent, cracked or heavily corroded, it should be replaced.

Otherwise, the tire may separate from the wheel or cause a loss of handling control.

■ Wheel selection

When replacing wheels, care should be taken to ensure that they are equivalent to those removed in load capacity, diameter, rim width, and inset*.

Replacement wheels are available at your Scion dealer.

*: Conventionally referred to as "offset".

Scion does not recommend using the following:

- Wheels of different sizes or types
- Used wheels
- Bent wheels that have been straightened

■When replacing wheels


The wheels of your vehicle are equipped with tire pressure warning valves and transmitters that allow the tire pressure warning system to provide advance warning in the event of a loss in tire inflation pressure. Whenever wheels are replaced, tire pressure warning valves and transmitters must be installed. (\rightarrow P. 253)

A CAUTION

When replacing wheels

- Do not use wheels that are a different size from those recommended in the Owner's Manual, as this may result in a loss of handling control.
- Never use an inner tube in a leaking wheel which is designed for a tubeless tire. Doing so may result in an accident, causing death or serious injury.

When installing the wheel nuts

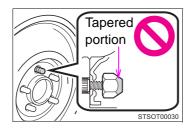

- Be sure to install the wheel nuts with the tapered end facing inward. Installing the nuts with the tapered end facing outward can cause wheel to break and eventually cause a wheel to come off while driving, which could lead to an accident resulting in death or serious injury.
- Never use oil or grease on the wheel bolts or wheel nuts. Oil and grease may cause the wheel nuts to be excessively tightened, leading to bolt or disc wheel damage. In addition, the oil or grease can cause the wheel nuts to loosen and the wheel may fall off, causing an accident and resulting in death or serious injury. Remove any oil or grease from the wheel bolts or wheel nuts.

Λ

NOTICE

Replacing tire pressure warning valves and transmitters


- Because tire repair or replacement may affect the tire pressure warning valves and transmitters, make sure to have tires serviced by your Scion dealer or other qualified service shop. In addition, make sure to purchase your tire pressure warning valves and transmitters at your Scion dealer.
- Ensure that only genuine Scion wheels are used on your vehicle.
 Tire pressure warning valves and transmitters may not work properly with non-genuine wheels.

Air conditioning filter (for Puerto Rico)


The air conditioning filter must be changed regularly to maintain air conditioning efficiency.

■ Removal method


STEP 1 Turn the engine switch off.

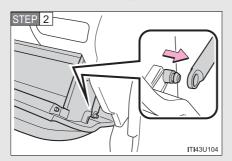

Open the glove box. Slide off the damper.

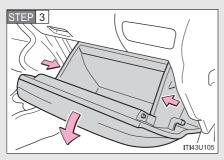


Push in each side of the glove box to disconnect the claws.

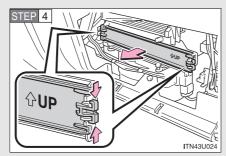


Remove the filter cover.

268

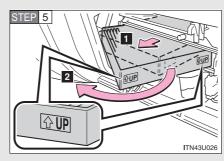

- 1 Pull out the filter.
- 2 Rotate the filter to remove it.

■ Replacement method

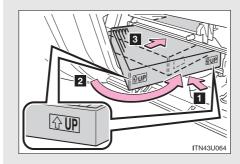

- 1 Set a new filter.
 - The "↑UP" marks shown on the filter should be pointing up.
- 2 Rotate the filter.
- 3 Push in the filter.

■ Checking interval

Inspect and replace the air conditioning filter according to the maintenance schedule. In dusty areas or areas with heavy traffic flow, early replacement may be required. (For scheduled maintenance information, please refer to the "Scheduled Maintenance Guide" or "Owner's Manual Supplement".)

■ If air flow from the vents decreases dramatically

The filter may be clogged. Check the filter and replace if necessary.



NOTICE

■ When using the air conditioning system


Make sure that a filter is always installed.

Using the air conditioning system without a filter may cause damage to the system.

4-3. Do-it-yourself maintenance Wireless remote control battery


Replace the battery with a new one if it is depleted.

- You will need the following items:
 - Flathead screwdriver
 - Lithium battery (CR2016)
- Replacing the battery

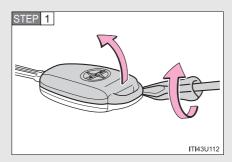


Remove the cover.

To prevent damage to the key, cover the tip of the screwdriver with a rag.

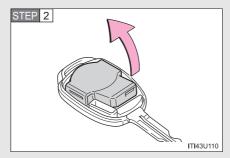

Remove the module.

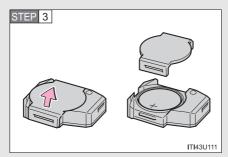

Remove the battery cover and the depleted battery.

Insert a new battery with the "+" terminal facing up.

■Use a CR2016 lithium battery

- Batteries can be purchased at your Scion dealer, local electrical appliance shops or camera stores.
- Replace only with the same or equivalent type recommended by the manufacturer.
- Dispose of used batteries according to local laws.

■ If the key battery is depleted

The following symptoms may occur:

- The wireless remote control will not function properly.
- The operational range will be reduced.



Removed battery and other parts

These parts are small and if swallowed by a child, they can cause choking. Keep away from children. Failure to do so could result in death or serious injury.



For normal operation after replacing the battery

Observe the following precautions to prevent accidents:

- Always work with dry hands.
 Moisture may cause the battery to rust.
- Do not touch or move any other component inside the remote control.
- Do not bend either of the battery terminals.


Checking and replacing fuses

If any of the electrical components do not operate, a fuse may have blown. If this happens, check and replace the fuses as necessary.

STEP 1 Turn the engine switch off.


STEP 2 Open the fuse box cover.

Engine compartment

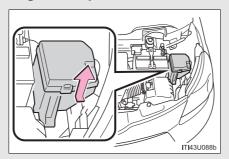


Push the tab in and lift the lid off.

Under the driver's side instrument panel

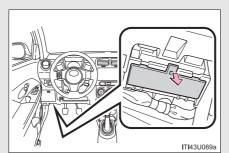

Remove the lid.


Driver's side instrument panel

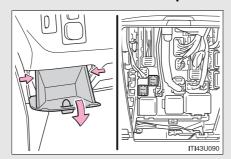

Remove the auxiliary box.

STEP 3 After a system failure, see "Fuse layout and amperage ratings" (→P. 277) for details about which fuse to check.


STEP 4 Remove the fuse.

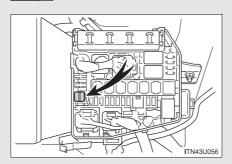

Only type A fuse can be removed using the pullout tool.

STEP 5 Check if the fuse is blown.


Type A

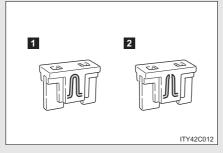

- Normal fuse
- 2 Blown fuse

Replace the blown fuse with a new fuse of an appropriate amperage rating. The amperage rating can be found on the fuse box lid.


Type B

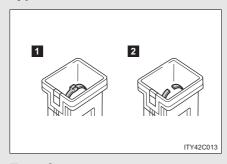

- 1 Normal fuse
- 2 Blown fuse


Replace the blown fuse with a new fuse of an appropriate amperage rating. The amperage rating can be found on the fuse box lid.

Type C

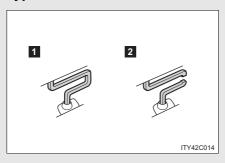


- 1 Normal fuse
- 2 Blown fuse

Contact your Scion dealer.

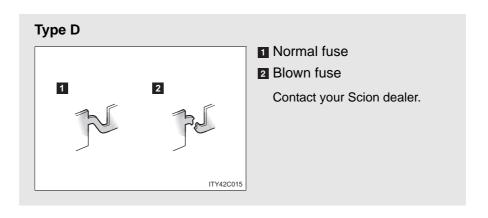

Fuse layout and amperage ratings

■ Engine compartment

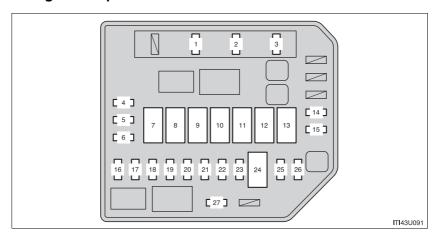


Fuse		Ampere	Circuit
1	AM2	15 A	Starting system, multi-port fuel injection system/sequential multi-port fuel injection system
2	HORN	10 A	Horn
3	EFI	20 A	Multi-port fuel injection system/ sequential multi-port fuel injection system
4	SPARE	30 A	Spare fuse
5	SPARE	15 A	Spare fuse
6	SPARE	10 A	Spare fuse
7	HTR SUB2	40 A	Air conditioning system
8	EPS	50 A	Electric power steering

Fuse		Ampere	Circuit
9	ABS1/VSC1	50 A	ABS, VSC
10	HTR	40 A	Air conditioning system
11	RDI	30 A	Electric cooling fan
12	HTR SUB1	30 A	Air conditioning system
13	H-LP CLN/PWR HTR	30 A	Air conditioning system
14	FR DEF	20 A	No circuit
15	ABS2/VSC2	30 A	ABS, VSC
16	H-LP MAIN	30 A	No circuit
17	ST	30 A	Starting system
18	S-LOCK	20 A	No circuit
19	DOME	15 A	Interior light, personal lights, lug- gage compartment light
20	ECU-B	7.5 A	SRS airbag system, power windows, gauges and meters, air conditioning system
21	ALT-S	7.5 A	Charging system
22	ETCS	10 A	Multi-port fuel injection system/ sequential multi-port fuel injection system

Fuse		Ampere	Circuit
23	HAZ	10 A	Turn signal lights, emergency flashers
24	AMT	50 A	No circuit
25	H-LP RH/H-LP LO RH	10 A	Right-hand headlight
26	H-LP LH/H-LP LO LH	10 A	Left-hand headlight
27	EFI2	10 A	Multi-port fuel injection system/ sequential multi-port fuel injection system

■ Under the driver's side instrument panel

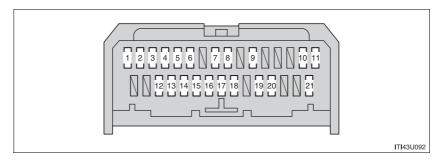


	Fuse name	Ampere	Circuit
1	TAIL	10 A	Tail lights, parking lights, license plate lights
2	PANEL1	7.5 A	Switch illuminations, instrument cluster lights, steering switches, gauges and meters
3	A/C	7.5 A	Air conditioning system, rear window defogger
4	D DOOR	20 A	Power windows
5	RL DOOR	20 A	Power windows (rear left)
6	RR DOOR	20 A	Power windows (rear right)
7	CIG	15 A	Power outlet
8	ACC	7.5 A	Outside rear view mirrors, clock
9	ID/UP / MIR HTR*1	10 A	Outside rear view mirror defoggers

	Fuse name	Ampere	Circuit
10	IGN	7.5 A	Multi-port fuel injection system/ sequential multi-port fuel injection system
11	MET	7.5 A	Gauges and meters
12	WIP	20 A	Windshield wipers
13	RR WIP	15 A	Rear window wiper
14	WSH	15 A	Windshield washers, rear window washer
15	ECU-IG	10 A	ABS, electric cooling fan, EPS
16	GAUGE	10 A	Charging system, back-up lights, air conditioning system, gauges and meters
17	OBD2	7.5 A	On-board diagnosis system
18	STOP	10 A	Stop lights, high mounted stop- light, multi-port fuel injection sys- tem/sequential multi-port fuel injection system, ABS, VSC, shift lock system
19	D/L	25 A	Power door lock system
20	FR FOG	15 A	No circuit
21	AM1	25 A	"ACC", "CIG" fuses

^{*1:} Vehicles sold in Canada

■ Driver's side instrument panel

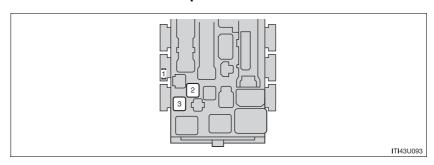

	Fuse	Ampere	Circuit
1	ACC2	7.5 A	No circuit
2	DEF	30 A	Rear window defogger
3	PWR	30 A	Power windows

■ After a fuse is replaced

- If the lights do not turn on even after the fuse has been replaced, a bulb may need replacement. (→P. 284)
- If the replaced fuse blows again, have the vehicle inspected by your Scion dealer.

■ If there is an overload in the circuits

The fuses are designed to blow, protecting the wiring harness from damage.



A CAUTION

To prevent system breakdowns and vehicle fire

Observe the following precautions.

Failing to do so may cause damage to the vehicle, and possibly a fire or injury.

- Never use a fuse of a higher amperage rating than that indicated, or use any other object in place of a fuse.
- Always use a genuine Scion fuse or equivalent. Never replace a fuse with a wire, even as a temporary fix.
- Do not modify the fuse or the fuse box.



NOTICE

Before replacing fuses

Have the cause of electrical overload determined and repaired by your Scion dealer, as soon as possible.


4-3. Do-it-yourself maintenance **Light bulbs**


You may replace the following bulbs yourself. The difficulty level of replacement varies depending on the bulb. If necessary bulb replacement seems difficult to perform, contact your Scion dealer.

For more information about replacing other light bulbs, contact your Scion dealer.

■ Preparing for light bulb replacement Check the wattage of the light bulb to be replaced. (→P. 360)


■ Front bulb locations

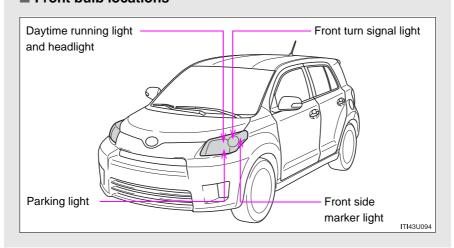

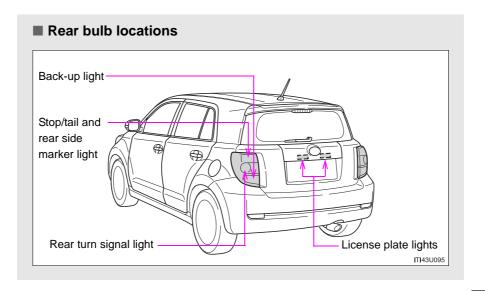


Replacing light bulbs


■ Headlights and daytime running lights (for Canada)

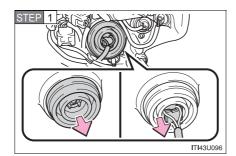

Unplug the connector and remove the rubber cover.

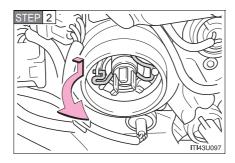

Release the bulb retaining spring.

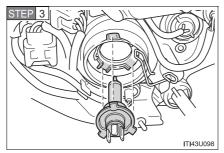


Remove the bulb.


To install a new bulb, align the tabs of the bulb with the cutouts of the mounting hole.

286

■ Front turn signal lights

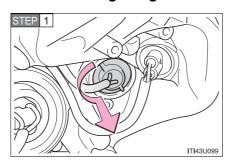


Turn the bulb base counterclockwise.

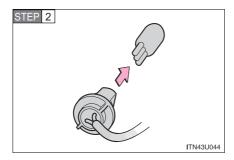


Remove the light bulb.

■ Parking lights

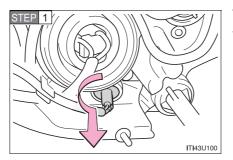


Turn the bulb base counterclockwise.

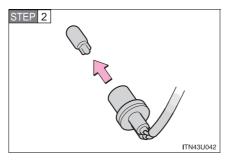


Remove the light bulb.

■ Front side marker lights

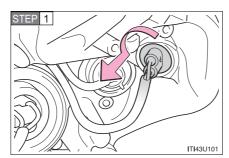


Turn the bulb base counterclockwise.

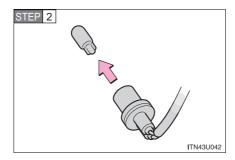


Remove the light bulb.

■ Stop/tail and rear side marker lights, rear turn signal lights and back-up lights

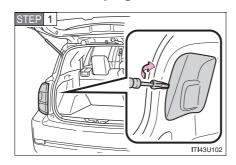


Open the back door and remove the cover.

To prevent damaging the vehicle, wrap the flathead screwdriver with a rag.

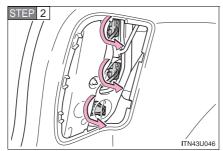


Turn the bulb bases counter-clockwise.

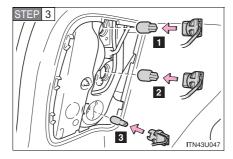

Remove the light bulb.


- Stop/tail and rear side marker light
- 2 Rear turn signal light
- 3 Back-up light

■ License plate lights

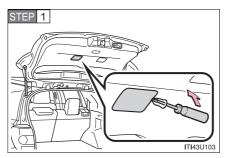


Open the back door and remove the cover.

To prevent damaging the vehicle, wrap the flathead screwdriver with a rag.

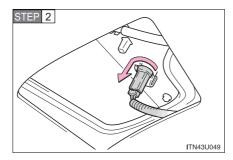

Turn the bulb bases counter-clockwise.

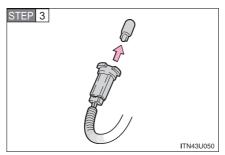

Remove the light bulb.

■LED light bulbs

The side turn signal lights and high mounted stoplight consist of a number of LEDs. If any of the LEDs burn out, take your vehicle to your Scion dealer to have the light replaced.

■ Condensation build-up on the inside of the lens

Temporary condensation build-up on the inside of the headlight lens does not indicate a malfunction. Contact your Scion dealer for more information in the following situations:

- Large drops of water have built up on the inside of the lens.
- Water has built up inside the headlight.

A CAUTION

Replacing light bulbs

 Turn off the lights. Do not attempt to replace the bulb immediately after turning off the lights.

The bulbs become very hot and may cause burns.

 Do not touch the glass portion of the light bulb with bare hands. When it is unavoidable to hold the glass portion, use and hold with a clean dry cloth to avoid getting moisture and oils on the bulb.

Also, if the bulb is scratched or dropped, it may blow out or crack.

- Fully install light bulbs and any parts used to secure them. Failing to do so may result in heat damage, fire, or water entering the headlight unit. This may damage the headlights or cause condensation to build up on the lens.
- Do not attempt to repair or disassemble light bulbs, connectors, electric circuits or component parts.

Doing so may result in death or serious injury due to electric shock.

To prevent damage or fire

Make sure bulbs are fully seated and locked.

When trouble arises


5

5-1. Essential information

5-2. Steps to take in an emergency

5-1. Essential information Emergency flashers

Use the emergency flashers if the vehicle malfunctions or is involved in an accident.

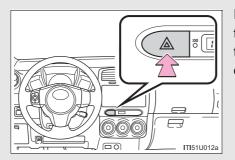

Press the switch to flash all the turn signal lights. To turn them off, press the switch once again.

⚠ NOTICE

■To prevent battery discharge

Do not leave the emergency flashers on longer than necessary when the engine is not running.

5

5-1. Essential information If your vehicle needs to be towed

If towing is necessary, we recommend having your vehicle towed by your Scion dealer or a commercial towing service, using a lift-type truck or flatbed truck.


Use a safety chain system for all towing, and abide by all state/provincial and local laws.

Before towing

The following may indicate a problem with your transmission. Contact your Scion dealer before towing.

- The engine is running but the vehicle will not move.
- The vehicle makes an abnormal sound.


Emergency towing

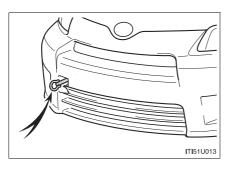

If a tow truck is not available in an emergency, your vehicle may be temporarily towed using a cable or chain secured to the emergency towing eyelet. This should only be attempted on hard surfaced roads for short distances at low speeds.


A driver must be in the vehicle to steer and operate the brakes. The vehicle's wheels, drive train, axles, steering and brakes must be in good condition.

Installing towing eyelets

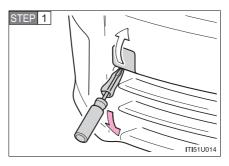


Remove the eyelet cover using a flathead screwdriver.

To protect the bodywork, place a rag between the screwdriver and the vehicle body as shown in the illustration.

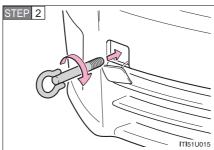


Insert the towing eyelet into the hole and tighten partially by hand.

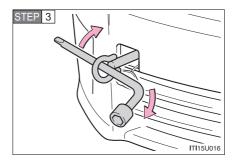

Tighten down the towing eyelet securely using a wheel nut wrench.

5-1. Essential information


Towing with a sling-type truck

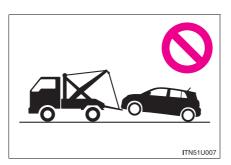

Do not tow with a sling-type truck to prevent body damage.


Towing with a wheel-lift type truck

From the front

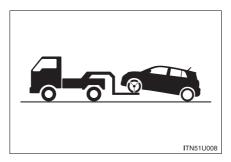

Release the parking brake.

From the rear

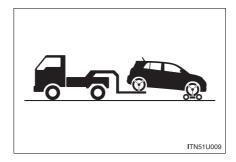


Vehicles with an automatic transmission: Use a towing dolly under the front wheels.

Vehicles with a manual transmission: We recommend using a towing dolly under the front wheels.

When not using a towing dolly, turn the engine switch to the "ACC" position and shift the shift lever to N.

Using a flatbed truck

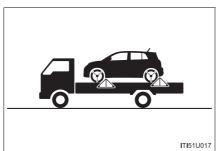

If you use chains or cables to tie down your vehicle, the angles shaded in black must be 45°.

Do not overly tighten the tie downs or the vehicle may be damaged.

■ Before emergency towing

- STEP 1 Release the parking brake.
- STEP 2 Shift the shift lever to N.
- STEP 3 Turn the engine switch to the "ACC" (engine off) or "ON" (engine running) position.
- **■**Emergency towing eyelet location

→P. 318



A CAUTION

Caution while towing

- Use extreme caution when towing the vehicle. Avoid sudden starts or erratic driving maneuvers which place excessive stress on the emergency towing eyelets and the cables or chains. Always be cautious of the surroundings and other vehicles while towing.
- If the engine is not running, the power assist for the brakes and steering will not function, making steering and braking more difficult.



Installing towing eyelets to the vehicle

Make sure that towing eyelets are installed securely.

If not securely installed, towing eyelets may come loose during towing. This may lead to accidents that cause serious injury or even death.



NOTICE

To prevent causing serious damage to the transmission when towing using a wheel-lift type truck (vehicles with an automatic transmission)

Never tow this vehicle from the rear with the front wheels on the ground.

- ■To prevent damage to the vehicle when towing using a wheel-lift type truck (vehicles with a manual transmission)
 - Do not tow the vehicle from the rear when the engine switch is in the "LOCK" position or the key is removed. The steering lock mechanism is not strong enough to hold the front wheels straight.
 - When raising the vehicle, ensure adequate ground clearance for towing at the opposite end of the raised vehicle. Without adequate clearance, the vehicle could be damaged while being towed.
- To prevent body damage when towing with a sling-type truck

Do not tow with a sling-type truck, either from the front or rear.

To prevent causing serious damage to the transmission in emergency towing

Vehicles with an automatic transmission, never tow a vehicle from the rear with four wheels on the ground. This may cause serious damage to the transmission.

5-1. Essential information If you think something is wrong

If you notice any of the following symptoms, your vehicle probably needs adjustment or repair. Contact your Scion dealer as soon as possible.

Visible symptoms

- Fluid leaks under the vehicle (Water dripping from the air conditioning after use is normal.)
- Flat-looking tires or uneven tire wear
- High engine coolant temperature warning light flashes or comes on
- Low engine coolant temperature indicator comes on or does not come on continuously

Audible symptoms

- Changes in exhaust sound
- Excessive tire squeal when cornering
- Strange noises related to the suspension system
- Pinging or other noises related to the engine

Operational symptoms

- Engine missing, stumbling or running roughly
- Appreciable loss of power
- Vehicle pulls heavily to one side when braking
- Vehicle pulls heavily to one side when driving on a level road
- Loss of brake effectiveness, spongy feeling, pedal almost touches the floor

5

5-1. Essential information Fuel pump shut off system

To minimize the risk of fuel leakage when the engine stalls or when an airbag inflates upon collision, the fuel pump shut off system stops the supply of fuel to the engine.

Follow the procedure below to restart the engine after the system is activated.

STEP 1 Turn the engine switch to the "ACC" or "LOCK" position.

STEP 2 Restart the engine.

№ NOTICE

Before starting the engine

Inspect the ground under the vehicle.

If you find that fuel has leaked onto the ground, the fuel system has been damaged and is in need of repair. Do not restart the engine.

5-2. Steps to take in an emergency If a warning light turns on or a warning buzzer sounds

Calmly perform the following actions if any of the warning lights comes on or flashes. If a light comes on or flashes, but then goes off, this does not necessarily indicate a malfunction in the system. However, if this continues to occur, have the vehicle inspected by your Scion dealer.

Stop the vehicle immediately. Continuing to drive the vehicle may be dangerous.

The following warning indicates a possible problem in the brake system. Immediately stop the vehicle in a safe place and contact your Scion dealer.

Warning light	Warning light/Details
BRAKE (U.S.A.)	Brake system warning light (warning buzzer)* • Low brake fluid • Malfunction in the brake system This light also comes on when the parking brake is not released. If the light turns off after the parking brake is fully released the system is operating normally.
(Canada)	у при

^{*:} Parking brake engaged warning buzzer:

A buzzer will sound if the vehicle is driven at a speed of approximately 3 mph
(5 km/h) or more.

Stop the vehicle immediately.

The following warning indicates the possibility of damage to the vehicle that may lead to an accident. Immediately stop the vehicle in a safe place and contact your Scion dealer.

Warning light	Warning light/Details	
	Charging system warning light Indicates a malfunction in the vehicle's charging system.	
عتے.	Low engine oil pressure warning light Indicates that the engine oil pressure is too low.	
₩	High engine coolant temperature warning light Indicates that the engine is almost overheating. (→P. 341)	

Have the vehicle inspected by your Scion dealer immediately.

Failure to investigate the cause of the following warnings may lead to the system operating abnormally and possibly cause an accident. Have the vehicle inspected by your Scion dealer immediately.

Warning light	Warning light/Details
(Canada)	Malfunction indicator lamp Indicates a malfunction in: The electronic engine control system; The electronic throttle control system; or The electronic automatic transmission control system (if equipped).
*	SRS warning light Indicates a malfunction in: • The SRS airbag system; • The front passenger occupant classification system; or • The seat belt pretensioner system.
(U.S.A.) (ABS) (Canada)	ABS warning light Indicates a malfunction in: • The ABS; or • The brake assist system.

Warning light	Warning light/Details
<u>@!</u>	Electric power steering system warning light Indicates a malfunction in the EPS (Electric Power Steering) system.
B	Slip indicator light Indicates a malfunction in: • The VSC; or • The TRAC
CRUISE (Flashes)	Cruise control indicator light Indicates a malfunction in the cruise control system.

Follow the correction procedures.

After taking the specified steps to correct the suspected problem, check that the warning light goes off.

Warning light	Warning light/Details	Correction procedure
a	Open door warning light Indicates that a door is not fully closed.	Check that all the doors are closed.
	Low fuel level warning light Indicates remaining fuel is approximately 1.7 gal. (6.3 L, 1.4 lmp. gal.) or less.	Refuel the vehicle.
Ž.	Driver's seat belt reminder light (warning buzzer)*1 Warns the driver to fasten his/her seat belt.	Fasten the seat belt.
PASSENSER	Front passenger's seat belt reminder light (warning buzzer)*2 Warns the front passenger to fasten his/her seat belt.	Fasten the seat belt.
	Low windshield washer fluid warning light Low level of washer fluid	Fill the tank.

Warning light Warning light/Details		Correction procedure
	Maintenance required reminder light Indicates that maintenance is required according to the driven distance on the maintenance schedule.*3	
MAINT REQD (U.S.A.)	Illuminates for about 3 seconds and then flashes for about 15 seconds approximately 4500 miles (7200 km) after the maintenance data has been reset.	If necessary, perform maintenance.
	Comes on and remains on if the distance driven exceeds 5000 miles (8000 km) after the maintenance data has been reset. (The indicator will not work properly unless the maintenance data has been reset.)	Perform the necessary maintenance. Please reset the maintenance data after the maintenance is performed. (→P. 223)

5-2. Steps to take in an emergency

Warning light	Warning light/Details	Correction procedure
	Tire pressure warning light	
<u>(!)</u>	When the light comes on: Low tire inflation pressure such as • Natural causes (→P. 313) • Flat tire (→P. 318)	Adjust the tire inflation pressure to the specified level. The light will turn off after a few minutes. In case the light does not turn off even if the tire inflation pressure is adjusted, have the system checked by your Scion dealer.
	When the light comes on after blinking for 1 minute: Malfunction in the tire pressure warning system. (→P. 314)	Have the system checked by your Scion dealer.

*1: Driver's seat belt buzzer:

The driver's seat belt buzzer sounds to alert the driver that his or her seat belt is not fastened. Once the engine switch is turned to the "ON" or "START" position, the buzzer sounds for 5 seconds. If the vehicle reaches a speed of 12 mph (20 km/h), the buzzer sounds intermittently for 10 seconds. Then, if the seat belt is still unfastened, the buzzer will sound in a different tone for 20 more seconds.

*2: Front passenger's seat belt buzzer:

The front passenger's seat belt buzzer sounds to alert the front passenger that his or her seat belt is not fastened. The buzzer sounds intermittently for 10 seconds after the vehicle reaches a speed of 12 mph (20 km/h). Then, if the seat belt is still unfastened, the buzzer will sound in a different tone for 20 more seconds.

*3: Refer to the separate "Scheduled Maintenance Guide" or "Owner's Manual Supplement" for the maintenance interval applicable to your vehicle.

■SRS warning light

This warning light system monitors the airbag sensor assembly, front airbag sensors, side and curtain shield airbag sensors, curtain shield airbag sensors, driver's seat position sensor, driver's seat belt buckle switch, front passenger occupant classification system, "AIR BAG ON" indicator light, "AIR BAG OFF" indicator light, front passenger's seat belt buckle switch, seat belt pretensioner assemblies, airbags, interconnecting wiring and power sources. (→P. 74)

■ Front passenger detection sensor, passenger seat belt reminder and warning buzzer

- If luggage is placed on the front passenger seat, the front passenger detection sensor may cause the warning light to flash and the warning buzzer to sound even if a passenger is not sitting in the seat.
- If a cushion is placed on the seat, the sensor may not detect a passenger, and the warning light may not operate properly.

■ If the malfunction indicator lamp comes on while driving

First check the following:

- Is the fuel tank empty?
 If it is, fill the fuel tank immediately.
- Is the fuel tank cap loose?
 If it is, tighten it securely.

The malfunction indicator lamp will go off after several driving trips. If the malfunction indicator lamp does not go off even after several trips, contact your Scion dealer as soon as possible.

■ Electric power steering warning light

When the battery charge becomes insufficient or the voltage temporarily drops, the electric power steering system warning light may come on.

■ Changing the engine oil (U.S.A. only)

Make sure to reset the oil change system. (→P. 223)

■ When the tire pressure warning light comes on

Check the tire inflation pressure and adjust to the appropriate level. Pushing the tire pressure warning reset switch will not turn off the tire pressure warning light.

■The tire pressure warning light may come on due to natural causes

The tire pressure warning light may come on due to natural causes such as natural air leaks and tire inflation pressure changes caused by temperature. In this case, adjusting the tire inflation pressure will turn off the warning light (after a few minutes).

■When a tire is replaced with a spare tire

The compact spare tire is not equipped with a tire pressure warning valve and transmitter. If a tire goes flat, the tire pressure warning light will not turn off even though the flat tire has been replaced with the spare tire. Replace the spare tire with the repaired tire and adjust the tire inflation pressure. The tire pressure warning light will go off after a few minutes.

■ If the tire pressure warning system is not functioning

The system will be disabled in the following conditions: (When the condition becomes normal, the system will work properly.)

- If tires not equipped with tire pressure warning valves and transmitters are used
- If the ID code on the tire pressure warning valves and transmitters is not registered in the tire pressure warning computer
- If the tire inflation pressure is 73 psi (500 kPa, 5.1 kgf/cm² or bar) or higher

The tire pressure warning system may be disabled in the following conditions:

(When the condition becomes normal, the system will work properly.)

- If electronic devices or facilities using similar radio wave frequencies are nearby
- If a radio set at a similar frequency is in use in the vehicle
- If a window tint that affects the radio wave signals is installed
- If there is a lot of snow or ice on the vehicle, particularly around the wheels or wheel housings
- If non-genuine Scion wheels are used (Even if you use Scion wheels, the tire pressure warning system may not work properly with some types of tires.)
- If tire chains are used

■ If the tire pressure warning light frequently comes on after blinking for 1 minute

If the tire pressure warning light frequently comes on after blinking for 1 minute when the engine switch is turned to the "ON" position, have it checked by your Scion dealer.

When the electric power steering system warning light comes on

The steering wheel may become extremely heavy.

If the steering wheel becomes heavier than usual when operating, hold firmly and operate using more force than usual.

If the tire pressure warning light comes on

Be sure to observe the following precautions. Failure to do so could cause a loss of vehicle control and result in death or serious injury.

- Stop your vehicle in a safe place as soon as possible. Adjust the tire inflation pressure immediately.
- If the tire pressure warning light comes on even after tire inflation pressure adjustment, it is probable that you have a flat tire. Check the tires. If a tire is flat, change it with the spare tire and have the flat tire repaired by the nearest Scion dealer.
- Avoid abrupt maneuvering and braking. If the vehicle tires deteriorate, you could lose control of the steering wheel or the brakes.

■If a blowout or sudden air leakage should occur

The tire pressure warning system may not activate immediately.

Maintenance of the tires

Each tire, including the spare (if provided), should be checked monthly when cold and inflated to the inflation pressure recommended by the vehicle manufacturer on the vehicle placard or tire inflation pressure label (tire and load information label). (If your vehicle has tires of a different size than the size indicated on the vehicle placard or tire inflation pressure label [tire and load information label], you should determine the proper tire inflation pressure for those tires.)

As an added safety feature, your vehicle has been equipped with a tire pressure monitoring system (TPMS-tire pressure warning system) that illuminates a low tire pressure telltale (tire pressure warning light) when one or more of your tires is significantly under-inflated. Accordingly, when the low tire pressure telltale (tire pressure warning light) illuminates, you should stop and check your tires as soon as possible, and inflate them to the proper pressure. Driving on a significantly underinflated tire causes the tire to overheat and can lead to tire failure. Under-inflation also reduces fuel efficiency and tire tread life, and may affect the vehicle's handling and stopping ability.

Please note that the TPMS (tire pressure warning system) is not a substitute for proper tire maintenance, and it is the driver's responsibility to maintain correct tire pressure, even if under-inflation has not reached the level to trigger illumination of the TPMS low tire pressure telltale (tire pressure warning light).

Your vehicle has also been equipped with a TPMS (tire pressure warning system) malfunction indicator to indicate when the system is not operating properly. The TPMS (tire pressure warning system) malfunction indicator is combined with the low tire pressure telltale (tire pressure warning light). When the system detects a malfunction, the telltale will flash for approximately one minute and then remain continuously illuminated. This sequence will continue upon subsequent vehicle start-ups as long as the malfunction exists. When the malfunction indicator is illuminated, the system may not be able to detect or signal low tire pressure as intended.

TPMS (tire pressure warning system) malfunctions may occur for a variety of reasons, including the installation of replacement or alternate tires or wheels on the vehicle that prevent the TPMS (tire pressure warning system) from functioning properly. Always check the TPMS (tire pressure warning system) malfunction telltale after replacing one or more tires or wheels on your vehicle to ensure that the replacement or alternate tires and wheels allow the TPMS (tire pressure warning system) to continue to function properly.



NOTICE

Precaution when installing a different tire

When a tire of a different specification or maker is installed, the tire pressure warning system may not operate properly.


5-2. Steps to take in an emergency If you have a flat tire

Remove the flat tire and replace it with the spare provided.


Before jacking up the vehicle

- Stop the vehicle on a hard, flat surface.
- Set the parking brake.
- Shift the shift lever to P (automatic transmission) or R (manual transmission).
- Stop the engine.
- Turn on the emergency flashers.

Location of the spare tire and tools

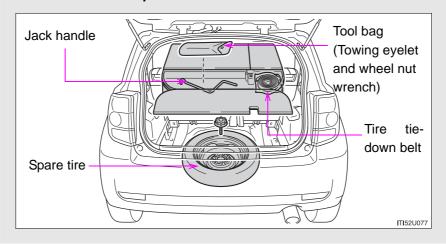


Location of the jack

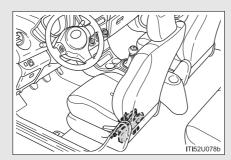

The jack is stored under the left-hand front seat.

Compact spare tire

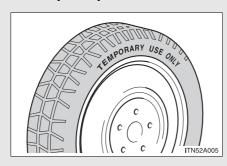


The compact spare tire is designed for temporary emergency use only.


The compact spare tire is identified by the distinctive wording "TEMPORARY USE ONLY" molded into the sidewall of the tire.

5-2. Steps to take in an emergency


Taking out the jack

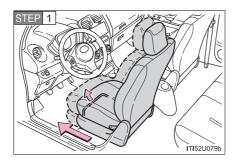

Move front left seat to the front-most position.

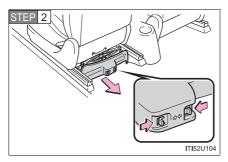


Remove the cover.

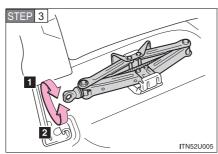


- 1 Tighten
- 2 Loosen

Taking out the spare tire

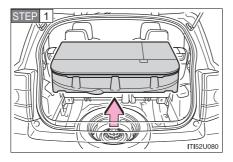


Remove the auxiliary box.

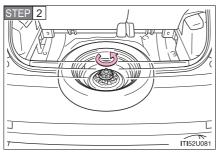


Loosen the center fastener that secures the spare tire.

Replacing a flat tire

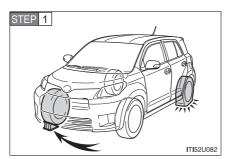


Chock the tires.


Flat tire		Wheel chock positions
Front	Left-hand side	Behind the rear right-hand side tire
FIOIIL	Right-hand side	Behind the rear left-hand side tire
Rear	Left-hand side	In front of the front right-hand side tire
Real	Right-hand side	In front of the front left-hand side tire

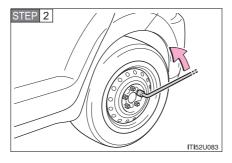


Slightly loosen the wheel nuts (one turn).

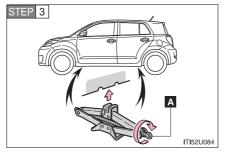

Turn the tire jack portion "A" by hand until the notch of the jack is in contact with the jack point.

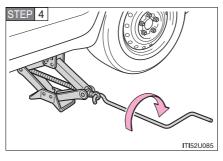


Raise the vehicle until the tire is slightly raised off the ground.

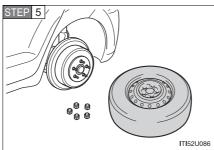

Remove all the wheel nuts and the tire.


When resting the tire on the ground, place the tire so that the wheel design faces up to avoid scratching the wheel surface.

Installing the spare tire

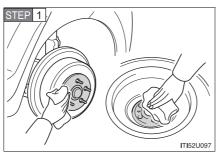

Remove any dirt or foreign matter from the wheel contact surface.


If foreign matter is on the wheel contact surface, the wheel nuts may loosen while the vehicle is in motion, causing the tire to come off.

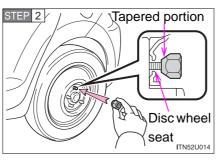


Install the spare tire and loosely tighten each wheel nut by hand by approximately the same amount.

Tighten the wheel nuts until the tapered portion comes into loose contact with the disc wheel seat.

Lower the vehicle.

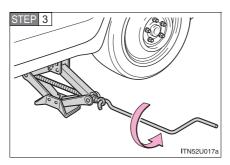

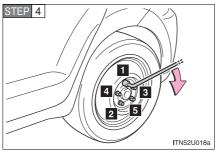


Firmly tighten each wheel nut two or three times in the order shown in the illustration.


Tightening torque: 76 ft•lbf (103 N•m, 10.5 kgf•m)

STEP 5 Stow the flat tire, tire jack and all tools.


Stowing the flat tire

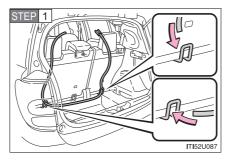

Pass the belt through the two of anchor brackets. Then return the luggage storage box to the original position.

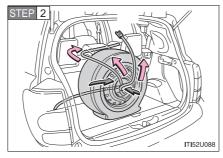


Lay the flat tire on the luggage floor so that the outer side of the wheel faces toward the rear of the vehicle. Pass the belt through the center hole of the wheel as shown above.

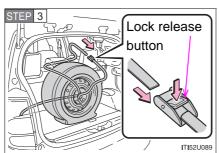

Pass the belt in front of the rear center head restraint as shown and attach the belt end.

326

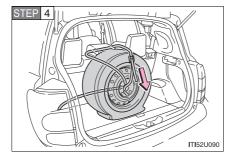

Hold the buckle and pull the belt to secure the tire.

After stowing the flat tire, check that the tire and belt are secured.

■ The compact spare tire

- The compact spare tire saves in your luggage compartment.
- Its lighter weight helps to enhance fuel economy.
- It permits easier installation in case of a flat tire.
- Make sure to check the tire inflation pressure of the compact spare tire. (→P. 359)

■ After completing the tire change

The tire pressure warning system must be reset. (→P. 253)

■ When using the compact spare tire

As the compact spare tire is not equipped with a tire pressure warning valve and transmitter, low inflation pressure of the spare tire will not be indicated by the tire pressure warning system. Also, if you replace the compact spare tire after the tire pressure warning light comes on, the light remains on.

■ If you have a flat front tire on a road covered with snow or ice

Install the compact spare tire on one of the rear wheels of the vehicle. Perform the following steps and fit tire chains to the front tires:

- STEP 1 Replace a rear tire with the compact spare tire.
- STEP 2 Replace the flat front tire with the tire removed from the rear of the vehicle.
- STEP 3 Fit tire chains to the front tires.

A CAUTION

When using the compact spare tire

- Remember that the compact spare tire provided is specifically designed for use with your vehicle. Do not use your compact spare tire on another vehicle.
- Do not use more than one compact spare tire simultaneously.
- Replace the compact spare tire with a standard tire as soon as possi-
- Avoid sudden acceleration, deceleration and braking, as well as sharp cornering.

When the compact spare tire is attached

The vehicle speed may not be correctly detected, and the following systems may not operate correctly:

- ABS & Brake assist
- VSC
- TRAC

Speed limit when using the compact spare tire

Do not drive at speeds in excess of 50 mph (80 km/h) when a compact spare tire is installed on the vehicle.

The compact spare tire is not designed for driving at high speeds. Failure to observe this precaution may lead to an accident causing death or serious injury.

328

A CAUTION

Using the tire jack

Improper use of the tire jack may cause the vehicle to suddenly fall off the jack, leading to death or serious injury.

- Do not use the tire jack for any purpose other than replacing tires or installing and removing tire chains.
- Only use the tire jack that comes with this vehicle for replacing a flat tire

Do not use it on other vehicles, and do not use other tire jacks for replacing tires on this vehicle.

- Always check that the tire jack is securely set to the jack point.
- Do not put any part of your body under the vehicle while it is supported by the jack.
- Do not start or run the engine while your vehicle is supported by the jack.
- Do not raise the vehicle while someone is inside.
- When raising the vehicle, do not put an object on or under the jack.
- Do not raise the vehicle to a height greater than that required to replace the tire.
- Use a jack stand if it is necessary to get under the vehicle.

Take particular care when lowering the vehicle to ensure that no one working on or near the vehicle may be injured.

A CAUTION

Replacing a flat tire

- Do not touch the disc wheels or the area around the brakes immediately after the vehicle has been driven.
 - After the vehicle has been driven the disc wheels and the area around the brakes will be extremely hot. Touching these areas with hands, feet or other body parts while changing a tire, etc. may result in burns.
- Failure to follow these precautions could cause the wheel nuts to loosen and the tire to fall off, resulting in death or serious injury.
 - Have the wheel nuts tightened with a torque wrench to 76 ft lbf (103 N•m, 10.5 kgf•m) as soon as possible after changing wheels.
 - When installing a tire, only use wheel nuts that have been specifically designed for that wheel.
 - If there are any cracks or deformations in the bolt screws, nut threads or bolt holes of the wheel, have the vehicle inspected by your Scion dealer.
 - When installing the wheel nuts, be sure to install them with the tapered ends facing inward. (→P. 266)

After using the tools and jack

Before driving, make sure all the tools and jack are securely in place in their storage location to reduce the possibility of personal injury during a collision or sudden braking.

When stowing the flat tire

- Make sure the rear seats are in their original position.
- When carrying the flat tire, secure it using a tire tie-down belts. Otherwise, the flat tire may fly out in case of the sudden braking or an accident, resulting in death or serious injury.

330

↑ NOTICE

Do not drive the vehicle with a flat tire.

Do not continue driving with a flat tire.

Driving even a short distance with a flat tire can damage the tire and the wheel beyond repair.

Be careful when driving over bumps with the compact spare tire installed on the vehicle.

The vehicle becomes lower when driving with the compact spare tire compared to when driving with standard tires. Be careful when driving over uneven road surfaces.

Driving with tire chains and the compact spare tire

Do not fit tire chains to the compact spare tire.

Tire chains may damage the vehicle body and adversely affect driving performance.

When replacing the tires

When removing or fitting the wheels, tires or the tire pressure warning valve and transmitter, contact your Scion dealer as the tire pressure warning valve and transmitter may be damaged if not handled correctly.

To avoid damage to the tire pressure warning valves and transmitters

When a tire is repaired with liquid sealants, the tire pressure warning valve and transmitter may not operate properly. If a liquid sealant is used, contact your Scion dealer or other qualified service shop as soon as possible. Make sure to replace the tire pressure warning valve and transmitter when replacing the tire. $(\rightarrow P. 253)$

5-2. Steps to take in an emergency If the engine will not start

If the engine will not start even though correct starting procedures are being followed (\rightarrow P. 130), consider each of the following points:

■ The engine will not start even though the starter motor operates normally.

One of the following may be the cause of the problem:

- There may not be sufficient fuel in the vehicle's tank.
 Refuel the vehicle.
- The engine may be flooded.
 Try to restart the engine again following correct starting procedures. (→P. 130)
- Vehicles with engine immobilizer system: There may be a malfunction in the engine immobilizer system. (→P. 69)
- The starter motor turns over slowly, the interior lights and headlights are dim, or the horn does not sound or sounds at a low volume.

One of the following may be the cause of the problem:

- The battery may be discharged. (→P. 336)
- The battery terminal connections may be loose or corroded.
- The starter motor does not turn over, the interior lights and headlights do not turn on, or the horn does not sound.

One of the following may be the cause of the problem:

- One or both of the battery terminals may be disconnected.
- \bullet The battery may be discharged. (\rightarrow P. 336)

Contact your Scion dealer if the problem cannot be repaired, or if repair procedures are unknown.

5-2. Steps to take in an emergency If the shift lever cannot be shifted from P (automatic transmission)


If the shift lever cannot be shifted with your foot on the brake pedal, there may be a problem with the shift lock system (a system to prevent accidental operation of the shift lever). Have the vehicle inspected by your Scion dealer immediately.

The following steps may be used as an emergency measure to ensure that the shift lever can be shifted:


STEP 1 Set the parking brake.

STEP 2 Turn the engine switch to the "ACC" position.

STEP 3 Depress the brake pedal.

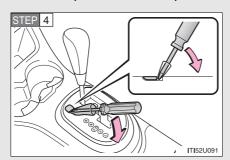

Pry the cover up with a flathead screwdriver or equivalent tool.

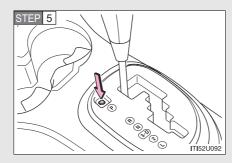

Press the shift lock override button.

The shift lever can be shifted while the button is pressed.

5-2. Steps to take in an emergency If you lose your keys

New genuine keys can be made by your Scion dealer. Bring a master key and the key number stamped on the key number plate.


334

5


5-2. Steps to take in an emergency If you cannot operate the back door opener

If the back door opener does not operate, there may be a problem with the back door opener system. Have the vehicle inspected by your Scion dealer immediately.

The following steps may be used as an emergency measure to ensure that the back door can be opened from the inside.

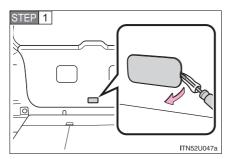

Remove the cover on the back door trim.

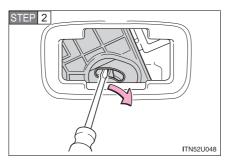


Push the lever with the back door motor, open the back door.

5-2. Steps to take in an emergency If the vehicle battery is discharged

The following procedures may be used to start the engine if the vehicle's battery is discharged.

You can also call your Scion dealer or a qualified repair shop.


If you have a set of jumper (or booster) cables and a second vehicle with a 12-volt battery, you can jump start your vehicle by following the steps below.

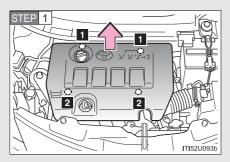


Open the hood. (→P. 233) Remove the engine cover:

- Raise the rear of the engine cover to remove the two clips.
- Raise the front of the engine cover to remove the two clips.

Disconnect the claws to remove the service cover as shown in the illustration.

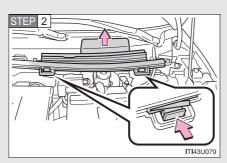


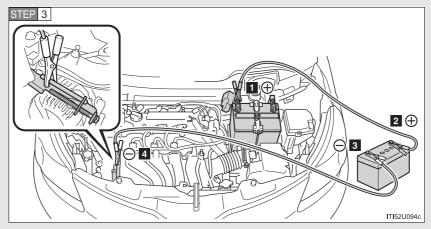

Connect the jumper cables according to the following procedure:

- Connect a positive jumper cable clamp to the positive (+) battery terminal on your vehicle
- Connect the clamp on the other end of the positive cable to the positive (+) battery terminal on the second vehicle
- 3 Connect a negative cable clamp to the negative (-) battery terminal on the second vehicle
- 4 Connect the clamp at the other end of the negative cable to a solid, stationary, unpainted metallic point away from the battery and any moving parts, as shown in the illustration.
- STEP 4 Start the engine of the second vehicle. Increase the engine speed slightly and maintain at that level for approximately 5 minutes to recharge the battery of your vehicle.

- Maintain the engine speed of the second vehicle and start the engine of your vehicle by turning the engine switch to the "ON" position.
- Once the vehicle's engine has started, remove the jumper cables in the exact reverse order from which they were connected.

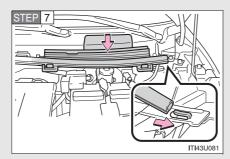

Reinstall the service cover as shown in the illustration.

Reinstall the engine cover: Conduct the removal procedure in reverse. After installing, check that the clips are inserted securely.

Once the engine starts, have the vehicle inspected at your Scion dealer as soon as possible.

■ Starting the engine when the battery is discharged

Vehicles with an automatic transmission, the engine cannot be started by push-starting.

■ To prevent battery discharge

- Turn off the headlights and the air conditioning system while the engine is turned off.
- Turn off any unnecessary electrical components when the vehicle is running at a low speed for an extended period, such as in heavy traffic.

338

■ Charging the battery

The electricity stored in the battery will discharge gradually even when the vehicle is not in use, due to natural discharge and the draining effects of certain electrical appliances. If the vehicle is left for a long time, the battery may discharge, and the engine may be unable to start. (The battery recharges automatically during driving.)

A CAUTION

Avoiding battery fires or explosions

Observe the following precautions to prevent accidentally igniting the flammable gas that may be emitted from the battery:

- Make sure each jumper cable is connected to the correct terminal and that it is not unintentionally in contact with any other than the intended terminal.
- Do not allow the + and clamps of the jumper cables to come into contact with each other.
- Do not smoke, use matches, cigarette lighters or allow open flame near the battery.

Battery precautions

The battery contains poisonous and corrosive acidic electrolyte, while related parts contain lead and lead compounds. Observe the following precautions when handling the battery:

- When working with the battery, always wear safety glasses and take care not to allow any battery fluids (acid) to come into contact with skin, clothing or the vehicle body.
- Do not lean over the battery.
- In the event that battery fluid comes into contact with the skin or eyes, immediately wash the affected area with water and seek medical attention. Place a wet sponge or cloth over the affected area until medical attention can be received.
- Always wash your hands after handling the battery support, terminals, and other battery-related parts.
- Do not allow children near the battery.



A CAUTION

To prevent damage to the vehicle

Do not pull- or push-start the vehicle as the three-way catalytic converter may overheat and become a fire hazard.

NOTICE

When handling jumper cables

When connecting the jumper cables, ensure that they do not become entangled in the cooling fans or belt.

To prevent damage to the engine cover

- When removing the cover, make sure that you pull the cover towards you after lifting the front edge to remove the fixed pins.
- When installing the cover, do not force the cover or subject it to strong shocks.

5-2. Steps to take in an emergency If your vehicle overheats

The following may indicate that your vehicle is overheating.

- The high engine coolant temperature warning light (→P. 305) comes on or a loss of engine power is experienced. (For example, the vehicle speed does not increase.)
- Steam comes out from under the hood.

Correction procedures


STEP 1 Stop the vehicle in a safe place and turn off the air conditioning system, and then stop the engine.

STEP 2 If you see steam:

Carefully lift the hood after the steam subsides.

If you do not see steam:


Carefully lift the hood.

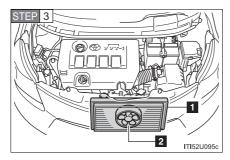

After the engine has cooled down sufficiently, inspect the hoses and radiator core (radiator) for any leaks.


- 1 Radiator
- 2 Cooling fan

If a large amount of coolant leaks, immediately contact your Scion dealer.

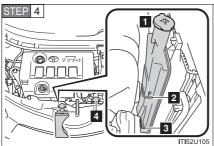


The coolant level is satisfactory if it is between the "F" and "L" lines on the reservoir.

- 1 Reservoir
- ₂ Full
- 3 Low
- 4 Radiator cap

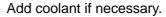

Water can be used in an emergency if coolant is unavailable.

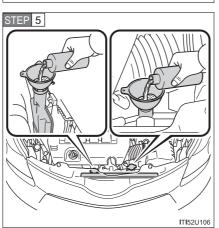

Start the engine and turn the air conditioning system on to check that the radiator cooling fan operates and to check for coolant leaks from the radiator or hoses.

The fan operates when the air conditioning system is turned on immediately after a cold start. Confirm that the fan is operating by checking the fan sound and air flow. If it is difficult to check these, turn the air conditioning system on and off repeatedly.

(The fan may not operate in freezing temperatures.)

STEP 7 If the fan is not operating:

Stop the engine immediately and contact your Scion dealer.

If the fan is operating:

Have the vehicle inspected at the nearest Scion dealer.

342

A CAUTION

■ To prevent an accident or injury when inspecting under the hood of your vehicle

- If steam is seen coming from under the hood, do not open the hood until the steam has subsided. The engine compartment may be very hot, causing serious injuries such as burns.
- Keep hands and clothing (especially a tie, a scarf or a muffler) away from the fan and belts. Failure to do so may cause the hands or clothing to be caught, resulting in serious injury.
- Do not loosen the radiator cap and the coolant reservoir cap while the engine and radiator are hot.
 Sorious injury cuch as huma may result from hot coolant and steam

Serious injury, such as burns, may result from hot coolant and steam released under pressure.



NOTICE

When adding engine coolant

Wait until the engine has cooled down before adding coolant.

When adding coolant, do so slowly. Adding cool coolant to a hot engine too quickly can cause damage to the engine.

■ To prevent damage to the cooling system

Observe the following precautions:

- Avoid contaminating the coolant with foreign matter (such as sand or dust etc.).
- Do not use any coolant additive.

5-2. Steps to take in an emergency If the vehicle becomes stuck

Carry out the following procedures if the tires spin or the vehicle becomes stuck in mud, dirt or snow:

- STEP 1 Stop the engine. Set the parking brake and shift the shift lever to P (automatic transmission) or N (manual transmis-
- STEP 2 Remove the mud, snow or sand from around the stuck tire.
- STEP 3 Place wood, stones or some other material under the tires to help provide traction.
- STEP 4 Restart the engine.
- STEP 5 Shift the shift lever to the D or R position (automatic transmission) or 1 or R position (manual transmission) and carefully apply the accelerator to free the vehicle.

Turn off TRAC and VSC if these functions are hampering your attempts to free the vehicle. (\rightarrow P. 165)

A CAUTION

When attempting to free a stuck vehicle

If you choose to push the vehicle back and forth to free it, make sure the surrounding area is clear to avoid striking other vehicles, objects or people. The vehicle may also lunge forward or lunge back suddenly as it becomes free. Use extreme caution.

When shifting the shift lever

For vehicles with an automatic transmission, be careful not to shift the shift lever with the accelerator pedal depressed.

This may lead to unexpected rapid acceleration of the vehicle that may cause an accident resulting in death or serious injury.

NOTICE

To avoid damage to the transmission and other components

- Avoid spinning the wheels and depressing the accelerator pedal more than necessary.
- If the vehicle remains stuck even after these procedures are performed, the vehicle may require towing to be freed.

5-2. Steps to take in an emergency If your vehicle has to be stopped in an emergency

Only in an emergency, such as if it becomes impossible to stop the vehicle in the normal way, stop the vehicle using the following procedure:

Steadily step on the brake pedal with both feet and firmly depress it.

Do not pump the brake pedal repeatedly as this will increase the effort required to slow the vehicle.

STEP 2 Shift the shift lever to N.


If the shift lever is shifted to N

After slowing down, stop the vehicle in a safe place by the road.

STEP 4 Stop the engine.

If the shift lever cannot be shifted to N

Keep depressing the brake pedal with both feet to reduce vehicle speed as much as possible.

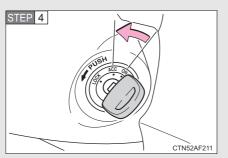


Stop the engine by turning the engine switch to the "ACC" position.

STEP 5 Stop the vehicle in a safe place by the road.

A CAUTION

If the engine has to be turned off while driving

- Power assist for the brakes and steering wheel will be lost, making the brake pedal harder to depress and the steering wheel heavier to turn.
 Decelerate as much as possible before turning off the engine.
- Never attempt to remove the key, as doing so will lock the steering wheel.

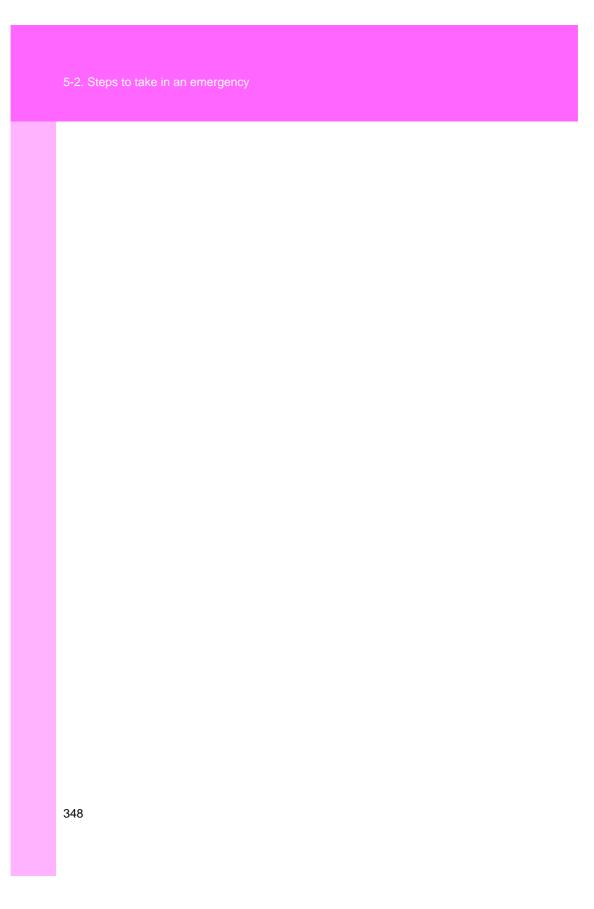

6-1. Specifications

Maintenance data (fuel, oil level, etc.)

Dimensions and weight


Overall length		154.7 in. (3930 mm)
Overall width		67.9 in. (1725 mm)
Overall height*		60.0 in. (1525 mm)
Wheelbase		96.9 in. (2460 mm)
Tread	Front	58.5 in. (1485 mm)
neau	Rear	58.7 in. (1490 mm)
Vehicle capacity weight (occupants + luggage)		845 lb. (383 kg)

^{*:} Unladen vehicles

Vehicle identification


■ Vehicle identification number

The vehicle identification number (VIN) is the legal identifier for your vehicle. This is the primary identification number for your Scion. It is used in registering the ownership of your vehicle.

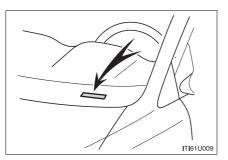


This number is stamped on the top left of the instrument panel.

This number is stamped under the front passenger seat.

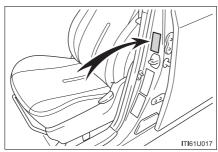

This number is also on the Certification Label on the driver's side center pillar.

■ Engine number

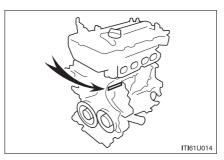

The engine number is stamped on the engine block as shown.

Engine

Model	2ZR-FE engine		
Туре	4 cylinder in line, 4 cycle, gasoline		
Bore and stroke	3.17 × 3.48 in. (80.5 × 88.3 mm)		
Displacement	109.7 cu.in. (1798 cm ³)		
Drive belt tension	O.30 — 0.39 in. (7.6 — 10.0 mm)* Generator Water pump Air conditioning compressor ITI61U015 *: Drive belt deflection with 22 lbf (98 N, 10 kgf) thumb force (used belt)		
Valve clearance (engine cold)	Automatic adjustment		

Fuel

Fuel type	Unleaded gasoline only
Octane rating	87 (Research Octane Number 91) or higher
Fuel tank capacity (Reference)	11.1 gal. (42 L, 9.2 lmp. gal.)

Lubrication system

Oil capacity (Drain and refill reference)

With filter
Without filter


4.4 qt. (4.2 L, 3.7 lmp. qt.) 4.1 qt. (3.9 L, 3.4 lmp. qt.)

■ Engine oil selection

"Toyota Genuine Motor Oil" is used in your Scion vehicle. Use Scion approved "Toyota Genuine Motor Oil" or equivalent to satisfy the following grade and viscosity.

Oil grade: ILSAC GF-5 multigrade engine oil

Recommended viscosity: SAE 0W-20

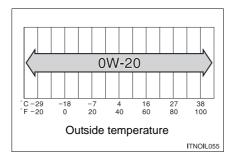

SAE 0W-20 is the best choice for good fuel economy and good starting in cold weather.


If SAE 0W-20 is not available, SAE 5W-20 oil may be used. However, it must be replaced with SAE 0W-20 at the next oil change.

Oil viscosity (0W-20 is explained here as an example):

- The 0W in 0W-20 indicates the characteristic of the oil which allows cold startability. Oils with a lower value before the W allow for easier starting of the engine in cold weather.
- The 20 in 0W-20 indicates the viscosity characteristic of the oil when the oil is at high temperature. An oil with a higher viscosity (one with a higher value) may be better suited if the vehicle is operated at high speeds, or under extreme load conditions.

How to read oil container label:

The International Lubricant Specification Advisory Committee (ILSAC) Certification Mark is added to some oil containers to help you select the oil you should use.

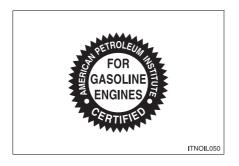

Cooling system

Capacity (reference)	Vehicles with an automatic transmission: 5.2 qt. (4.9 L, 4.3 Imp. qt.)
	Vehicles with a manual transmission: 5.3 qt. (5.0 L, 4.4 Imp. qt.)
Coolant type	Use either of the following: • "Toyota Super Long Life Coolant" • A similar high-quality ethylene glycol-based non-silicate, non-amine, non-nitrite, and non-borate coolant with long-life hybrid organic acid technology Do not use plain water alone.

Ignition system

Spark plug	
Make	DENSO SC20HR11
Gap	0.043 in. (1.1 mm)

⚠ NOTICE

■ Iridium-tipped spark plugs

Use only iridium-tipped spark plugs. Do not adjust spark plug gap.

Electrical system

Battery	
Open voltage* at 68°F (20°C):	12.6 — 12.8 V Fully charged 12.2 — 12.4 V Half charged 11.8 — 12.0 V Discharged (*: Voltage checked 20 minutes after the engine and all the lights turned off)
Charging rates	5 A max.

Automatic transaxle

Fluid capacity	6.9 qt. (6.5 L, 5.7 Imp. qt.)
Fluid type	Toyota Genuine ATF WS



NOTICE

Transmission fluid type

Using transmission fluid other than "Toyota Genuine ATF WS" may cause deterioration in shift quality, locking up of the transmission accompanied by vibration and, ultimately, damage to the vehicle's transmission.

	•	`	,		' '				
Use	ei	ther	of the	follov	ving:				
• "	ΤO	YO	TA Ger	nuine	Manı	ual Tr	ansm	issior	ı

Gear Oil LV"
• Other gear oil that meets API GL-4 and SAE 75W specifications

NOTICE

Gear oil type

Manual transmission gear oil

Please be aware that depending on the particular characteristics of the gear oil used or the operating conditions, idle sound, shift feelings and/or fuel efficiency may be different or affected. Scion recommends to use "TOYOTA Genuine Manual Transmission Gear Oil LV" to achieve optimal performance.

Clutch

Pedal free play	0.2 — 0.6 in. (5 — 15 mm)
Fluid type	SAE J1703 or FMVSS No.116 DOT 3

Brakes

Pedal clearance*1	3.4 in. (86 mm)
Pedal free play	0.04 — 0.24 in. (1 — 6 mm)
Brake pad wear limit	0.04 in. (1.0 mm)
Lining wear limit	0.04 in. (1.0 mm)
Parking brake lever travel*2	6 — 9 clicks
Fluid type	SAE J1703 or FMVSS No.116 DOT 3

^{*1:} Minimum pedal clearance when depressed with a force of 66 lbf (300 N, 30 kgf) while the engine is running

Steering

Free play	Less than 1.2 in. (30 mm)
-----------	---------------------------

^{*2:} Parking brake lever travel when pulled up with a force of 45 lbf (200 N, 20 kgf)

Tires and wheels

Standard

Tire size	195/60R16 89H
Front and rear tire inflation pressure (Recommended cold tire inflation pressure)	Driving under normal conditions Front: 33 psi (230 kPa, 2.3 kgf/cm ² or bar) Rear: 33 psi (230 kPa, 2.3 kgf/cm ² or bar)
Wheel size	16 × 6J
Wheel nut torque	76 ft•lbf (103 N•m, 10.5 kgf•m)

Spare

Tire size	T135/70D16 100M
Tire inflation pressure (Recommended cold tire inflation pressure)	60 psi (420 kPa, 4.2 kgf/cm ² or bar)
Wheel size	16 × 4T
Wheel nut torque	76 ft•lbf (103 N•m, 10.5 kgf•m)

6-1. Specifications

Light bulbs

	Light Bulbs	Bulb No.	W	Туре
Exterior	Headlights	_	60/55	Α
	Front turn signal lights	7440	21	В
	Parking lights	_	5	В
	Front side marker lights		5	В
	Rear turn signal lights	7440	21	С
	Stop/tail lights and rear side marker lights	7443	21/5	В
	Back-up lights	921	16	В
	Licence plate lights		5	В
Interior	Personal lights	_	8	D
	Interior lights	_	8	D
	Luggage compartment light	_	5	D

A: H2 halogen bulbs B: Wedge base bulbs (clear)

C: Wedge base bulbs (amber) D: Double end bulbs

6-1. Specifications

Fuel information

You must only use unleaded gasoline in your vehicle.

Select octane rating 87 (Research Octane Number 91) or higher. Use of unleaded gasoline with an octane rating lower than 87 may result in engine knocking. Persistent knocking can lead to engine damage.

At minimum, the gasoline you use should meet the specifications of ASTM D4814 in the U.S.A. and CGSB3.5-M93 in Canada.

■ Fuel tank opening for unleaded gasoline

To help prevent incorrect fueling, your Scion has a fuel tank opening that only accommodates the special nozzle on unleaded fuel pumps.

■ Gasoline quality

In very few cases, driveability problems may be caused by the brand of gasoline you are using. If driveability problems persist, try changing the brand of gasoline. If this does not correct the problem, consult your Scion dealer.

■ Gasoline quality standards

- Automotive manufacturers in the U.S.A., the Europe and Japan have developed a specification for fuel quality called World-Wide Fuel Charter (WWFC), which is expected to be applied worldwide.
- The WWFC consists of four categories that are based on required emission levels. In the U.S., category 4 has been adopted.
- The WWFC improves air quality by lowering emissions in vehicle fleets, and improves customer satisfaction through better performance.

■ Recommendation of the use of gasoline containing detergent additives


- Scion recommends the use of gasoline that contains detergent additives to avoid build-up of engine deposits.
- All gasoline sold in the U.S.A. contains minimum detergent additives to clean and/or keep clean intake systems, per EPA's lowest additives concentration program.
- Scion strongly recommends the use of Top Tier Detergent Gasoline. For more information on Top Tier Detergent Gasoline and a list of marketers, please go to the official website www.toptiergas.com.

■ Recommendation of the use of cleaner burning gasoline

Cleaner burning gasoline, including reformulated gasoline that contains oxygenates such as ethanol or MTBE (Methyl Tertiary Butyl Ether) is available in many areas.

Scion recommends the use of cleaner burning gasoline and appropriately blended reformulated gasoline. These types of gasoline provide excellent vehicle performance, reduce vehicle emissions and improve air quality.

■ Non-recommendation of the use of blended gasoline

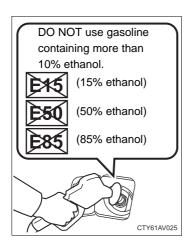

- Use only gasoline containing a maximum of 10% ethanol.
 - DO NOT use any flex-fuel or gasoline that could contain more than 10% ethanol, including from any pump labeled E15, E30, E50, E85 (which are only some examples of fuel containing more than 10% ethanol).
- If you use gasohol in your vehicle, be sure that it has an octane rating no lower than 87.
- Scion does not recommend the use of gasoline containing methanol.

■ Non-recommendation of the use of gasoline containing MMT

Some gasoline contains octane enhancing additive called MMT (Methylcy-clopentadienyl Manganese Tricarbonyl).

Scion does not recommend the use of gasoline that contains MMT. If fuel containing MMT is used, your emission control system may be adversely affected.

The malfunction indicator lamp on the instrument cluster may come on. If this happens, contact your Scion dealer for service.

■ If your engine knocks

- Consult your Scion dealer.
- You may occasionally notice light knocking for a short time while accelerating or driving uphill. This is normal and there is no need for concern.

Λ

NOTICE

Notice on fuel quality

- Do not use improper fuels. If improper fuels are used, the engine will be damaged.
- Do not use leaded gasoline.
 Leaded gasoline can cause damage to your vehicle's three-way catalytic converters causing the emission control system to malfunction.
- Do not use gasohol other than the type previously stated.
 Other gasohol may cause fuel system damage or vehicle performance problems.
- Using unleaded gasoline with an octane number or rating lower than the level previously stated will cause persistent heavy knocking.
 At worst, this will lead to engine damage.

Fuel-related poor driveability


If poor driveability is encountered after using a different type of fuel (poor hot starting, vaporization, engine knocking, etc.), discontinue the use of that type of fuel.

When refueling with gasohol

Take care not to spill gasohol. It can damage your vehicle's paint.

6-1. Specifications

Tire information

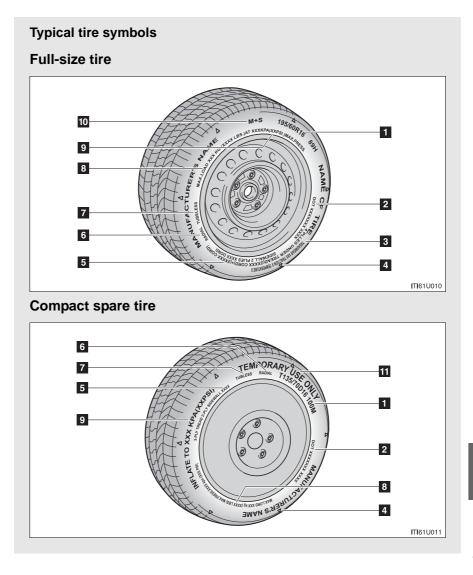

6

Vehicle specifications

6-1. Specifications

1 Tire size (→P. 368)

2 DOT and Tire Identification Number (TIN) (→P. 367)

Uniform tire quality grading For details, see "Uniform Tire Quality Grading" that follows.

4 Location of treadwear indicators (→P. 252)

5 Tire ply composition and materials

Plies are layers of rubber-coated parallel cords. Cords are the strands which form the plies in a tire.

6 Radial tires or bias-ply tires

A radial tire has "RADIAL" on the sidewall. A tire not marked "RADIAL" is a bias-ply tire.

TUBELESS or TUBE TYPE

A tubeless tire does not have a tube and air is directly put into the tire. A tube type tire has a tube inside the tire and the tube maintains the air pressure.

8 Load limit at maximum cold tire inflation pressure

(→P. 255)

Maximum cold tire inflation pressure

(→P. 359)


This means the pressure to which a tire may be inflated.

 \square Summer tires or all season tires (\rightarrow P. 256)

An all season tire has "M+S" on the sidewall. A tire not marked "M+S" is a summer tire.

A compact spare tire is identified by the phrase "TEMPORARY USE ONLY" molded on its sidewall. This tire is designed for temporary emergency use only.

Typical DOT and Tire Identification Number (TIN)

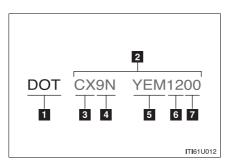


- DOT symbol*
- Tire Identification Number (TIN)
- Tire manufacturer's identification mark
- 4 Tire size code
- Manufacturer's optional tire type code (3 or 4 letters)
- 6 Manufacturing week
- 7 Manufacturing year
- *: The DOT symbol certifies that the tire conforms to applicable Federal Motor Vehicle Safety Standards.

6-1. Specifications

Tire size


■ Typical tire size information

The illustration indicates typical tire size.

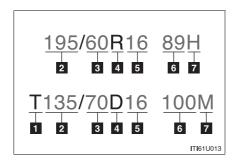


- Tire use (P = Passenger car, T = Temporary use)
- Section width (millimeters)
- Aspect ratio (tire height to section width)
- Tire construction code
 (R = Radial, D = Diagonal)
- 5 Wheel diameter (inches)
- 6 Load index (2 or 3 digits)
- Speed symbol (alphabet with one letter)

■ Tire dimensions

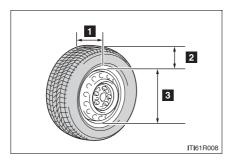

- Section width
- 2 Tire height
- 3 Wheel diameter

368

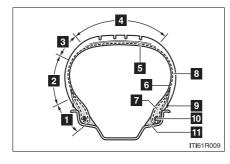

- 1 Bead
- 2 Sidewall
- 3 Shoulder
- 4 Tread
- 5 Belt
- 6 Inner liner
- 7 Reinforcing rubber
- 8 Carcass
- 9 Rim lines
- 10 Bead wires
- 11 Chafer

Uniform Tire Quality Grading

This information has been prepared in accordance with regulations issued by the National Highway Traffic Safety Administration of the U.S. Department of Transportation.

It provides the purchasers and/or prospective purchasers of Scion vehicles with information on uniform tire quality grading.

Your Scion dealer will help answer any questions you may have as you read this information.

■ DOT quality grades

All passenger vehicle tires must conform to Federal Safety Requirements in addition to these grades. Quality grades can be found where applicable on the tire sidewall between tread shoulder and maximum section width.

For example: Treadwear 200 Traction AA Temperature A

■ Treadwear

The treadwear grade is a comparative rating based on the wear rate of the tire when tested under controlled conditions on a specified government test course.

For example, a tire graded 150 would wear one and a half (1-1/2) times as well on the government course as a tire graded 100.

The relative performance of tires depends upon the actual conditions of their use. Performance may differ significantly from the norm due to variations in driving habits, service practices and differences in road characteristics and climate.

■ Traction AA, A, B, C

The traction grades, from highest to lowest, are AA, A, B and C, and they represent the tire's ability to stop on wet pavement as measured under controlled conditions on specified government test surfaces of asphalt and concrete.

A tire marked C may have poor traction performance.

Warning: The traction grade assigned to this tire is based on braking (straight ahead) traction tests and does not include cornering (turning) traction.

■ Temperature A, B, C

The temperature grades are A (the highest), B, and C, representing the tire's resistance to the generation of heat and its ability to dissipate heat when tested under controlled conditions on a specified indoor laboratory test wheel.

Sustained high temperature can cause the material of the tire to degenerate and reduce tire life, and excessive temperature can lead to sudden tire failure.

Grade C corresponds to a level of performance which all passenger car tires must meet under the Federal Motor Vehicle Safety Standard No.109.

Grades B and A represent higher levels of performance on the laboratory test wheel than the minimum required by law.

Warning: The temperature grades of a tire assume that is properly inflated and not overloaded.

Excessive speed, underinflation, or excessive loading, either separately or in combination, can cause heat buildup and possible tire failure.

Glossary of tire terminology

Tire related term	Meaning
Cold tire inflation pressure	Tire pressure when the vehicle has been parked for three hours or more, or has not been driven more than 1 mile or 1.5 km under that condition
Maximum inflation pressure	The maximum cold inflated pressure to which a tire may be inflated, shown on the sidewall of the tire
Recommended inflation pressure	Cold tire inflation pressure recommended by a manufacturer
Accessory weight	The combined weight (in excess of those standard items which may be replaced) of automatic transmission, power steering, power brakes, power windows, power seats, radio and heater, to the extent that these items are available as factory-installed equipment (whether installed or not)
Curb weight	The weight of a motor vehicle with standard equipment, including the maximum capacity of fuel, oil and coolant, and if so equipped, air conditioning and additional weight optional engine

Tire related term	Meaning
Maximum loaded vehi- cle weight	The sum of: (a) Curb weight (b) Accessory weight (c) Vehicle capacity weight (d) Production options weight
Normal occupant weight	150 lb. (68 kg) times the number of occupants specified in the second column of Table 1* that follows
Occupant distribution	Distribution of occupants in a vehicle as specified in the third column of Table 1* below
Production options weight	The combined weight of installed regular production options weighing over 5 lb. (2.3 kg) in excess of the standard items which they replace, not previously considered in curb weight or accessory weight, including heavy duty brakes, ride levelers, roof rack, heavy duty battery, and special trim
Rim	A metal support for a tire or a tire and tube assembly upon which the tire beads are seated
Rim diameter (Wheel diameter)	Nominal diameter of the bead seat
Rim size designation	Rim diameter and width
Rim type designation	The industry manufacturer's designation for a rim by style or code
Rim width	Nominal distance between rim flanges

Vehicle capacity weight (Total load capacity) The rated cargo and luggage load plus 150 lb. (68 kg) times the vehicle's designated seating capacity The load on an individual tire that is determined by distributing to each axle its share of the maximum loaded vehicle weight, and dividing by two The load on an individual tire that is determined by distributing to each axle its share of curb weight, accessory weight, and normal occu- pant weight (distributed in accordance with Table 1* below), and dividing by two Weather side The part of the tire that is made of steel wires, wrapped or reinforced by ply cords and that is shaped to fit the rim Bead separation A breakdown of the bond between components in the bead A pneumatic tire in which the ply cords that extend to the beads are laid at alternate angles substantially less than 90 degrees to the cen- terline of the tread Carcass The tire structure, except tread and sidewall rubber which, when inflated, bears the load The breaking away of pieces of the tread or sidewall Cord The parting of cords from adjacent rubber com- pounds	Tire related term	Meaning
Vehicle maximum load on the tire by distributing to each axle its share of the maximum loaded vehicle weight, and dividing by two Vehicle normal load on the tire The load on an individual tire that is determined by distributing to each axle its share of curb weight, accessory weight, and normal occupant weight (distributed in accordance with Table 1* below), and dividing by two Weather side The surface area of the rim not covered by the inflated tire Bead The part of the tire that is made of steel wires, wrapped or reinforced by ply cords and that is shaped to fit the rim Bead separation A breakdown of the bond between components in the bead Bias ply tire A pneumatic tire in which the ply cords that extend to the beads are laid at alternate angles substantially less than 90 degrees to the centerline of the tread Carcass The tire structure, except tread and sidewall rubber which, when inflated, bears the load Chunking The breaking away of pieces of the tread or sidewall Cord The strands forming the plies in the tire Cord The parting of cords from adjacent rubber com-	weight (Total load	(68 kg) times the vehicle's designated seating
Vehicle normal load on the tire by distributing to each axle its share of curb weight, accessory weight, and normal occupant weight (distributed in accordance with Table 1* below), and dividing by two Weather side The surface area of the rim not covered by the inflated tire The part of the tire that is made of steel wires, wrapped or reinforced by ply cords and that is shaped to fit the rim A breakdown of the bond between components in the bead A pneumatic tire in which the ply cords that extend to the beads are laid at alternate angles substantially less than 90 degrees to the centerline of the tread Carcass The tire structure, except tread and sidewall rubber which, when inflated, bears the load Chunking The breaking away of pieces of the tread or sidewall The strands forming the plies in the tire The parting of cords from adjacent rubber com-		by distributing to each axle its share of the maximum loaded vehicle weight, and dividing
inflated tire The part of the tire that is made of steel wires, wrapped or reinforced by ply cords and that is shaped to fit the rim Bead separation A breakdown of the bond between components in the bead A pneumatic tire in which the ply cords that extend to the beads are laid at alternate angles substantially less than 90 degrees to the centerline of the tread Carcass The tire structure, except tread and sidewall rubber which, when inflated, bears the load Chunking The breaking away of pieces of the tread or sidewall Cord The strands forming the plies in the tire The parting of cords from adjacent rubber com-		by distributing to each axle its share of curb weight, accessory weight, and normal occupant weight (distributed in accordance with
Bead wrapped or reinforced by ply cords and that is shaped to fit the rim Bead separation A breakdown of the bond between components in the bead A pneumatic tire in which the ply cords that extend to the beads are laid at alternate angles substantially less than 90 degrees to the centerline of the tread Carcass The tire structure, except tread and sidewall rubber which, when inflated, bears the load Chunking The breaking away of pieces of the tread or sidewall Cord The strands forming the plies in the tire The parting of cords from adjacent rubber com-	Weather side	· · · · · · · · · · · · · · · · · · ·
Bias ply tire A pneumatic tire in which the ply cords that extend to the beads are laid at alternate angles substantially less than 90 degrees to the centerline of the tread Carcass The tire structure, except tread and sidewall rubber which, when inflated, bears the load Chunking The breaking away of pieces of the tread or sidewall Cord The strands forming the plies in the tire The parting of cords from adjacent rubber com-	Bead	wrapped or reinforced by ply cords and that is
Bias ply tire extend to the beads are laid at alternate angles substantially less than 90 degrees to the centerline of the tread Carcass The tire structure, except tread and sidewall rubber which, when inflated, bears the load Chunking The breaking away of pieces of the tread or sidewall Cord The strands forming the plies in the tire The parting of cords from adjacent rubber com-	Bead separation	·
Chunking The breaking away of pieces of the tread or sidewall Cord The strands forming the plies in the tire Cord separation The parting of cords from adjacent rubber com-	Bias ply tire	extend to the beads are laid at alternate angles substantially less than 90 degrees to the cen-
Cord separation sidewall Cord separation The parting of cords from adjacent rubber com-	Carcass	•
Cord separation The parting of cords from adjacent rubber com-	Chunking	
Com senaration	Cord	The strands forming the plies in the tire
Pouriso	Cord separation	The parting of cords from adjacent rubber compounds

Tire related term	Meaning		
Cracking	Any parting within the tread, sidewall, or inner- liner of the tire extending to cord material		
СТ	A pneumatic tire with an inverted flange tire and rim system in which the rim is designed with rim flanges pointed radially inward and the tire is designed to fit on the underside of the rim in a manner that encloses the rim flanges inside the air cavity of the tire		
Extra load tire	A tire designed to operate at higher loads and at higher inflation pressures than the corresponding standard tire		
Groove	The space between two adjacent tread ribs		
Innerliner	The layer(s) forming the inside surface of a tubeless tire that contains the inflating medium within the tire		
Innerliner separation	The parting of the innerliner from cord material in the carcass		
Intended outboard sidewall	 (a) The sidewall that contains a whitewall, bears white lettering, or bears manufacturer, brand, and/or model name molding that is higher or deeper than the same molding on the other sidewall of the tire, or (b) The outward facing sidewall of an asymmetrical tire that has a particular side that must always face outward when mounted on a vehicle 		
Light truck (LT) tire	A tire designated by its manufacturer as prima- rily intended for use on lightweight trucks or multipurpose passenger vehicles		
Load rating	The maximum load that a tire is rated to carry for a given inflation pressure		

Tire related term	Meaning
Maximum load rating	The load rating for a tire at the maximum permissible inflation pressure for that tire
Maximum permissible inflation pressure	The maximum cold inflation pressure to which a tire may be inflated
Measuring rim	The rim on which a tire is fitted for physical dimension requirements
Open splice	Any parting at any junction of tread, sidewall, or innerliner that extends to cord material
Outer diameter	The overall diameter of an inflated new tire
Overall width	The linear distance between the exteriors of the sidewalls of an inflated tire, including elevations due to labeling, decorations, or protective bands or ribs
Passenger car tire	A tire intended for use on passenger cars, multipurpose passenger vehicles, and trucks, that have a gross vehicle weight rating (GVWR) of 10,000 lb. or less.
Ply	A layer of rubber-coated parallel cords
Ply separation	A parting of rubber compound between adjacent plies
Pneumatic tire	A mechanical device made of rubber, chemicals, fabric and steel or other materials, that, when mounted on an automotive wheel, provides the traction and contains the gas or fluid that sustains the load

Tire related term	Meaning
Radial ply tire	A pneumatic tire in which the ply cords that extend to the beads are laid at substantially 90 degrees to the centerline of the tread
Reinforced tire	A tire designed to operate at higher loads and at higher inflation pressures than the corresponding standard tire
Section width	The linear distance between the exteriors of the sidewalls of an inflated tire, excluding ele- vations due to labeling, decoration, or protec- tive bands
Sidewall	That portion of a tire between the tread and bead
Sidewall separation	The parting of the rubber compound from the cord material in the sidewall
Snow tire	A tire that attains a traction index equal to or greater than 110, compared to the ASTM E-1136 Standard Reference Test Tire, when using the snow traction test as described in ASTM F-1805-00, Standard Test Method for Single Wheel Driving Traction in a Straight Line on Snow-and Ice-Covered Surfaces, and which
	is marked with an Alpine Symbol () on at least one sidewall
Test rim	The rim on which a tire is fitted for testing, and may be any rim listed as appropriate for use with that tire
Tread	That portion of a tire that comes into contact with the road

Tire related term	Meaning
Tread rib	A tread section running circumferentially around a tire
Tread separation	Pulling away of the tread from the tire carcass
Treadwear indicators (TWI)	The projections within the principal grooves designed to give a visual indication of the degrees of wear of the tread
Wheel-holding fixture	The fixture used to hold the wheel and tire assembly securely during testing
*	

*: Table 1 — Occupant loading and distribution for vehicle normal load for various designated seating capacities

Designated seating capacity, Number of occupants	Vehicle normal load, Number of occupants	Occupant distribution in a normally loaded vehicle
2 through 4	2	2 in front
5 through 10	3	2 in front, 1 in second seat
11 through 15	5	2 in front, 1 in second seat, 1 in third seat, 1 in fourth seat
16 through 20	7	2 in front, 2 in second seat, 2 in third seat, 1 in fourth seat

6-2. Customization **Customizable features**

Your vehicle includes a variety of electronic features that can be personalized to your preferences. Programming these preferences requires specialized equipment and may be performed by your Scion dealer.

Some function settings are changed simultaneously with other functions being customized. Contact your Scion dealer.

Item	Function	Default setting	Customized setting
	Wireless remote control	On	Off
	Unlocking operation	Driver's door unlocked in one step, all doors unlocked in two steps	All doors unlocked in one step
	Automatic door lock function to be activated if door is not opened after being unlocked	On	Off
Wireless remote control (→P. 26)	Time elapsed before automatic door lock function is activated if	60 seconds	30 seconds
, ,	door is not opened after being unlocked		120 seconds
	Operation signal (Emergency flashers)	On	Off
	Operation signal (Buzzer)	On	Off
	Open door reminder buzzer (When locking the vehicle)	On	Off
	Panic function	On	Off

Customized

setting 7.5 seconds

30 seconds

Off

Off

Default setting

15 seconds

On

On

Function

Time elapsed before

Operation when the

doors are unlocked Operation after the engine switch is turned

to the "LOCK" position

lights turn off

Item

Illumination

(→P. 197)

	<	<	
	(Ď	
	Ξ	3	
	₹	5	•
	Ō	D	
	c	2	
•	τ	3	
	g	D	
	c)	
	Ξ	7	١
	7	5	•
	ģ	٥	
	5	1	
	ō)	

379

6-3. Initialization Items to initialize

The following items must be initialized for normal system operation in cases such as after maintenance is performed on the vehicle.

Item	When to initialize	Reference
Maintenance data (U.S.A. only)	After the maintenance is performed	P. 223
Tire pressure warning system	When changing the tire size	P. 253

For owners	7		
	for Seat for (in l SRS for	orting safety defects U.S. owners belt instructions Canadian owners French) airbag instructions Canadian owners French)	383
			381

Reporting safety defects for U.S. owners

If you believe that your vehicle has a defect which could cause a crash or could cause injury or death, you should immediately inform the National Highway Traffic Safety Administration (NHTSA) in addition to notifying Scion, a marque of Toyota Motor Sales, U.S.A., Inc. (Toll-free: 1-866-707-2466).

If NHTSA receives similar complaints, it may open an investigation, and if it finds that a safety defect exists in a group of vehicles, it may order a recall and remedy campaign. However, NHTSA cannot become involved in individual problems between you, your dealer, or Scion, a marque of Toyota Motor Sales, U.S.A., Inc.


To contact NHTSA, you may call the Vehicle Safety Hotline toll-free at 1-888-327-4236 (TTY: 1-800-424-9153); go to http://www.safercar.gov; or write to: Administrator, NHTSA, 1200 New Jersey Ave, S.E., Washington, DC 20590. You can also obtain other information about motor vehicle safety from http://www.safercar.gov.

Seat belt instructions for Canadian owners (in French)

The following is a French explanation of seat belt instructions extracted from the seat belt section in this manual.

See the seat belt section for more detailed seat belt instructions in English.

Utilisation adéquate des ceintures de sécurité

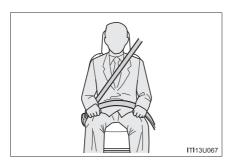


- Tirez sur la ceinture épaulière jusqu'à ce qu'elle recouvre entièrement l'épaule; elle ne doit cependant pas toucher le cou ni glisser de l'épaule.
- Placez la ceinture abdominale le plus bas possible sur les hanches.
- Réglez la position du dossier.
 Tenez-vous assis bien au fond du siège, le dos droit.
- Ne vrillez pas la ceinture de sécurité.

7


- CW

Guide des ceintures de sécurité (siège arrière central)


Si la ceinture épaulière est trop près du cou d'une personne, utilisez le guide de la ceinture de sécurité.

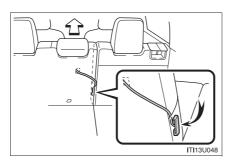

Le guide de ceinture de sécurité se trouve dans la pochette située sur le côté droit du siège arrière gauche.

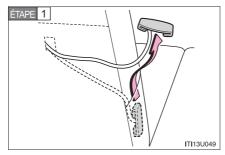


Retirez le guide de la pochette.

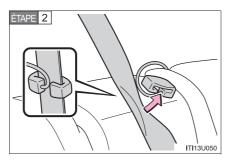

Faites glisser la ceinture au-delà de la fente du guide.

L'élastique doit être placé derrière la ceinture de sécurité.

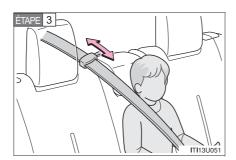

Bouclez la ceinture de sécurité et placez-la afin de ne pas ressentir d'inconfort.

Entretien et soin

■ Ceintures de sécurité

Avec un chiffon ou une éponge, nettoyez à l'aide d'un savon doux et de l'eau tiède. Vérifiez aussi les ceintures régulièrement pour vous assurer qu'elles ne présentent pas d'usure excessive, d'effilochage ou de coupures.


A ATTENTION

Dommages et usure de la ceinture de sécurité

Vérifiez périodiquement le système de ceintures de sécurité. Assurez-vous qu'il n'y a pas de coupures, d'effilochures ni de pièces desserrées. N'utilisez pas une ceinture de sécurité endommagée avant qu'elle soit remplacée. Les ceintures de sécurité endommagées ne peuvent pas protéger les occupants contre les blessures graves, voire mortelles.

SRS airbag instructions for Canadian owners (in French)

Les coussins gonflables SRS se déploient lorsque le véhicule subit certains types d'impacts violents pouvant blesser gravement les passagers. Ils fonctionnent de concert avec les ceintures de sécurité afin de réduire les risques de blessures graves, voire mortelles.

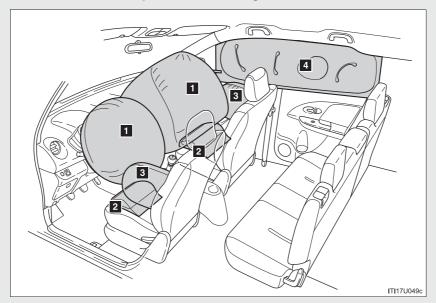

Coussins gonflables SRS avant

- Coussin gonflable SRS du conducteur/du passager avant Peuvent aider à protéger la tête et la poitrine du conducteur et du passager avant contre les impacts avec des composants intérieurs
- Coussins gonflables SRS des coussins de siège Peuvent aider à retenir les occupants des sièges avant

Coussins gonflables SRS latéraux et en rideau

- Coussins gonflables SRS latéraux avant Peuvent aider à protéger le torse des occupants des sièges avant
- 4 Coussins gonflables SRS en rideau Peuvent aider à protéger principalement la tête des occupants des sièges latéraux

386

Composants du système de coussins gonflables SRS

5 8

- Capteurs de choc avant
- 2 Système de classification de l'occupant du siège du passager avant (ECU et capteurs)
- 3 Capteur de coussin gonflable latéral (avant)
- 4 Coussin gonflable du passager avant
- **5** Coussins gonflables en rideau
- Voyants "AIR BAG ON" et "AIR BAG OFF"
- Dispositifs de tension des ceintures
- 8 Coussins gonflables latéraux
- Goussin gonflable du coussin de siège du passager avant

- **11** Capteur de coussin gonflable latéral (arrière)
- Lampe témoin SRS
- Contacteur de boucle de ceinture de sécurité du passager avant
- Coussin gonflable du coussin de siège du conducteur
- Contacteur de boucle de ceinture de sécurité du conducteur
- 17 Module de capteur de coussin gonflable

For ow

387

Votre véhicule est doté de COUSSINS GONFLABLES ÉVOLUÉS dont la conception s'appuie sur les normes de sécurité des véhicules à moteur américains (FMVSS208). Le module de capteur de coussin gonflable (ECU) contrôle le déploiement des coussins gonflables en fonction des informations obtenues des capteurs et d'autres éléments affichés dans le diagramme des composants du système cidessus. Ces informations comprennent des données relatives à la gravité de l'impact et aux passagers. Au moment du déploiement des coussins gonflables, une réaction chimique se produit dans les gonfleurs et les coussins gonflables se remplissent rapidement d'un gaz non toxique pour aider à limiter le mouvement des occupants.

■Précautions relatives aux coussins gonflables SRS

Observez les précautions suivantes en ce qui concerne les coussins gonflables SRS.

Les négliger pourrait occasionner des blessures graves, voire mortelles.

- Le conducteur et tous les passagers du véhicule doivent porter leur ceinture de sécurité de la manière appropriée.
 Les coussins gonflables SRS sont des dispositifs supplémentaires qui doivent être utilisés de concert avec les ceintures de sécurité.
- Le coussin gonflable SRS du conducteur se déploie avec une force considérable et peut occasionner des blessures graves, voire mortelles, notamment lorsque le conducteur se trouve très près du coussin gonflable.
 La National Highway Traffic Safety Administration (NHTSA), aux États-Unis, donne les recommandations suivantes:

La zone à risque d'un coussin gonflable côté conducteur couvre 2 à 3 in. (50 à 75 mm) de la zone de déploiement du coussin gonflable. Pour assurer une marge de sécurité suffisante, restez à 10 in. (250 mm) du coussin gonflable. Cette distance est mesurée depuis le centre du volant jusqu'à votre sternum. Si vous vous tenez à moins de 10 in. (250 mm), vous pouvez changer votre position de conduite de plusieurs manières:

- Reculez votre siège à la position maximale vous permettant d'atteindre encore aisément les pédales.
- Inclinez légèrement le dossier du siège. Même si les véhicules sont conçus différemment, la plupart des conducteurs peuvent maintenir une distance de 10 in. (250 mm), même si le siège se trouve complètement vers l'avant, simplement en inclinant un peu le dossier du siège vers l'arrière. Si la visibilité avant est moindre après avoir incliné le dossier du siège, utilisez un coussin ferme et non glissant pour être assis plus haut ou relevez le siège si cette option est disponible sur votre véhicule.
- Si votre volant est réglable en hauteur, inclinez-le vers le bas. Cela vous permet d'orienter le coussin gonflable vers votre buste plutôt que vers la tête et vers le cou.


Le siège doit être réglé de la manière recommandée ci-dessus par la NHTSA, tout en gardant le contrôle des pédales et du volant, et la vue sur les commandes du bloc d'instrumentation.

■ Précautions relatives aux coussins gonflables SRS



- Si la rallonge de ceinture de sécurité a été reliée à la boucle de ceinture de sécurité du conducteur sans avoir également été attachée à la plaque de blocage de la ceinture de sécurité du conducteur, les coussins gonflables SRS avant du conducteur considéreront que le conducteur porte tout de même sa ceinture même si elle n'est pas attachée. Les coussins gonflables SRS avant du conducteur peuvent alors ne pas s'activer correctement lors d'une collision, occasionnant des blessures graves, voire mortelles en cas de collision. Bouclez toujours votre ceinture de sécurité lorsque vous utilisez la rallonge.
- Le coussin gonflable SRS du passager avant se déploie également avec une force considérable et peut occasionner des blessures graves, voire mortelles, notamment lorsque le passager avant se trouve très près du coussin gonflable. Le siège du passager avant doit se trouver le plus loin possible du coussin gonflable et le dossier doit être réglé de manière à ce que le passager avant soit assis bien droit.
- Le déploiement d'un coussin gonflable risque d'infliger des blessures graves, voire mortelles, aux bébés et aux enfants mal assis ou mal attachés. Un bébé ou un enfant trop petit pour utiliser une ceinture de sécurité doit être correctement retenu à l'aide d'un dispositif de retenue pour enfants. Scion recommande vivement d'installer et d'attacher correctement les bébés et les enfants sur les sièges arrière du véhicule à l'aide d'un système de retenue adapté. Les sièges arrière sont plus sécuritaires pour les bébés et les enfants que le siège du passager avant.
- N'installez jamais un dispositif de retenue pour enfants de type dos à la route sur le siège du passager avant, même si la lampe témoin "AIR BAG OFF" est allumée. En cas d'accident, la force et la vitesse de déploiement du coussin gonflable du passager avant sont telles qu'elles pourraient infliger à l'enfant des blessures graves, voire mortelles, si le dispositif de retenue pour enfants du type dos à la route était installé sur le siège du passager avant.


■ Précautions relatives aux coussins gonflables SRS

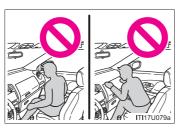

 Ne vous asseyez pas sur le bord du siège et ne vous appuyez pas sur le tableau de bord.



 Ne laissez pas un enfant se tenir face au coussin gonflable SRS du passager avant ni s'asseoir sur les genoux d'un passager avant.

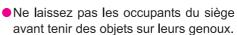



 Ne vous appuyez pas sur la portière ou sur le longeron du toit, ni sur les montants avant, latéraux ou arrière.



 Ne laissez personne s'agenouiller face à la portière sur le siège du passager ni sortir la tête ou les mains à l'extérieur du véhicule.

■ Précautions relatives aux coussins gonflables SRS



- Ne fixez et ne déposez rien sur des endroits tels que le tableau de bord ou le tampon de volant.
 - Ces objets peuvent se transformer en projectiles lorsque les coussins gonflables SRS du conducteur ou du passager avant se déploient.
- Ne fixez rien sur les portières, le parebrise, les glaces latérales, les montants avant ou arrière, le brancard de pavillon ou la poignée de maintien.



- N'accrochez pas de cintres ni d'autres objets rigides sur les crochets porte-vêtements. Tous ces objets pourraient se transformer en projectiles et vous occasionner des blessures graves, voire mortelles, en cas de déploiement des coussins gonflables SRS en rideau.
- N'utilisez pas d'accessoires recouvrant les parties du siège où les coussins gonflables SRS latéraux et les coussins gonflables SRS des coussins de siège se déploient, car ces accessoires pourraient nuire au déploiement des coussins SRS. De tels accessoires peuvent empêcher les coussins gonflables latéraux et les coussins gonflables des coussins de siège de se déployer correctement, rendre le système inopérant ou provoquer accidentellement le déploiement des coussins gonflables latéraux et des coussins gonflables des coussins de siège, occasionnant des blessures graves, voire mortelles.
- Ne frappez pas et n'appliquez pas une pression importante à l'emplacement des composants de coussins gonflables SRS. Vous risqueriez de provoquer un mauvais fonctionnement des coussins gonflables SRS.
- Ne touchez à aucun composant des coussins gonflables SRS immédiatement après leur déploiement (gonflage), car ils pourraient être chauds.


■ Précautions relatives aux coussins gonflables SRS

- Si vous avez de la difficulté à respirer après le déploiement des coussins gonflables SRS, ouvrez une portière ou une glace pour laisser entrer l'air, ou quittez le véhicule si vous pouvez le faire en toute sécurité. Dès que possible, nettoyez tous les résidus afin d'éviter les irritations cutanées.
- Si les emplacements de stockage des coussins gonflables SRS, notamment le tampon de volant et les garnitures des montants avant et arrière, sont endommagés ou fissurés, faites-les remplacer par votre concessionnaire Scion.

Modification et mise au rebut des composants du système de coussins gonflables SRS

Ne mettez pas le véhicule au rebut et n'effectuez aucune des modifications suivantes sans d'abord consulter votre concessionnaire Scion. Les coussins gonflables SRS pourraient fonctionner de manière incorrecte ou se déployer (gonfler) accidentellement, ce qui serait susceptible d'occasionner des blessures graves, voire mortelles.

- Installation, retrait, démontage et réparation des coussins gonflables SRS
- Réparations, modifications, retrait ou remplacement du volant, du bloc d'instrumentation, du tableau de bord, des sièges ou du capitonnage des sièges, des montants avant, latéraux ou arrière et des longerons du toit
- Réparations ou modifications de l'aile ou du pare-chocs avant, ou du côté de l'habitacle
- Installation d'une protection de calandre (barre safari, barre kangourou, etc.), de lames de déneigement ou de treuils.
- Modifications du système de suspension du véhicule
- Installation d'appareils électroniques tels qu'un émetteur-récepteur radio ou un lecteur de CD
- Modifications à votre véhicule pour une personne aux capacités physiques réduites

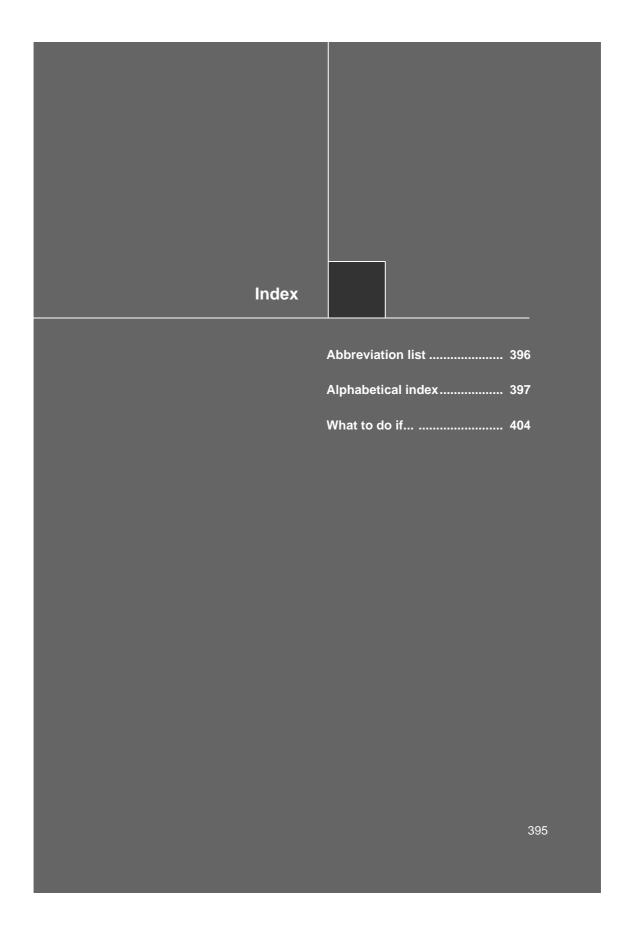

Abbreviation/Acronym list

ABBREVIATIONS	MEANING
A/C	Air Conditioning
ABS	Anti-lock Brake System
ACC	Accessory
ALR	Automatic Locking Retractor
CRS	Child Restraint System
DISP	Display
ECU	Electronic Control Unit
EDR	Event Data Recorder
ELR	Emergency Locking Retractor
EPS	Electric Power Steering
GAWR	Gross Axle Weight Rating
GVWR	Gross Vehicle Weight Rating
I/M	Emission inspection and maintenance
LATCH	Lower Anchors and Tethers for Children
LED	Light Emitting Diode
M + S	Mud and Snow
MMT	Methylcyclopentadienyl Manganese Tricarbonyl
MTBE	Methyl Tertiary Butyl Ether
OBD	On Board Diagnostics
SRS	Supplemental Restraint System
TIN	Tire Identification Number
TPMS	Tire Pressure Warning System
TRAC	Traction Control
VIN	Vehicle Identification Number
VSC	Vehicle Stability Control

396

Alphabetical index Alphabetical index

Α	A/C 186, 193
	ABS 164
	Air conditioning filter 268
	Air conditioning system
	Air conditioning filter 268
	Manual air conditioning
	system 186
	Airbags
	Airbag operating conditions 78
	Airbag precautions for your
	child 83
	Airbag warning light 306
	Curtain shield airbag
	operating conditions 78
	Curtain shield airbag
	precautions 83
	Front passenger occupant
	classification system 88
	General airbag precautions 83
	Locations of airbags74
	Modification and disposal of
	airbags87
	Proper driving posture 72, 83
	Seat cushion airbag operating
	conditions78
	Side airbag operating
	conditions78
	Side airbag precautions 83
	SRS airbags74
	Anti-lock brake system 164
	Assist grips 209
	Audio input 194
	Audio system
	Audio input
	AUX port
	Portable music player 194
	Steering wheel audio
	switch195

Automatic transmission	
Automatic transmission	134
If the shift lever cannot be	
shifted from P	333
AUX port	194
Auxiliary boxes	203
Back door	
Back door	34
Wireless remote control	26
Back-up lights	
Replacing light bulbs	284
Wattage	
Battery	
Checking	248
If the vehicle has a	
discharged battery	336
Preparing and checking	
before winter	175
Bottle holder	204
Brake	
Fluid	245
Parking brake	139
Brake assist	164
Break-in tips	119
Brightness control	
Instrument panel light	
control	142

В

С	Care
_	Exterior216
	Interior219
	Seat belts
	Cargo capacity169
	Cargo hooks212
	Chains175
	Child restraint system
	Booster seats, definition95
	Booster seats, installation100
	Convertible seats,
	definition95
	Convertible seats,
	installation100
	Front passenger occupant
	classification system88
	Infant seats, definition95
	Infant seats, installation100
	Installing CRS with lower
	anchorages102
	Installing CRS with
	seat belts104
	Installing CRS with top
	straps109
	Child safety
	Airbag precautions83
	Battery precautions249, 339
	Child restraint system95
	Child-protectors32
	How your child should wear
	the seat belt54
	Installing child restraints100
	Power window lock switch63
	Power window precautions64
	Removed key battery
	precautions272
	Seat belt extender
	precautions58
	Seat belt precautions55

Child-protectors32
Cleaning
Exterior216
Interior219
Seat belts220
Clock207
Condenser245
Cooling system
Engine overheating341
Cruise control159
Cup holders201
Curtain shield airbags74
Customizable features378
Daytime running light
system152
Defogger
Rear window193
Side mirrors193
Dimension350
Dinghy towing181,182
Display
Multi-information display 146
Do-it-yourself maintenance 230
Doors
Back door34
Door glasses63
Door lock26, 30
Side doors30
Side mirrors61
Driver's seat belt reminder
light308
Driving
Correct posture72
Procedures 116

D

398

Е	Electric power steering 164
	Emergency, in case of
	If the back door opener is
	inoperative
	If the engine will not start 332
	If the shift lever cannot be
	shifted from P
	If the vehicle has discharged
	battery 336
	If the warning buzzer
	sounds 304
	If the warning light
	turns on
	If you have a flat tire 318
	If you lose your keys 334
	If you think something is
	wrong 302
	If your vehicle becomes
	stuck
	If your vehicle has to be
	stopped in an emergency 346
	If your vehicle needs to be
	towed
	If your vehicle overheats 341
	Emergency flashers
	Switch
	Engine
	Compartment237
	Engine switch 130
	Hood
	How to start the
	engine 130
	Identification number 351
	If the engine will not start 332
	Ignition switch130
	Overheating341
	Engine coolant
	Capacity 355
	Checking 243
	Preparing and checking
	before winter 175
	Engine immobilizer system 69

	Engine oil	
	Capacity	353
	Checking	238
	Preparing and checking	
	before winter	175
	Engine switch	
	EPS	
	Event data recorder	
F		
	Floor mat	210
	Fluid	
	Brake	_
	Washer	250
	Front passenger occupant	
	classification system	88
	Front passenger's seat belt	
	reminder light	308
	Front seats	
	Adjustment	39
	Front side marker lights	
	Replacing light bulbs	284
	Wattage	360
	Front turn signal lights	
	Replacing light bulbs	284
	Switch	138
	Wattage	360
	Fuel	
	Capacity	352
	Fuel gauge	
	Fuel pump shut off system	
	Gas station information	408
	Information	361
	Refueling	
	Fuel door	
	Fuel filler door	
	Fuel pump shut off system	
	Fuses	
		0

G	Gas station information408 Gauges141	K	Keys Engine switch130
	Glove box200		If you lose your keys334
			Key number24
Н	Head restraints		Keyless entry26
-	Adjusting46		Keys24
	Headlights		Wireless remote control key26
	Replacing light bulbs284		•
	Switch150	L	License plate lights
	Wattage360		Replacing light bulbs284
	Heaters		Wattage360
	Side mirror193		Light bulbs
	Hood233		Replacing284
	Hooks		Wattage360
	Cargo212		Lights
	Horn140		Headlights switch150
			Interior light list197
	I/M test229		Interior light switch198
	Identification		Luggage compartment
	Engine351		light35
	Vehicle350		Personal light switch198
	Ignition switch130		Replacing light bulbs284
	Illuminated entry system197		Turn signal lever138
	Indicator lights143		Wattage360
	Inside rear view mirror60		Load capacity174
	Interior lights		
	Interior lights197	M	Maintenance
	Switch198		Do-it-yourself
	Wattage360		maintenance230
			General maintenance225
J	Jack		Maintenance data350
	Positioning a floor jack235		Maintenance requirements 222
	Vehicle-equipped jack318		Reset the maintenance
	Jack handle318		data223
			Manual air conditioning
			system186
			Manual transmission137
00			

	Meter	R	R
	Instrument panel light		R
	control 142		
	Meters 141		
	Microphone 196		
	Mirrors		R
	Inside rear view mirror 60		
	Side mirror heater 193		
	Side mirrors61		R
	Vanity mirrors 206		
	Multi-information		
	display 146		R
			R
Ν	Noise from under vehicle 16		R
0	Odometer 141		
	Oil		
	Engine oil		
	Opener		
	Back door 34		
	Fuel filler door		R
	Hood233		
	Outside rear view mirrors		
	Adjusting and folding 61	S	S
	Outside temperature		
	display 148		
	Overheating, Engine 341		
Р	Parking brake139		
•	Parking lights		
	Replacing light bulbs 284		
	Switch150		
	Wattage 360		
	Personal lights		
	Personal light 197		
	Switch		
	Wattage 360		
	Power outlet208		
	Power windows		

Radiator245
Rear seats
Adjustment41
Folding down42
Seat adjustment41
Rear side marker lights
Replacing light bulb284
Wattage360
Rear turn signal lights
Replacing light bulbs284
Wattage360
Rear window defogger193
Rear window wiper156
Replacing
Fuses273
Key battery271
Light bulbs284
Tires318
Wireless remote control
battery271
Reporting safety defects for
U.S.A. owners382
U.S.A. owners382
U.S.A. owners382 Seat belts
Seat belts
Seat belts Adjusting the seat belt48 Automatic Locking Retractor53
Seat belts Adjusting the seat belt48 Automatic Locking Retractor53 Child restraint system
Seat belts Adjusting the seat belt48 Automatic Locking Retractor53
Seat belts Adjusting the seat belt48 Automatic Locking Retractor53 Child restraint system installation100 Cleaning and maintaining
Seat belts Adjusting the seat belt
Seat belts Adjusting the seat belt48 Automatic Locking Retractor53 Child restraint system installation100 Cleaning and maintaining
Seat belts Adjusting the seat belt

Seating capacity174
Seats
Adjustment39, 41
Adjustment precautions40, 44
Child seats/child restraint
system installation100
Cleaning219
Head restraint46
Properly sitting in the seat72
Service reminder
indicators143
Shift lever
Automatic transmission134
If the shift lever cannot
be shifted from P333
Manual transmission137
Shift lock system333
Side airbags74
Side marker lights
Replacing light bulbs284
Switch150
Wattage360
Side mirrors
Adjusting and folding61
Side turn signal lights
Wattage360
Spare tire
Inflation pressure261
Storage location318
Spark plug355
Specifications350
Speedometer141
Steering
Column lock release132
Steering wheel
Adjustment59
Audio switches195
Stop lights
Replacing light bulbs284
Wattage360

Storage feature199
Stuck
If the vehicle becomes
stuck344
Sun visors205
Switch
Engine switch130
Ignition switch130
Light switches150
Power door lock switch30
Power window switch63
Rear window wiper and
washer switch156
Tire pressure warning
reset switch252
Window lock switch63
Wiper and washer switch153
Tachometer141
Tail lights
Replacing light bulbs284
Switch150
Wattage360
Theft deterrent system
Engine immobilizer system 69
Theft prevention labels71
Tire inflation pressure261
Tire information
Glossary371
Size368
Tire identification number367
Uniform tire quality
grading369

	Tires
	Chains 175
	Checking 252
	Compact spare tire319
	If you have a flat tire 318
	Inflation pressure 261
	Inflation pressure sensor 253
	Information 365
	Replacing 318
	Rotating tires 252
	Size 359
	Snow tires 175
	Spare tire 318
	Tire pressure warning
	system 252
	Tools
	Total load capacity 174
	Towing
	Dinghy towing 181, 182
	Emergency towing
	Trailer towing
	TRAC
	Traction control
	Trailer towing
	Turn signal lights Replacing light bulbs 284
	Switch
	Wattage
	wattage
V	Valet key 24
_	Vanity mirrors
	Vehicle identification
	number350
	Vehicle stability control 164
	VSC164
W	Warning buzzers
	Brake system 304
	Seat belt reminder 308
	234. 251. 1511

Warning lights	
Anti-lock brake system	306
Brake assist system	306
Brake system	304
Charging system	
Electric power steering syste	em
warning light	307
Electronic engine control	
system	
High coolant temperature	305
Low engine oil pressure	
Low fuel level	308
Low tire pressure	
Low washer fluid	
Malfunction indicator lamp	306
Open door	
Pretensioners	
Seat belt reminder light	308
SRS airbags	
Tire pressure warning light	310
Washer	
Checking	250
	250
Preparing and checking	
Preparing and checking before winter	175
Preparing and checking before winter	175 153
Preparing and checking before winter Switch Washing and waxing	175 153
Preparing and checking before winter Switch Washing and waxing Weight	175 153 216
Preparing and checking before winter Switch Washing and waxing Weight Cargo capacity	175 153 216 169
Preparing and checking before winter Switch Washing and waxing Weight Cargo capacity Load limits	175 153 216 169
Preparing and checking before winter Switch Washing and waxing Weight Cargo capacity Load limits Weight	175 153 216 169 174
Preparing and checking before winter Switch Washing and waxing Weight Cargo capacity Load limits Weight	175 153 216 169 174 350
Preparing and checking before winter Switch Washing and waxing Veight Cargo capacity Load limits Weight Wheels Window glasses	175 153 216 169 174 350 265
Preparing and checking before winter Switch Washing and waxing Veight Cargo capacity Load limits Weight Wheels Window glasses Window lock switch	175 153 216 169 174 350 265
Preparing and checking before winter Switch Washing and waxing Veight Cargo capacity Load limits Weight Wheels Window glasses Windows lock switch	175 153 216 169 174 350 265 63
Preparing and checking before winter Switch Washing and waxing Veight Cargo capacity Load limits Weight Wheels Window glasses Windows lock switch Nindows Power windows	175 153 216 169 174 350 63
Preparing and checking before winter Switch Washing and waxing Veight Cargo capacity Uod limits Wheels Window glasses Window lock switch Windows Power windows Rear window defogger	175 153 216 169 174 350 265 63 63
Preparing and checking before winter Switch	175 153 216 169 174 350 265 63 63 193 153
Preparing and checking before winter Switch Washing and waxing Veight Cargo capacity Load limits Weight Wheels Window glasses Windows Power windows Rear window defogger Windshield wipers	175 153 216 169 174 350 265 63 63 193 153
Preparing and checking before winter Switch Washing and waxing Veight Cargo capacity Load limits Weight Wheels Window glasses Windows Power windows Rear window defogger Washer Windshield wipers Wireless remote control key	175 153 216 169 174 350 265 63 63 153
Preparing and checking before winter Switch Washing and waxing Veight Cargo capacity Load limits Weight Wheels Window glasses Windows Power windows Rear window defogger Windshield wipers	175 153 216 169 174 350 265 63 63 193 153 153

403

What to do if... What to do if...

A tire punctures	P. 318 If you have a flat tire
The engine does not start	P. 332 If the engine will not startP. 69 Engine immobilizer systemP. 336 If the vehicle battery is discharged
The shift lever cannot be moved out	P. 333 If the shift lever cannot be shifted from P
The high engine coolant temperature warning light flashes or comes on Steam can be seen coming from under the hood	P. 341 If your vehicle overheats
The key is lost	P. 334 If you lose your keys
The battery runs out	P. 336 If the vehicle battery is discharged
The doors cannot be locked	P. 30 Side doors P. 34 Back door
The vehicle is stuck in mud or sand	P. 344 If the vehicle becomes stuck


404

A warning light or indicator light comes on




P. 304 If a warning light turns on


■ Instrument cluster

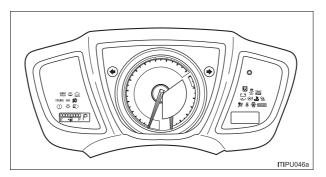

■ Center panel

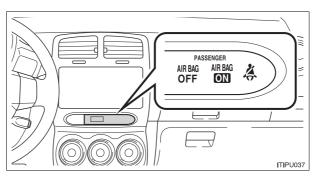

■Warning lights

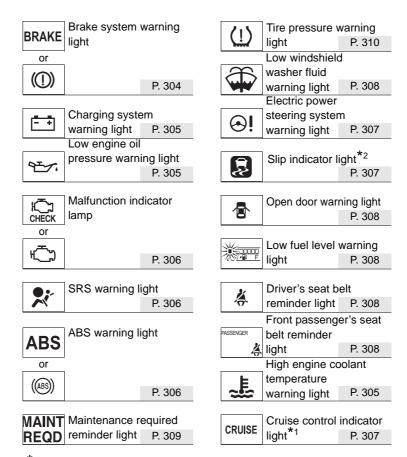

^{*1:} The light flashes to indicate a malfunction.

^{*2:} The light comes on to indicate a malfunction.

What to do if...

